



Orbit Flow 40 Commands

Quick Reference Guide

1 General Commands

Sr No.	Description	Key
1.	HID Braille mode	Thumb key 1 + Thumb key 4 + CR 1
2.	HID Orbit mode	Thumb key 1 + Thumb key 4 + CR 2
3.	Preference Menu	Thumb key 1 + Thumb key 4
4.	BIST mode	Thumb key 1 + Thumb key 4 + CR 40

2 Preference Menu Commands

Sr No.	Description	Key
1.	Open Menu	Thumb key 1 + Thumb key 4
2.	Next Menu Item	Thumb key 4
3.	Previous Menu Item	Thumb key 1
4.	Exit and save the menu settings	Home key
5.	Move to the previous menu choice for current item	Thumb key 2
6.	Move to the Next menu choice for current item	Thumb key 3

3 HID Braille Commands

Sr No.	Description	Key
1.	Braille pan left	Thumb key 1 or C2
2.	Braille d-pad up	Thumb key 2
3.	Braille d-pad down	Thumb key 3
4.	Braille pan right	Thumb key 4 or C5
5.	Home command	Home key
6.	Braille rocker up	C1 or C4
7.	Braille rocker down	C3 or C6
8.	Move cursor or route to braille position	Cursor routing keys

4 HID Orbit Commands

Sr No.	Description	Key
1.	Pan backward	Thumb key 1 or C2
2.	D-pad up	Thumb key 2 or C1 or C4

3.	D-pad down	Thumb key 3 or C3 or C6
4.	Pan forward	Thumb key 4 or C5
5.	D-pad center	Home key
6.	Move cursor or route to braille position	Cursor routing keys

5 Miscellaneous Commands

Sr No.	Description	Key
1.	To hardware reset	HW 1.0 → C6 + Thumb Key 3 HW 1.1 or higher → C4 + CR 40
2.	To Upgrade Firmware using USB	HW 1.0 → C6 + C2 + Thumb Key 3 HW 1.1 or higher → C4 + Thumb Key 4 + CR 40