



Orbit Speak™ User Guide

11th September 2026

Version 0.19

1 Table of Contents

2	Introduction and Orientation	15
3	Quick Start.....	20
3.1	Conventions in This User Guide.....	20
3.2	Orbit Speak Features	21
3.3	Turning On and Off, Restarting and Putting Orbit Speak into Sleep Mode	21
3.4	Speech Rate	22
3.5	Speech Volume	22
3.6	Knowing Your Battery Status	22
3.7	Exploring the Home Screen	22
3.7.1	First-Letter Navigation on the Home Screen.....	24
3.7.2	Clock and Time Management Group	24
3.7.3	Tools Group	24
3.7.4	Settings Group	24
3.7.5	Help Group	25
3.8	Internet Connection over Wi-Fi	25
3.9	Disconnecting from a Wi-Fi Network.....	26
4	General Navigation and Operation	26
4.1	Main Navigation Keys	27
4.2	Home Screen Navigation	27
4.3	Moving Through Lists.....	27
4.4	First-Letter Navigation	28
4.5	Context Menus.....	28
4.6	Dialogs.....	29
4.7	Buttons.....	29
4.8	Edit Boxes.....	29
4.9	Combo Boxes	30
4.10	Checkboxes	30
4.11	File Picker Dialog.....	31
4.12	Confirmation Dialogs	31
4.13	Message and Status Updates.....	31
4.14	Selecting Items.....	32
4.15	Shortcuts.....	32

4.16	Long-Press Commands.....	33
4.17	Using Back and Home	33
4.18	Sleep and Wakeup	33
4.19	Turning Orbit Speak Off or Restarting	33
4.20	General Navigation Tips.....	34
5	File Manager.....	34
5.1	Opening the File Manager	35
5.2	Navigating Through Files and Folders.....	35
5.3	File Manager Menu.....	35
5.3.1	Menu Structure	35
5.4	Searching for a File.....	36
5.5	Renaming Files or Folders.....	37
5.6	Creating a New Folder	37
5.7	Copying, Moving, and Deleting Files.....	38
5.7.1	Copy and Move Dialogs	38
5.8	Marking Multiple Files	38
5.9	Sorting and Ordering Files	39
5.10	Compressing and Extracting Files	39
5.11	Exiting the File Manager	40
6	Editor.....	40
6.1	Your First Document.....	40
6.2	Contracted Braille support.....	41
6.3	Opening and Saving an Existing Text or Braille Document.....	42
6.4	Editor Menu	42
6.5	Editor Commands	43
7	Book Reader	44
7.1	Opening the Book Reader Application.....	45
7.2	Choosing What to Read	45
7.3	My Bookshelf	45
7.4	Adding Books	46
7.5	Downloaded Books	47
7.6	Recently Read	47
7.7	Context Menus in Book Reader	47
7.8	Book Reader Context Menu.....	47

7.9	Bookshelf Context Menu	48
7.10	Recently Read Context Menu	49
7.11	Reading a Book	49
7.12	Reading Commands	49
7.13	Movement Units While Reading	50
7.14	Find and Go to Dialogs	51
7.15	Reading View Context Menu	52
7.15.1	File Actions	52
7.15.2	Go To Actions	52
7.15.3	Reading Actions	53
7.15.4	Bookmark Actions	53
7.16	Bookmarks	53
7.16.1	Setting a Bookmark	53
7.16.2	Jumping to a Bookmark	54
7.16.3	Deleting a Bookmark	54
7.16.4	Bookmarks List	54
7.17	Book Reader Settings	54
7.17.1	Automatically Read	55
7.17.2	Preferred Reading Mode for DAISY Books	55
7.17.3	Heading Level Navigation	55
7.17.4	Saving or Cancelling Book Reader Settings	55
7.18	Book Reader Speech Options	56
7.18.1	Engine	56
7.18.2	Language	56
7.18.3	Speech Rate	56
7.18.4	Pitch	56
7.18.5	Volume	56
7.19	Closing Book Reader	57
8	Online Libraries	57
8.1	About Online Libraries	57
8.2	Opening Online Services	57
8.3	Adding an Online Service	58
8.4	Logging Out and Removing Online Service	58
8.5	Browsing an Online Library	59

8.6	Searching for Books	59
8.7	Book Information	60
8.8	Downloading Books	60
8.9	Streaming Books	60
8.10	Borrowing or Returning Books.....	61
8.11	Context Menus in Online Libraries	61
8.12	Reading Downloaded Books	62
8.13	Closing Online Libraries	62
9	Newspapers (Magazines)	63
9.1	Introduction	63
9.1.1	Opening the Newspapers category	63
9.2	Adding a newspaper (subscribe).....	63
9.3	Opening and reading an issue.....	64
9.4	Managing newspapers and issues	64
9.5	Notes.....	65
10	Braille Reader Application.....	65
10.1	Introduction	65
10.2	Locating and Opening the Application.....	65
10.3	Opening and Reading the Book	65
10.3.1	Open from the Braille Reader menu	65
10.3.2	Open from File Manager	66
11	Media Player	66
11.1	Opening the Media Player	67
11.2	Choosing What to Play.....	67
11.3	Library	68
11.3.1	Recently Added	68
11.3.2	Artists	68
11.3.3	Albums	69
11.3.4	Songs	69
11.3.5	Genre.....	69
11.4	Folders	69
11.5	Recently Played.....	70
11.6	Search	70
11.7	Playlists	70

11.7.1	Opening Playlists	71
11.7.2	Creating a Playlist	71
11.7.3	Adding Items to an Existing Playlist	71
11.7.4	Playing a Playlist	72
11.7.5	Playlist Context Menu	72
11.8	Playing Files Opened from File Manager	73
11.9	Context Menus in Media Player	73
11.10	Library and First List Context Menu	74
11.10.1	Add File to Library	74
11.10.2	Add Folder to Library	74
11.10.3	Open URL	74
11.10.4	Rescan	75
11.10.5	Exit	75
11.11	Media Item Context Menu	75
11.11.1	Play	75
11.11.2	Play Next	75
11.11.3	Add to Queue	75
11.11.4	Create Playlist	75
11.11.5	Add to Playlist	76
11.11.6	Delete	76
11.11.7	Properties	76
11.12	Playback Screen	77
11.13	Playback Commands	77
11.14	Bookmarks	78
11.14.1	Adding a Bookmark	78
11.14.2	Opening the Bookmarks List	78
11.14.3	Moving to a Bookmark	78
11.14.4	Deleting a Bookmark	78
11.15	Movement Units During Playback	78
11.16	Playback Modes	80
11.16.1	Normal Playback	80
11.16.2	Repeat	80
11.16.3	Shuffle	80
11.17	Queue	80

11.18	Playback Screen Context Menu	81
11.18.1	Pause or Play	81
11.18.2	Stop	81
11.18.3	Next Track	81
11.18.4	Previous Track	81
11.18.5	Playback Speed	81
11.18.6	Shuffle	81
11.18.7	Repeat	81
11.18.8	Bookmarks	82
11.18.9	Track Information	82
11.18.10	Settings	82
11.18.11	Close Playback Screen	82
11.18.12	Exit	82
11.19	Media Player Settings	82
11.19.1	Automatically Speak Track Title	83
11.19.2	Movement Units List	83
11.19.3	Equalizer	83
11.19.4	On Startup	84
11.19.5	Enable Music Library	84
11.19.6	Allow Background Playback	84
11.19.7	Stop Playback During Speech	84
11.19.8	Announce Playback Status	85
11.19.9	Saving or Cancelling Media Player Settings	85
11.20	Closing Media Player	85
12	Internet Radio	85
12.1	Opening Internet Radio	85
12.2	Choosing How to Find or Manage Stations	85
12.3	Browsing Stations	86
12.4	Searching for Stations	86
12.5	My Stations	87
12.6	Favorites	87
12.7	Recently Played	87
12.8	Playing a Station	87
12.9	Context Menus in Internet Radio	87

12.10	Station Context Menu	88
12.10.1	Play	88
12.10.2	Add to Favorites	88
12.10.3	Remove from Favorites	88
12.10.4	Add to My Stations	88
12.10.5	Remove from My Stations	88
12.10.6	Properties	88
12.11	List Context Menu	89
12.11.1	Search for Station	89
12.11.2	Add Station from URL	89
12.11.3	Import Stations List	89
12.11.4	Export Stations List	89
12.11.5	Refresh	89
12.11.6	Exit	90
12.12	Adding a Station From a URL.....	90
12.13	Importing and Exporting Station Lists	90
12.13.1	Exporting a Station List	90
12.13.2	Importing a Station List	91
12.14	Playback Screen	92
12.14.1	Playback Screen Commands	92
12.14.2	Station Information Dialog	92
12.14.3	Playback Screen Context Menu	93
12.15	Closing Internet Radio	93
13	Podcasts	93
13.1	Opening Podcasts	94
13.2	The First List	94
13.3	Episode States.....	94
13.4	Adding Podcasts.....	95
13.4.1	Searching for Podcasts	95
13.4.2	Adding a Podcast from a Feed Address	95
13.4.3	Confirming a Subscription	96
13.5	The Inbox	96
13.6	The Queue.....	97
13.6.1	Reordering the Queue	97

13.6.2	Sorting the Queue	97
13.7	All Podcasts	97
13.7.1	Podcast Context Menu	97
13.8	Episode Lists	98
13.8.1	Episode Context Menu	98
13.8.2	Sorting Episodes	98
13.9	Downloading Episodes	99
13.10	Playing an Episode	99
13.11	Playback Screen Commands	99
13.12	Movement Units During Playback	100
13.13	Playback Speed	101
13.14	Where Am I	101
13.15	Go to Time	101
13.16	Chapter List	101
13.17	Bookmarks	102
13.17.1	Adding a Bookmark	102
13.17.2	Opening the Bookmarks List	102
13.17.3	Moving to a Bookmark	102
13.17.4	Deleting a Bookmark	102
13.18	Skipping the Start and End of Episodes	102
13.19	What Plays Next	103
13.20	Playback Screen Context Menu	103
13.21	Leaving the Playback Screen	104
13.22	Updating Podcasts	104
13.23	Importing and Exporting Podcasts	104
13.23.1	Importing an OPML File	104
13.23.2	Exporting to an OPML File	105
13.24	Podcast Settings	105
13.25	Podcasts Application Settings	105
13.25.1	Main Screen Settings	106
13.25.2	List Settings	106
13.25.3	Podcasts Settings	106
13.25.4	Playback Settings	106
13.25.5	Downloads and Storage Settings	106

13.25.6	Advanced Settings	107
13.25.7	Saving or Canceling Podcasts Application Settings	107
13.26	Podcasts from the Previous Application	107
13.27	Closing Podcasts	107
14	Voice Recorder	107
14.1	Opening the Voice Recorder Application	107
14.2	Main Screen Overview	108
14.3	Starting and Stopping a Recording	108
14.4	Pausing and Resuming a Recording	108
14.5	Adding Bookmarks While Recording	108
14.6	Managing Your Recordings	109
14.6.1	Recordings List Context Menu	109
14.7	Playback Screen	109
14.8	Using Bookmarks During Playback.....	110
14.8.1	Opening the Bookmarks List	110
14.8.2	Moving Between Bookmarks	110
14.8.3	Bookmarks List Context Menu	110
14.9	Settings Screen.....	111
14.9.1	Available Settings	111
14.10	Playback and the Media Player	112
14.11	Shortcut Summary Table	112
15	Clock and Time Management	113
15.1	Check the Current Time	114
15.2	Check the Current Date	114
15.3	Alarm Clock	114
15.3.1	Opening Alarm Clock.....	114
15.3.2	Creating an Alarm	114
15.3.3	Alarm Time	115
15.3.4	Alarm Tone	115
15.3.5	Alarm Duration.....	115
15.3.6	Repeat Interval.....	115
15.3.7	Frequency.....	116
15.3.8	Editing an Alarm	116
15.3.9	Turning an Alarm on or Off	116

15.3.10	Deleting an Alarm.....	116
15.3.11	When an Alarm Rings.....	117
15.3.12	Alarm Clock Context Menu	117
15.3.13	Closing Alarm Clock.....	117
15.4	World Clock.....	117
15.4.1	Opening World Clock	118
15.4.2	Adding a city.....	118
15.4.3	Checking the Time in a City	118
15.4.4	World Clock Context Menu	118
15.4.5	Closing World Clock.....	119
15.5	Stopwatch	119
15.5.1	Opening Stopwatch.....	119
15.5.2	Stopwatch Screen.....	119
15.5.3	Starting the Stopwatch	119
15.5.4	Stopping the Stopwatch.....	120
15.5.5	Resuming the Stopwatch	120
15.5.6	Resetting the Stopwatch.....	120
15.5.7	Checking the Elapsed Time	120
15.5.8	Stopwatch Context Menu	120
15.5.9	Closing Stopwatch.....	120
15.6	Countdown Timer	121
15.6.1	Opening Countdown Timer.....	121
15.6.2	Countdown Timer Screen.....	121
15.6.3	Setting a Timer	121
15.6.4	Starting, Pausing, Resuming, and Resetting.....	122
15.6.5	Using Select from the Time Edit Boxes	122
15.6.6	Checking the Remaining Time.....	122
15.6.7	Timer Feedback.....	122
15.6.8	When the Timer Finishes	123
15.6.9	Countdown Timer Context Menu	123
15.6.10	Closing Countdown Timer.....	123
16	Tools.....	123
16.1	Check the Battery Status.....	124
16.2	Calculator	124

16.2.1	Calculator Menu.....	124
16.3	Calendar	124
16.3.1	Calendar Navigation	125
16.3.2	Checking Events for a Date	125
16.3.3	Adding an Event	125
16.3.4	Viewing Event Details.....	126
16.3.5	Editing an Event	126
16.3.6	Deleting an Event	127
16.3.7	Calendar Context Menu	127
16.3.8	Event List Context Menu	127
16.3.9	Closing Calendar.....	128
16.4	Contacts	128
16.4.1	Opening Contacts.....	128
16.4.2	Adding a Contact.....	128
16.4.3	Viewing Contact Details	129
16.4.4	Editing a Contact	129
16.4.5	Deleting a Contact.....	129
16.4.6	Selecting Contacts	130
16.4.7	Selecting All Contacts	130
16.4.8	Exporting Selected Contacts	130
16.4.9	Exporting All Contacts	130
16.4.10	Importing Contacts from a File	131
16.4.11	Contacts Context Menu	131
16.4.12	Closing Contacts	131
16.5	Weather	131
16.5.1	Opening Weather.....	132
16.5.2	Adding a Location.....	132
16.5.3	Checking Weather Information.....	132
16.5.4	Changing Locations	133
16.5.5	Refreshing Weather Information	133
16.5.6	Weather Context Menu	133
16.5.7	Closing Weather.....	134
16.6	Check for Updates.....	134
16.6.1	Opening Check for Updates	134

16.6.2	Updater Main Screen	134
16.6.3	Product Information.....	134
16.6.4	Checking for Updates	135
16.6.5	Update Available Dialog	135
16.6.6	Installing Updates.....	135
16.6.7	Cancelling Update Installation	136
16.6.8	Installing from SD Card.....	136
16.6.9	Firmware Update Flow.....	136
16.6.10	Updater Settings	136
16.6.11	Auto Check	137
16.6.12	Update Channel.....	137
16.6.13	Closing Check for Updates	137
16.7	Format SD Card	137
16.8	App Catalog.....	138
17	Third-Party Applications.....	138
18	Reading NLS BARD Books with BARD Mobile.....	139
18.1	About This Section	139
18.2	Before You Start.....	139
18.3	How Orbit Speak Keys Work Inside BARD Mobile	139
18.4	Signing In.....	140
18.5	The Four Main Tabs	140
18.6	Finding and Downloading Books (Get Books).....	140
18.7	Your Downloaded Titles (Bookshelf)	141
18.8	Reading a Book (Now Reading).....	141
18.8.1	Jumping to a Specific Place	142
18.8.2	Bookmarks.....	142
18.8.3	The Sleep Timer.....	142
18.8.4	Adjusting Speed and Tone While Reading	142
18.9	Settings	143
18.9.1	Audio Settings	143
18.9.2	Account Settings	143
18.10	A Few Tips.....	143
19	Settings.....	144
19.1	Opening settings	144

19.2	Device settings	144
19.3	General settings	145
19.4	Wi-Fi settings	147
19.5	Bluetooth settings.....	149
19.6	Date and Time settings	150
19.7	Screen Reader Settings	151
19.8	Screen Reader General Settings	151
19.9	Select TTS Engine	153
19.10	Voice Manager for Runa TTS	154
19.11	Voice Manager: Google	157
19.12	Voice Manager: Vocalizer	159
19.13	Closing Settings.....	161
20	Help	161
21	Remote Mode	162
21.1	Opening Remote Mode	162
21.2	Channels of Communication.....	162
21.3	Communication Protocols	163
21.4	Pairing a Device.....	163
21.5	Connecting to a Host	164
21.5.1	iOS (VoiceOver)	164
21.5.2	Mac (VoiceOver).....	164
21.5.3	Android.....	164
21.5.4	Chromebook (ChromeVox)	165
21.5.5	Windows: NVDA.....	165
21.5.6	Windows: JAWS.....	165
22	Firmware Upgrade	165
22.1	Device Firmware Upgrade	165
22.2	Download firmware package	165
22.3	Using the Windows PC Upgrade Utility	166
23	Troubleshooting	168
23.1	Orbit Speak Does Not Turn On	168
23.2	Orbit Speak Does Not Respond to Key Presses	168
23.3	Orbit Speak Is in an Unknown State and the Battery Is Charged	169

23.4	Orbit Speak is in an unknown state, the battery is charged, and the troubleshooting steps in 11.4 do not resolve the issue.	169
23.5	Orbit Speak is Continuous Beeping.....	169
24	Buzzer, Vibration and LED Indication	170
24.1	Buzzer and Vibration Indication.....	170
24.2	LED Indication	171
25	Hardware Limited Warranty	171
25.1	EXCLUSIONS AND LIMITATIONS.....	171
26	CONSUMER PROTECTION LAWS	172
27	OBTAINING WARRANTY SERVICE	172
28	FCC Information	173
28.1	FCC Notice.....	173
28.2	FCC Caution.....	173
29	Further Information	174
30	Appendix B: Keyboard Command Reference	174
30.1	Global and System Commands	174
30.2	Navigation	175
30.3	Book Reader (Reading) Commands	175
30.4	Editor Commands	175
30.5	Remote Mode Commands	176
31	Appendix A: Revision History	176

[2 Introduction and Orientation](#)

Congratulations on purchasing your new Orbit Speak!

 
First, let us describe the device.

 
- Position your Orbit Speak in front of you so that the keys are facing upwards, and an elongated key is closer to you. This elongated key is the Space bar.
- Above the Space bar you will find a circle — the navigation pad. The navigation pad consists of five separate small buttons. These buttons have top, bottom, left and right tactile markings. These are **Up**, **Down**, **Left** and **Right** arrow keys.
- They are used to navigate through menus in applications and perform some other actions.
- In the center of the circle, you will find a small round button — this is the **Select** key. Use this key to confirm your choice.
- To the left and slightly up from the navigation pad you will find three identical keys. Place the index, middle and ring finger of your left hand on them comfortably.
- To the right and slightly upwards from the navigation pad you will find three more keys of the same type. Place the index, middle and ring finger of your right hand on them comfortably.
- Your hands are now on a Perkins keyboard. In your left hand, you have **Dot 1** under your index finger, **Dot 2** under your middle finger, and **Dot 3** under your ring finger. In your right hand, you have **Dots 4, 5, and 6**, respectively.
- Put your fingers back on the Space bar, which is located just below the round navigation pad. To the left and right of it you will find two more Braille Dot keys. The left key is **Dot 7**; the right one is **Dot 8**. All these DOT keys along with the Spacebar are used to type text in computer Braille as well as to carry out some commands.
- **Dot 8** by itself is used as the Enter key, and **Dot 7** as the Backspace key. We Recommend using your right thumb to press **Dot 8** and your left thumb to press **Dot 7**.
- To the left of **Dot 7** and to the right of **Dot 8** you will find two sets of two small buttons each. These are function keys. The keys on the left side are **F1** and **F2**, the ones on the right side are **F3** and **F4**. The **F2** and **F3** keys are closer to the center, whereas **F1** and **F4** are closer to the edges of the device.
- Above the **F1** key there is a speaker grill and just above the right of the **F4** key is a tiny microphone hole.
- On the rounded corners of the device, which are closer to you, you will find attachment points for a strap or lanyard. You can wear the device around your neck and free your hands without fear of the device falling off.
- On the front side of the device, you will find a full-size SD card slot. It is located on the right side, at the corner, in a small recess.
- To remove the SD card, gently press it until you hear a click, this click sound means the card is freed, and it will slide out of the slot.
- To insert an SD card, hold it with the contacts facing up and towards the device, put it into the slot and gently push it until you hear a click.

- On the right side of the device is a USB-C port for charging your Orbit Speak and connecting it to your PC.
- On the left side of the device, you will find the round Power button as well as the headphone jack. The Power button is marked with a tactile dot.
- Turn the device over and you will find that it has four small rubber feet on the corners. This keeps it from sliding around on smooth surfaces. You will also find a clearly visible label with a barcode and information about the certification of the device.

Below in this section there is an image of the device where all its elements are designated with numbers. The meaning of each number is explained below the image. If you want, you or your sighted assistant can study this image. But we are sure you already want to just turn on the device. Then go straight to the Quick

Start chapter.

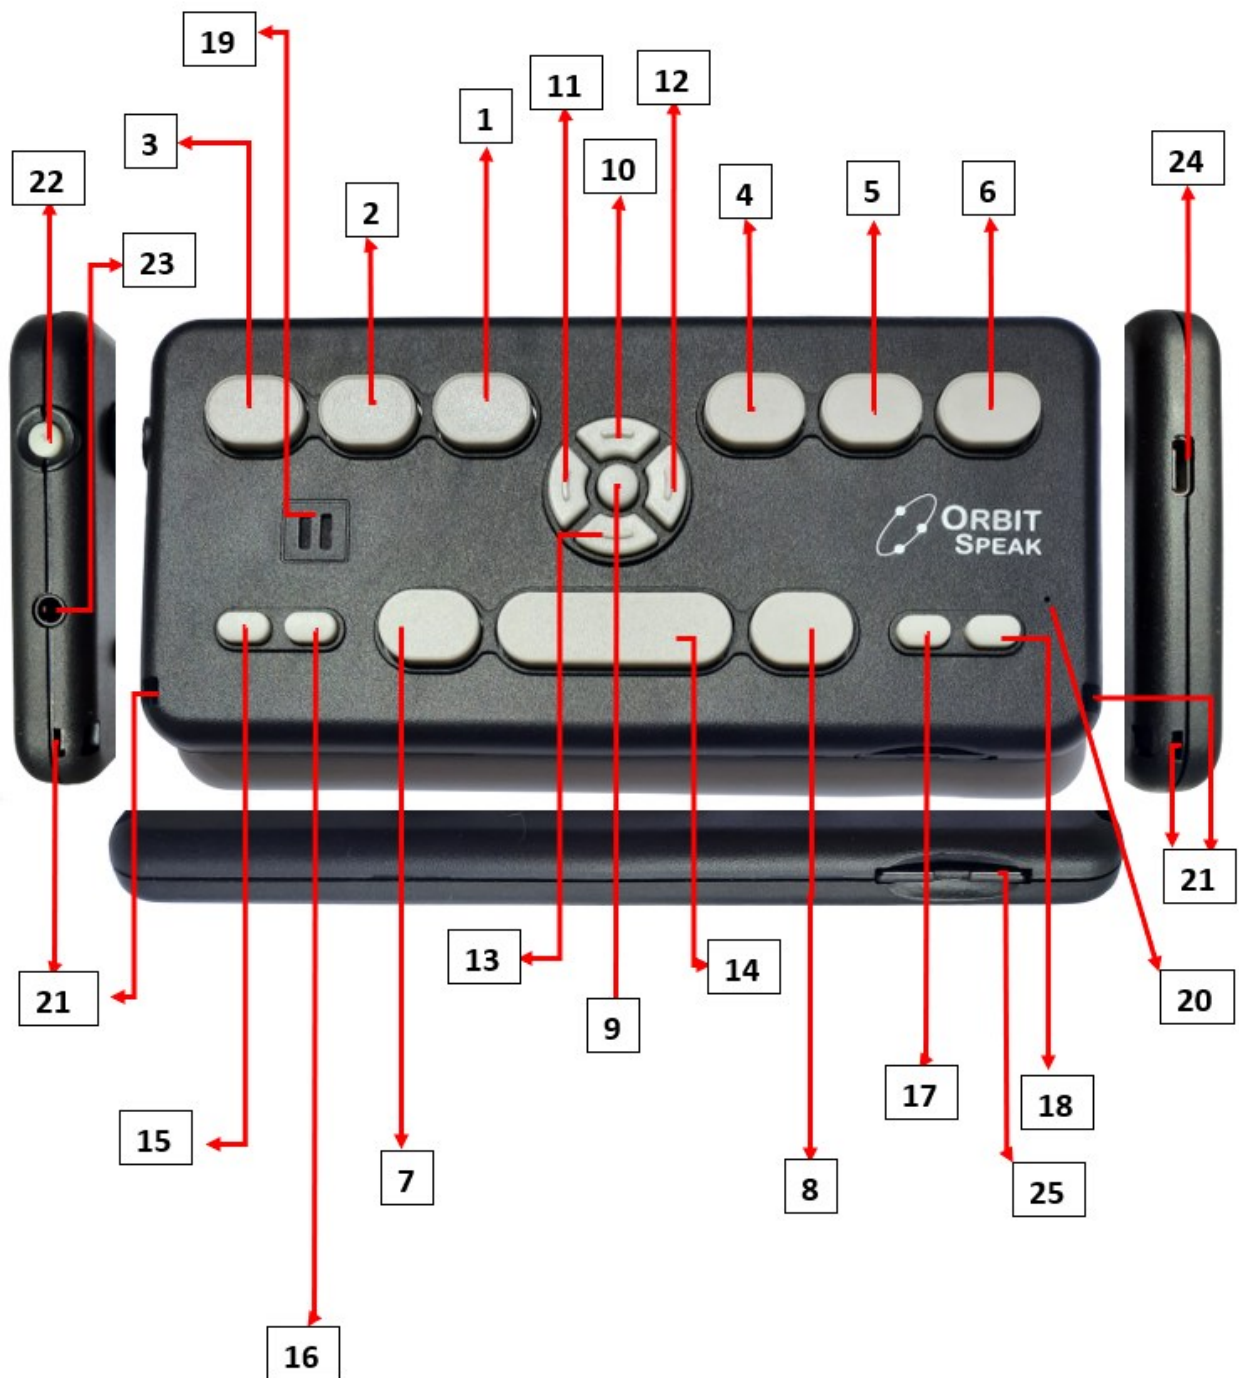

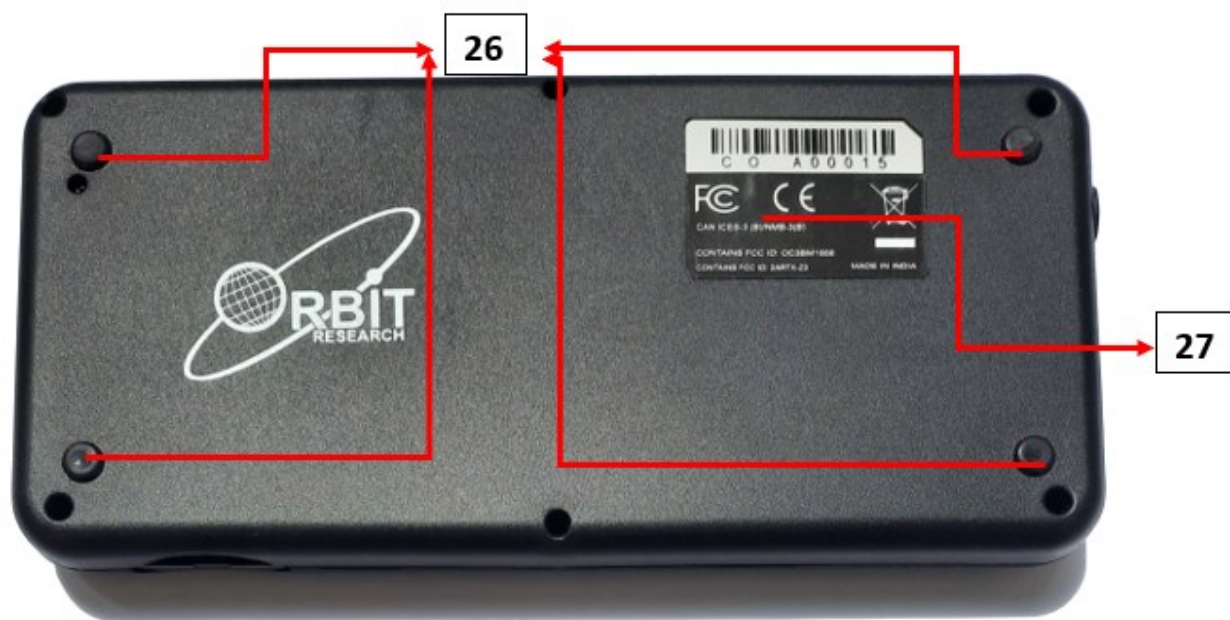

Orbit Speak, back side and its elements

1. Dot 1
2. Dot 2
3. Dot 3
4. Dot 4
5. Dot 5
6. Dot 6
7. Dot 7
8. Dot 8
9. Select key
10. Up Arrow key
11. Left Arrow key
12. Right Arrow key
13. Down Arrow key
14. Spacebar
15. F1 key
16. F2 key
17. F3 key

18. F4 key
19. Speaker
20. Microphone
21. Holes for attaching the strap
22. Power button
23. Headphone jack
24. USB-C port
25. SD Card slot
26. Rubber feet
27. Label with bar code and certification info

3 [Quick Start](#)

3.1 Conventions in This User Guide

For consistency and clarity, the following conventions are used in this user guide:

- The keys on the Perkins braille keyboard are given as dot numbers. > For example, the letter **f** is written as **Dots 1 2 4**, meaning > you press braille dots 1, 2, and 4 together.
- The five navigation keys can be pressed directly or entered as > braille chords on the Perkins keyboard. Each arrow key has a > braille-chord equivalent:
 - **Up Arrow = Space + Dot 1**
 - **Down Arrow = Space + Dot 4**
 - **Left Arrow = Space + Dot 3**
 - **Right Arrow = Space + Dot 6**
- The **Select** key can also be entered as **Dot 8**. Select and Dot > 8 perform the identical confirmation function.
- When modifier keys are used, they are separated from other keys by a > plus sign (+), for example: **Space + M**. Modifier keys are keys > that you hold down while pressing other keys at the same time. This > changes the effect of the keys you press. The **Select**, **Space**, > and the function keys **F1** through **F4** function as modifier > keys on Orbit Speak.
- Lists (the home screen, menus, and other lists) support **first-letter > navigation**: type the first braille letter of an item's name on the > Perkins keyboard to move to it, press the same letter again to move to > the next item beginning with that letter, then press **Select** (or > **Dot 8**) to open it.

3.2 Orbit Speak Features

- Built-in applications: media player, calculator, alarm clock.
- Various settings allow flexibly configuring the device according to > your needs.
- Ergonomic Perkins braille keyboard for smooth and quiet text entry > with positive tactile feedback.
- Dedicated **Dot 7** and **Dot 8** keys for backspace and select.
- 5-key navigation pad to easily operate the device, as well as four > additional function keys (**F1** through **F4**).
- Lightweight but rugged design.
- Supports SD, SDHC, SDXC cards up to 2 TB.
- The battery can last up to 15 hours when playing music through the > built-in speaker at full volume. Please note that actual battery > life may vary based on your usage conditions.

3.3 Turning On and Off, Restarting and Putting Orbit Speak into Sleep Mode

- **Turning on Orbit Speak:** Press and hold the **Power** button for > about **2 seconds**. You will feel several vibrations while the > device boots up. Then you will hear:
> *Orbit Speak, book reader.*
> Now the device is on, and you are on the home screen.
- **Turning off the device:** Press and hold the **Power** button for > approximately 2 seconds. You will be presented with a Select > Action dialog where you can turn the device off completely, > restart it or just exit this dialog. The dialog has three buttons:
 - Shut Down
 - Restart
 - Cancel

Move between the buttons with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**, then press **Select** (or **Dot 8**) to activate. To close the dialog without any action, press **Space + Dots 1 3 5 6**.

- You will feel vibrations while the device is shutting down. When the > vibration stops, the device is turned off.
- You can put the device into sleep mode instead of turning it off > completely. To do this, press the **Power** button briefly. You > will feel a vibration and hear a descending tone. To wake up the > device, press and hold the **Power** button until you feel a > vibration. You will hear a rising tone, and you will be back where > you left off before.

The device is protected against accidental pressing of the Power button. A short press of this button will not accidentally turn on or wake up the device.

If you try to turn the device on when its battery is 0%, you will feel a vibration and hear 3 high-pitched beeps, but Orbit Speak will not turn on. In this case, please charge your device first.

3.4 Speech Rate

When you have just turned on the device for the first time, the speech you hear may be too fast or too slow for you. When you turn on the device for the first time, the speech rate is set to 5 out of 10.

Adjust the speech rate to your liking.

- To decrease the speech rate, i.e., make the device speak slower, > press **Space + F1**.
- You will hear, for example: *Speech rate: 4*.
- If you reach rate 1 and try to go slower, you will hear: *Speech > rate at minimum level*.
- To increase the speech rate, i.e., make the device speak faster, > press **Space + F4**.
- You will hear, for example: *Speech rate: 6*.
> If you reach rate 10 and try to go faster, you will hear: *Speech > rate at maximum level*.

3.5 Speech Volume

The speech volume of your Orbit Speak can be set from level 0 up to level 15. Even if the volume is set to 0, you will still hear speech. It will be very quiet, but you will never be in a situation when your device is turned on and works correctly but it is silent.

If speech sounds too quiet or too loud for you, adjust the speech volume.

- To increase the speech volume, press **Dot 7 + F4**. You will hear, > for example: *Speech volume: 10*.
> If you have already reached volume level 15 and you try to go > louder, you will hear: *Volume is at max level*.
- To lower the speech volume, press **Dot 7 + F1**. You will hear, for > example: *Speech volume: 9*.
> If you have already reached volume level 0 and you try to go > quieter, you will still hear: *Speech volume: 0*.

3.6 Knowing Your Battery Status

You can check the battery status of your Orbit Speak at any time by pressing **Space + Dots 1 6**. The device will announce the current battery level. For example, you might hear:

- “Battery level 87%. Not plugged in.”

If your device is charging, the announcement will state “Charging” instead of “Not plugged in.” When the battery is low, you will receive an audible alert. Specifically, if the battery level drops to 15% or lower, the device will announce that the battery is low. Additionally, a beep sound will serve as a supplementary notification when the battery falls below the designated threshold.

3.7 Exploring the Home Screen

The **Home Screen** is the starting point for accessing all of Orbit Speak’s features.

To return to the Home Screen from anywhere, press **Space + Dots 1 2 3 4 5 6**.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 1)** keys to move through the Home Screen items.

After each key press, Orbit Speak speaks the item that is currently focused.

Press the **Select** key (or **Dot 8**) to open the focused item. Alternatively, type the item's **first letter** on the Perkins keyboard to open it directly.

When you reach the end of the Home Screen list, the list wraps. This means that pressing **Down Arrow** after the last item moves back to the first item.

Orbit Speak can also speak the position of each item in the list. For example, "1 of 11" means the first item out of eleven available items.

The Home Screen contains the following items, each with its first letter:

1. **File Manager** — first letter **F (Dots 1 2 4)**
2. **Book Reader** — first letter **B (Dots 1 2)**
3. **Braille Reader** — first letter **B (Dots 1 2)**
4. **Media Player** — first letter **M (Dots 1 3 4)**
5. **Internet Radio** — first letter **I (Dots 2 4)**
6. **Podcasts** — first letter **P (Dots 1 2 3 4)**
7. **Voice Recorder** — first letter **V (Dots 1 2 3 6)**
8. **Clock and Time Management** — first letter **C (Dots 1 4)**
9. **Tools** — first letter **T (Dots 2 3 4 5)**
10. **Settings** — first letter **S (Dots 2 3 4)**
11. **Help** — first letter **H (Dots 1 2 5)**

Some Home Screen items open applications directly. Other items are groups.

A group contains related applications, tools, or settings.

The groups on the Home Screen are:

- **Clock and Time Management**
- **Tools**
- **Settings**
- **Help**

To open a group, move to it and press the **Select** key (or **Dot 8**), or type its first letter.

Inside a group, use the **Up Arrow** and **Down Arrow** keys to move through the items. Press **Select** to open the focused item. Press **Left Arrow** to return to the Home Screen.

3.7.1 First-Letter Navigation on the Home Screen

The home screen is a list. Type the first letter of an item's name to move to it — for example, type **F (Dots 1 2 4)** to move to **File Manager** — then press **Select** to open it. Typing the same letter again moves to the next item that begins with that letter.

3.7.2 Clock and Time Management Group

The **Clock and Time Management** group contains tools related to time, alarms, and timers.

It contains the following items:

1. **Check Current Time**
2. **Check Current Date**
3. **Alarm Clock**
4. **World Clock**
5. **Stopwatch**
6. **Countdown Timer**

Use this group when you want to check the time or date, set alarms, use a world clock, measure elapsed time, or start a countdown timer.

3.7.3 Tools Group

The **Tools** group contains general tools and maintenance options.

It contains the following items:

1. **Check Battery Status**
2. **Calculator**
3. **Calendar**
4. **Contacts**
5. **Weather**
6. **Check for Updates**
7. **Format SD Card**
8. **App Catalog**

Use this group when you want to check the battery, use productivity tools, check weather, update the device, format an SD card, or install approved third-party applications.

Warning: **Format SD Card** deletes all files on the SD card.

3.7.4 Settings Group

The **Settings** group contains device, screen reader, and voice management options.

It contains the following items:

1. **Device Settings**
2. **Screen Reader Settings**
3. **Voice Manager: Google**
4. **Voice Manager: Vocalizer**

Use this group when you want to change device behavior, configure speech and screen reader feedback, or install and remove text-to-speech voices.

3.7.5 Help Group

The **Help** group contains help and device information.

It contains the following items:

1. **User Guide**
2. **About Orbit Speak**

Use **User Guide** to open the built-in user guide.

Use **About Orbit Speak** to hear device and software information.

3.8 Internet Connection over Wi-Fi

To connect to the Internet over Wi-Fi, you need to know the name of your Wi-Fi network and the password to access it if it is secured.

Follow the steps below to connect to a Wi-Fi network:

- Switch to the home screen. To do this, press **Space + Dots 1 2 3 4 5 6**.
- Open the Settings application. To do this, navigate with the Up and Down arrow keys until you hear *Settings folder*, then press **Select** (or **Dot 8**). Alternatively, type **S** (**Dots 2 3 4**) to open it directly.
- Press **Select** again to open Settings under the Settings folder.
- Press **Down Arrow** until you hear: *Wi-Fi Options*.
- Then press **Select** (or **Dot 8**).
- As soon as you open Wi-Fi Options, you will be presented with a message saying that Wi-Fi is currently off and asking whether you would like to turn it on. This dialog has two buttons, **Yes** and **No**. Move between them with **Tab** (**Space + Dots 4 5**) and **Shift + Tab** (**Space + Dots 1 2**), move to **Yes**, and press **Select** to turn on Wi-Fi.
- When Wi-Fi turns on it automatically starts searching for the available networks. While it is searching, you will hear a sound that indicates the device is searching for networks.
- After the process of detecting networks is complete, focus moves to the available networks list. Use the **Up Arrow** and **Down Arrow** keys to move through the list of available networks.

- Once you find the network you want to connect to, press **Select** (or **Dot 8**) on it, and a menu opens with the following options:
- Disable Wi-Fi.
- Refresh network list.
- Connect.
- Close.
- Move to **Connect** with the **Up Arrow** and **Down Arrow** keys and press **Select**. You will be presented with a dialog asking for the password/security key.
- The password edit box is the focused control. Type the password on the Perkins keyboard, then move to the confirm button with **Tab** (**Space + Dots 4 5**) and press **Select** (or **Dot 8**). The device will connect.

Note: If you leave after turning on Wi-Fi and return later, your focus will be on the networks list by default.

3.9 Disconnecting from a Wi-Fi Network

If your device is connected to a Wi-Fi network but you want to disconnect or forget the network, follow these steps:

- Switch to the home screen by pressing **Space + Dots 1 2 3 4 5 6**.
- Open the Settings folder. To do this, navigate with the Up and Down arrow keys until you hear *Settings*, then press **Select** (or **Dot 8**). Alternatively, type **S** (**Dots 2 3 4**) to open it directly.
- Press **Select** again to open Settings under the Settings folder.
- Press **Down Arrow** until you hear *Wi-Fi Options*.
- Then press **Select** (or **Dot 8**).
- In the Available Networks list, use the **Up Arrow** and **Down Arrow** keys to move to your Wi-Fi network. You will hear its name followed by the word *Connected*.
- Press **Select** (or **Dot 8**). A menu opens with 5 items: Disable Wi-Fi, Refresh network list, Disconnect, Forget, and Close. Move to the desired action using the **Up Arrow** and **Down Arrow** keys, then press **Select**.

4 General Navigation and Operation

This section explains the basic navigation and control methods used throughout Orbit Speak.

Most applications on Orbit Speak use the same navigation model. After you learn these general controls, you can use them in the Home Screen, lists, dialogs, context menus, settings, file pickers, and applications.

4.1 Main Navigation Keys

Orbit Speak uses the five navigation keys, the Select key, and a small set of braille chords for most navigation. Each arrow key can be pressed directly on the navigation pad or entered as a braille chord on the Perkins keyboard.

The main navigation keys are:

- **Up Arrow (Space + Dot 1):** Move to the previous item, previous option, or move up within a list.
- **Down Arrow (Space + Dot 4):** Move to the next item, next option, or move down within a list.
- **Left Arrow (Space + Dot 3):** Move left, move backward, or go up one level in menus.
- **Right Arrow (Space + Dot 6):** Move right or move forward.
- **Select (or Dot 8):** Open, activate, choose, confirm, start, pause, or toggle the focused item, depending on the context.
- **Back (Space + dots 1-5): Go up one level:** In menus, press **Left Arrow**. In file and folder lists, press **Dot 7**.
- **Home (Space + Dots 1 2 3 4 5 6):** Return to the Home Screen.
- **Menu (Space + M, that is Space + Dots 1 3 4):** Open the context menu for the current screen or focused item.
- **Close / exit an application (Space + Dots 1 3 5 6):** Leave the current application and return to the Home Screen.

4.2 Home Screen Navigation

The Home Screen is the starting point for accessing all Orbit Speak features.

To return to the Home Screen from anywhere, press **Space + Dots 1 2 3 4 5 6**.

Use the **Up Arrow** and **Down Arrow** keys to move through Home Screen items.

Press **Select** (or **Dot 8**) to open the focused application or group. You can also type an item's first letter to move it to it.

Press **Left Arrow** from inside a group to move one level higher, or **Space + Dots 1 3 5 6** to leave an application.

Some Home Screen items are applications. Other Home Screen items are groups that contain related applications, tools, or settings.

4.3 Moving Through Lists

Many Orbit Speak screens are lists.

Lists are used for applications, files, folders, settings, media items, podcasts, contacts, alarms, and many other items.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through a list.

Orbit Speak speaks the focused item as you move.

If position information is enabled, Orbit Speak also speaks the item position, such as **1 of 11**.

Press **Select** (or **Dot 8**) to open or activate the focused item.

To leave the list or move one level higher, press **Left Arrow** in menus, or **Dot 7** in file and folder lists.

Some lists wrap when you reach the beginning or end. If a list wraps, pressing **Down Arrow** on the last item moves to the first item, and pressing **Up Arrow** on the first item moves to the last item.

4.4 First-Letter Navigation

The home screen, menus, and other lists are all list controls. To move to an item quickly, type the first letter of its name on the Perkins keyboard. Each time you type that letter, focus moves to the next item whose name begins with it, so you can press the letter repeatedly to cycle through items that share a first letter. When the item you want is focused, press **Select** (or **Dot 8**) to open or activate it.

You can also move through any list one item at a time with the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys.

For example, on the home screen, type **F (Dots 1 2 4)** to move to **File Manager**, then press **Select** to open it.

4.5 Context Menus

A context menu contains actions for the current screen or focused item.

To open a context menu, press **Space + M (Space + Dots 1 3 4)**.

The available menu items change depending on where you are.

For example:

- In File Manager, the context menu can include actions such as open, > rename, delete, copy, paste, and properties.
- In Media Player, the context menu can include actions such as play, > add to queue, create playlist, delete, and settings.
- In a dialog or list, the context menu can include actions related to > the focused item.

Use the **Up Arrow** and **Down Arrow** keys to move through the context menu.

Press **Select** (or **Dot 8**) to activate the focused menu item.

Press **Left Arrow** to close the context menu without choosing an item.

Context menus support first-letter navigation. When a context menu is open, you can activate an item by typing its first-letter letter on the Perkins keyboard.

4.6 Dialogs

Dialogs are used when Orbit Speak needs information from you or needs you to confirm an action.

Dialogs can contain controls such as buttons, edit boxes, combo boxes, checkboxes, lists, and text.

Inside a dialog, move between controls with **Tab (Space + Dots 4 5)** to reach the next control and **Shift + Tab (Space + Dots 1 2)** to reach the previous control.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 1)** keys to change the value of the focused control — for example, to cycle a combo box option or to move within a list that is inside the dialog.

Press **Select** (or **Dot 8**) to activate the focused button, check or uncheck a checkbox, choose a list item, or confirm a control.

To close a dialog or cancel the current action, move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**.

4.7 Buttons

Buttons perform actions.

Examples of buttons include:

- **OK**
- **Cancel**
- **Close**
- **Start**
- **Pause**
- **Install**
- **Delete**

To activate a button, move to it with **Tab (Space + Dots 4 5)** or **Shift + Tab (Space + Dots 1 2)** and press **Select** (or **Dot 8**).

4.8 Edit Boxes

Edit boxes allow you to type text or numbers.

Examples of edit boxes include:

- Search text
- File name
- Wi-Fi password
- Contact name

- Timer hours, minutes, and seconds

When the edit box is the focused control, type text directly on the Perkins keyboard using computer or contracted braille.

Press **Dot 7** to delete the character to the left.

To leave the edit box and move to another control, press **Tab (Space + Dots 4 5)** or **Shift + Tab (Space + Dots 1 2)**.

Some edit boxes accept only specific input. For example, timer edit boxes accept only numbers.

If the entered value is not valid, Orbit Speak speaks an error message and keeps focus on the dialog.

4.9 Combo Boxes

Combo boxes allow you to choose one value from a list of available values.

Examples of combo boxes include:

- Language
- Voice
- Speech rate
- Update channel
- Time format
- Alarm tone

Move to the combo box with **Tab (Space + Dots 4 5)** or **Shift + Tab (Space + Dots 1 2)**. When the combo box is focused, use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 1)** keys to change the selected value.

Orbit Speak speaks the new value when it changes.

4.10 Checkboxes

Checkboxes turn an option on or off.

Examples of checkboxes include:

- Auto check for updates
- Automatic date and time
- Movement units
- Screen reader feedback options

Move to the checkbox with **Tab (Space + Dots 4 5)** or **Shift + Tab (Space + Dots 1 2)**, then press **Select (or Dot 8)** to check or uncheck it.

Orbit Speak speaks whether the checkbox is checked or unchecked.

4.11 File Picker Dialog

File picker dialogs are used when Orbit Speak asks you to choose a file, choose a folder, or choose where to save a file.

File picker dialogs can appear when you:

- Open a file
- Save a file
- Import contacts
- Export contacts
- Import or export podcast lists
- Install an update from an SD card
- Add media files or folders

Move between the dialog controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

When focus is on the file or folder list, use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the list and choose the location or file.

Press **Select** (or **Dot 8**) to open a folder or choose the focused file.

Move to **OK** and press **Select** to confirm.

Move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to close the dialog without choosing a file.

4.12 Confirmation Dialogs

Confirmation dialogs appear when an action may change or remove information.

For example, Orbit Speak may ask for confirmation before deleting a file, deleting a contact, deleting an alarm, formatting an SD card, or installing an update.

Move between the available buttons with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

Move to **Yes** or **OK** and press **Select** (or **Dot 8**) to confirm the action.

Move to **No** or **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to cancel the action.

Read confirmation messages carefully before continuing, especially when deleting files or formatting an SD card.

4.13 Message and Status Updates

Orbit Speak speaks messages to confirm actions, report errors, and provide status updates.

Messages can include information such as:

- Action completed
- Action failed
- File deleted
- Contact imported
- Update available
- Downloading
- Installation
- Battery level
- Wi-Fi connected

Some messages are spoken automatically.

Some messages are shown in dialogs or status areas.

When a process takes time, Orbit Speak may speak progress messages as the process continues.

4.14 Selecting Items

Some lists allow you to select one or more items before performing an action.

For example, selection can be used in File Manager and Contacts.

To select an item on Orbit, Speak, move to the item and press **Space**.

When an item is selected, Orbit Speak adds the word **selected** to the item name.

To unselect the item, press **Space** again.

Some lists also include **Select All** in the context menu.

4.15 Shortcuts

Orbit Speak includes shortcuts for common actions.

Some shortcuts work globally. Other shortcuts work only inside a specific application.

Examples of common shortcuts include:

- **Space + Dots 1 2 3 4 5 6**: Return to the Home Screen.
- **Space + M (Space + Dots 1 3 4)**: Open the context menu.
- **Space + Dots 1 3 5 6**: Close or exit the current application.
- **Space + F1**: Decrease speech rate.
- **Space + F4**: Increase speech rate.
- **Dot 7 + F1**: Decrease speech volume.

- **Dot 7 + F4:** Increase speech volume.
- **Space + Dots 1 6:** Speak battery status.

Application-specific shortcuts are explained in the sections for each application.

4.16 Long-Press Commands

Some commands are performed by holding a key instead of pressing it briefly.

For example:

- Long-pressing **Select (Dot 8)** can stop reading immediately in > some reading applications.
- Some applications provide long-press braille chords to add a > bookmark or open a bookmarks list.

When a long-press command is available, it is explained in the section for that application.

4.17 Using Back and Home

Moving one level higher and returning to the Home Screen are different actions.

To move one level higher, close a dialog, or return to the previous screen, press **Left Arrow (Space + Dot 3)** in menus, or **Dot 7** in file and folder lists.

To leave the current application and return directly to the Home Screen, press **Space + Dots 1 2 3 4 5 6**, or press **Space + Dots 1 3 5 6** to close the application.

In most applications, moving back repeatedly closes the current screen step by step.

Returning to the Home Screen takes you there immediately.

4.18 Sleep and Wakeup

To put Orbit, speak to sleep, press the **Power** button briefly.

Orbit Speak vibrates and plays a descending tone when it enters sleep mode.

To wake Orbit, Speak, hold the **Power** button until the device responds.

Orbit Speak plays a rising tone and returns to where you left off, when possible.

Sleep is different from shutting down. When the device is asleep, it can wake more quickly and continue from the previous state.

4.19 Turning Orbit Speak Off or Restarting

To shut down or restart Orbit Speak, hold the **Power** button for about two seconds.

A dialog opens with options such as:

- **Shut Down**
- **Restart**

- **Cancel**

Move to the option you want with **Tab** (**Space + Dots 4 5**) or **Shift + Tab** (**Space + Dots 1 2**) and press **Select** (or **Dot 8**).

Move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to close the dialog without shutting down or restarting.

4.20 General Navigation Tips

Use the following tips when learning Orbit Speak:

- Press **Space + Dots 1 2 3 4 5 6** if you are not sure where you are > and want to return to the Home Screen.
- Press **Left Arrow** (or **Dot 7** in file and folder lists) to move > one level higher or close the current screen.
- Press **Space + M** (**Space + Dots 1 3 4**) to find actions for the > current screen or focused item.
- Listen to item names and position information to understand where > focus is.
- Use first-letter navigation when you already know the first-letter letter of the > item you want.
- Use context menus to find actions that are not shown directly on the > screen.

5 File Manager

If you would like to use your PC for managing the files on your Orbit Speak, you can connect your Orbit Speak using the provided USB-C cable, or any compatible cable. You will see the device on your computer as external storage, and you can copy or delete files as you normally would.

However, you can also manage files directly on your Orbit Speak using the built-in **File Manager** application.

The Orbit Speak uses the same set of navigation commands throughout. Their Braille chords are:

- **Up Arrow** = **Space + Dot 1**
- **Down Arrow** = **Space + Dot 4**
- **Left Arrow** = **Space + Dot 3**
- **Right Arrow** = **Space + Dot 6**
- **Select** = **Dot 8** (Select and Dot 8 perform the identical confirmation function)
- Return to the **Home screen** = **Space + Dots 1 2 3 4 5 6**
- Open the **context menu** = **Space + M** (**Space + Dots 1 3 4**)
- **Close / exit** an application = **Space + Dots 1 3 5 6**

- **Go up one level / Back:** on menus press **Left Arrow**; in file and folder lists press **Dot 7**
- **Mark / select** a file = **Space**

After these keys are introduced, this chapter refers to them by their arrow and Select names.

5.1 Opening the File Manager

1. Switch to the **Home screen** by pressing **Space + Dots 1 2 3 4 5 6**.
2. Navigate with **Up Arrow** (Space + Dot 1) and **Down Arrow** > (Space + Dot 4) to the **Utilities** folder and press **Select** > (Dot 8) to open the folder or press **U** (**Dots 1 3 6**).
3. Press the **Down Arrow** until you hear “File Manager,” or press > **F** (**Dots 1 2 4**). You will hear “File Manager, Internal > Storage.”

When opened, the File Manager displays a list of available drives — **Internal Storage**, **SD Card**, and, if connected, **USB Mass Storage**.

If the File Manager was previously opened and closed, your focus will return to the last location you visited.

5.2 Navigating Through Files and Folders

Follow these steps to explore your files and folders:

- Use **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + Dot 4) > to navigate through files and folders within an open folder.
- To open a folder, move the focus to it and press **Select** (Dot 8).
- To go back to one level, press **Dot 7**.
- The top level includes **Internal Storage**, **SD Card**, and **USB > Drives**.
- You can type the **first letter** of a file or folder name to > quickly jump to it.
- Long-press the **Up Arrow** to jump to the top of the list, or the > **Down Arrow** to reach the bottom.

When you reach the root level, a short beep or vibration indicates that you cannot go further up.

5.3 File Manager Menu

The File Manager allows you to copy, move, delete, compress and extract files and folders, as well as create new folders and search for items.

Use the **Up Arrow** and **Down Arrow** keys to move through menu items. Press the **Right Arrow** (Space + Dot 6) to expand a submenu, and the **Left Arrow** (Space + Dot 3) to go back.

When you are at the top level of the menu, pressing the **Left Arrow** again will close it.

5.3.1 Menu Structure

Below is the menu structure you will observe in the menu, with the first-letter navigation.

File — first letter F (Dots 1 2 4):

- Open — O (Dots 1 3 5)
- Open With — press its first letter
- Rename — R (Dots 1 2 3 5)
- Delete — D (Dots 1 4 5)
- New Folder — N (Dots 1 3 4 5)
- **Compress to Archive — press its first letter**
- Extract from Archive — press its first letter
- Search — S (Dots 2 3 4)

Properties — P (Dots 1 2 3 4)

- Up One Level — press its first letter
- Exit — E (Dots 1 5)
- Edit — first letter E (Dots 1 5):
- Select or Deselect — press its first letter
- Cut — C (Dots 1 4)
- **Copy — press its first letter**

Paste — P (Dots 1 2 3 4)

- Select All — S (Dots 2 3 4)
- View — first letter V (Dots 1 2 3 6):
- Sort by: Name, Date, Size, Last Read — S (Dots 2 3 4)
- Order by: Ascending, Descending — O (Dots 1 3 5)
- Show File Types — press its first letter
- The following commands also work directly in a file or folder list, without opening the menu:
- Dot 8 + R renames the focused item. Dot 8 + D deletes it. Dot 8 + N creates a new folder.
- Dot 8 + C copies, Dot 8 + X cuts and Dot 8 + V pastes. Dot 8 + A selects everything in the folder.
- Dot 8 + Z compresses to an archive and Dot 8 + U extracts from one.
- Dot 8 + F searches. Dot 8 + P speaks the properties of the focused item.
- Space marks or unmarks the focused item, and Dot 7 goes up one level.

5.4 Searching for a File

To locate a file, follow these steps:

1. Open the File Manager menu by pressing **Space + M**.
2. Expand the File sub-menu, use the **Arrow keys** to navigate to **> Search**, and press **Select**, or press **S (Dots 2 3 4)**.

A **Search dialog box** opens. This is a dialog, so use the following Braille commands inside it:

- Move to the **next control** = **Tab** = **Space + Dots 4 5**
- Move to the **previous control** = **Shift + Tab** = **Space + Dots > 1 2**
- Change a combo box value or toggle a checkbox = **Up Arrow / Down > Arrow** (Space + Dot 1 / Space + Dot 4)
- Activate a button or confirm = **Select** (Dot 8)

Enter the name or part of the file name in the edit field, then use **Tab** to reach **OK** and press **Select** to start the search.

You can also **Tab** to these additional options and set them with the **Up** and **Down Arrow** keys:

- **Case sensitive** search (on/off).
- **Search in subfolders** (current folder only or include all > subfolders).

A list of matching results appears. Use the **Up Arrow** and **Down Arrow** keys to browse through them. Press **Select** to open a file or press **Dot 7** to close the results.

If you type quickly while browsing files, an **incremental search** will automatically jump to items matching your typed letters.

5.5 Renaming Files or Folders

To rename a file or folder:

1. Locate the item and open the **File Manager menu** by pressing **> Space + M**.
2. Expand the File sub-menu, navigate to **Rename**, and press **> Select**, or press **R (Dots 1 2 3 5)**.
3. The **Rename dialog box** opens with an edit field and **OK / Cancel >** buttons.
4. Type the new name, press **Tab** (Space + Dots 4 5) to move to **> OK**, and press **Select** to confirm.

To close the dialog without changes, move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**.

5.6 Creating a New Folder

To create a new folder:

1. Navigate to the location where you want to create it.
2. Open the **File Manager menu**, expand the File sub-menu, and select **> New Folder**, or press **N (Dots 1 3 4 5)**.
3. The **Create Folder dialog** opens with a name field and **OK / Cancel >** buttons.

4. Enter the folder name, press **Tab** to move to **OK**, and press > **Select** to create it.

The new folder appears in the current directory according to your sorting preferences.

5.7 Copying, Moving, and Deleting Files

To copy or move a file:

1. Navigate the file.
2. To mark it, open the menu, expand the Edit sub-menu, and select > **Mark/Unmark**, or simply press **Space**.
3. Open the **File Manager menu** again, expand the Edit sub-menu, and > select **Copy** to copy or **cut** to move the file.
> The device will announce “Copied” or “Cut.”
4. Move to the target folder, open the menu, and select **Paste**.

If the operation takes longer than five seconds, progress will be announced at 10% intervals until completion.

5.7.1 Copy and Move Dialogs

When copying or moving files, a dialog appears showing:

- A **title**, “Copying” or “Moving.”
- A **progress bar** indicating progress.
- A **Cancel** button.
- A **static message** “Copying...” or “Moving...” followed by the > file name.

Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between controls, and press **Select** on **Cancel** to stop the operation.

To delete a file or folder:

1. Navigate to it and open the **File Manager menu**.
2. Choose **Delete** or press **D** (Dots 1 4 5).
3. The **Delete Confirmation** dialog opens with **Yes** and **No** > options.
4. Press **Tab** to move between **Yes** and **No**, then press > **Select** on **Yes** to confirm, or press **Space + Dots 1 3 5 6** > to cancel.

5.8 Marking Multiple Files

You can mark multiple files for operations like Copy, Cut, or Delete.

Press **Space** to mark or unmark a file or folder. You can only mark files within the same directory.

Each selection is announced, and pressing **Space** again unmarks it.

5.9 Sorting and Ordering Files

You can sort or reorder files as before:

1. Open the File Manager menu and navigate to **Sort By**.
2. Press the **Right Arrow** (Space + Dot 6) and choose one of the > options — by Name, Date, Size, or Last Read.
3. Press the **Left Arrow** (Space + Dot 3) to go back.
4. Navigate to **Order By**, press the **Right Arrow**, and choose > **Ascending** or **Descending**.
5. Press **Select** to apply and press the **Left Arrow** repeatedly > to exit the menu.

5.10 Compressing and Extracting Files

You can now create and open ZIP archives directly from the File Manager.

To **compress files into an archive**:

1. Mark one or more files or folders with **Space**.
2. Open the File Manager menu, expand the File sub-menu, and choose > **Zip**, or press **Z (Dots 1 3 5 6)**.
3. The “Compress to Archive” dialog appears, containing:
 - Title: *Compress to Archive*
 - Progress bar showing compression progress.
 - Cancel button.
 - Static text: “Compressing to...” followed by the file name.
4. Press **Tab** to move to **OK** and press **Select** to begin.

To **extract from an archive**:

1. Select a ZIP file.
2. Open the File Manager menu, expand the File sub-menu, and choose > **Unzip**.
3. The “Extract from Archive” dialog appears, containing:
 - Title: *Extract from Archive*
 - Progress bar showing extraction progress.
 - Cancel button.
 - Static text: “Extracting from...” followed by the file name.
4. Press **Tab** to move to **OK** and press **Select** to begin > extraction.

During both actions, progress is announced in percentage intervals.

5.11 Exiting the File Manager

To close the File Manager, press **Dot 7** repeatedly to move up through the lists, or press **Space + Dots 1 3 5 6** to close the application, or press **Space + Dots 1 2 3 4 5 6** to return to the home screen.

Your last location is remembered and will reopen automatically next time.

6 Editor

6.1 Your First Document

Your Orbit Speak offers you the ability to create and edit simple text files in TXT format, as well as Braille files in BRF format, including contracted Braille. For specifics regarding contracted Braille support, see chapter 3.3.1.

To create your first file, do the following:

- Switch to the Home screen by pressing **Space + Dots 1 2 3 4 5 6**.
- Using **Up** and **Down** arrows, navigate to the Editor menu item, or use the quick access command **E** (**Dots 1 5**). You will hear a message that a new empty text file has been opened. The device is ready for text input.
- Type some text according to the selected Braille table using the Perkins keyboard. Each time you type a character; the device speaks it out by default. If you have typed the wrong character, press **Dot 7** to delete it. You will hear that the character was deleted. When you press **Space** or type a punctuation mark, the device can read the entire word. If you want to change your typing echo, i.e., what Orbit Speak announces when you type, refer to the chapter on Settings. To read the current line, press **Space + Dots 1 4**. To start a new line, press **Dot 8** or the **Select** key.
Below in this section you will find a list of all the actions for navigating and editing text.
- Reading all the text you have typed. To do this, press **Space + Dots 1 2 3** to go to the beginning of the document. Then press **Dots 1 2 4 5 8** to read the text from the current position, which is at the beginning, to the end of the document.
- Saving your document. To do this, press **Space + Dots 2 3 4**. The Save File dialog box opens. It contains the file name and the *OK* and *Cancel* buttons. You can navigate between these items using the Up and down arrow keys.
- Navigate to the file name. You can change the default file name to the one you want. Use Left and Right arrow keys to move through the file name characters. To delete a character, use **Dot 7**. Type in the desired file name. When you are finished, press the **Select** key.
- A menu will open where you need to select a location to save your file. This can be SD card or Internal storage. We recommend that you use the SD card and create the folders you need yourself (See the chapter on File Manager). But for the sake of this example, select Internal Storage. Press the **Select** key.

- You will be on the list of internal storage folders. Using the Up and down arrow keys, navigate to the *Documents* folder and press the **Select** key.
- Then use **Space + Dots 4 5** (Tab) to move to the OK button and > press the **Select** key. Your file will be saved.

6.2 Contracted Braille support

Starting with version 1.2, Orbit Speak allows opening and creating Braille files in BRF format, as well as Unicode Braille, BRA, and BRL files.

Braille file support uses the Liblouis Braille translator, along with its built-in Braille tables.

This support, including contracted Braille entry, text editing, and navigation, might work a little differently on Orbit Speak compared to other similar devices. We recommend you read this chapter to properly understand how to work with Braille files, so that you can be as productive as possible.

Below is an overview of the way in which Braille support works:

1. When opening a BRF file for reading or editing, the file automatically gets expanded to standard text (computer Braille). This means that, while you will be able to read the content of the file correctly, navigation by character will work as navigating in computer Braille-based text, without contractions, or literary Braille signs. For example, when a word contains the characters “sh,” instead of hearing “sh sign” when navigating with the left/right arrow keys, you will hear “sh” as individual characters.
2. For the file to be translated correctly when opened or saved as BRF, you must select the Braille code with which you want to work from the device’s settings. Go to the settings application from the home screen, locate the newly added Braille settings option, and activate it. In the list of Braille tables, select the one you want to work with, for example, English, Unified, Contracted, and press the ok button. Now, every Braille translation operation will be performed using that Braille table.
3. Braille entry, including contracted Braille, is available throughout Orbit Speak. You can enter contracted Braille not only in the Editor but in every application, including search and text fields such as those in the Book Reader and Online Libraries.
4. When editing text in contracted Braille, translation is performed every time you press the space bar, go to a new line, or type a punctuation mark followed by space. This means that everything you type gets expanded to computer Braille (standard text) after translation is successfully complete. Keyboard echo will read the Braille characters as expected while typing, and the translated word will be read after pressing space bar if the word key echo is enabled. If you want to perform a translation without inserting a space or a new line character, for example, during correction of existing text, press space with dot 8.
5. When editing existing text, navigation is done as per computer Braille standards, since the text is expanded automatically, like mentioned before. However, the insertion of text corrections, as well as new text, can be done according to the chosen Braille code.
6. Orbit Speak includes a global screen reader service that performs Braille translation across the system. This is what makes contracted Braille entry available in every application, rather than in the Editor alone.

6.3 Opening and Saving an Existing Text or Braille Document

To open an existing text or Braille document, do the following:

- Switch to the Home screen by pressing **Space + Dots 1 2 3 4 5 6**.
- Using UP and Down arrows, navigate to the Editor menu item, or use the quick access command **E (Dots 1 5)**. You will hear a message that a new empty file has been opened.
- Press **Dots 1 3 5 8 simultaneously**. The Open File dialog box opens.
- Select file location using Up and Down arrow keys. This can be SD card or Internal storage. Press the **Select** key.
- You will land on a list of folders and files. Use Up and Down arrow keys to navigate through the list. Press the **Select** key to select a folder. To go up a level, press **Dot 7**.
- When you have located your file, press the **Select** key. The file will be opened.

Note: Only one file can be opened at a time. Remember to save your changes if you want to open another file.

To save changes to an existing open file, press **Dots 2 3 4 8**.

6.4 Editor Menu

The Editor application has a menu where you can always find a list of all the actions.

Press **Space + M (Space + Dots 1 3 4)** to open the menu.

This menu contains various items and submenus. Use Up and down arrow keys to navigate between menu items.

Press **the Right Arrow** to open a submenu.

To exit the submenu to an upper level, press **Left Arrow**.

To exit the context menu, go to the top level and press **the Left Arrow** again.

To select a menu item, press the **Select** key. The context menu will close and the action you selected will be carried out.

The full Editor menu is outlined below.

- File, F;
- New, N;
- Open, O;
- Save, S;
- Save as, A;
- Exit, X.

- Edit, E;
- Start Selection, B;
- Copy, Y;
- Cut, C;
- Paste, P;
- Delete, D;
- Select all, A.
- Read, R:
- Read selected text, D;
- Read from beginning to cursor, B;
- Read from cursor to end, E;
- Read current sentence, S;
- Read current line, L;
- Read current word, W;
- Read current character, C.

Each menu item is followed by its quick access command. This is a letter that you type on the Perkins keyboard to carry out the command.

For example:

To select all text, press **Space + M**, then the letter **E**, then **A**.

To read the current line, press **Space + M**, then the letter **R**, then **L**.

6.5 Editor Commands

In addition to the context menu, there are lots of various commands that make working with a document easier and faster. Here you will find a list of all commands of the Editor application. Note that some actions can be performed in more than one way. In this case, several commands for the same action are listed and separated by a semicolon.

- Go to the next character — **Space + Dot 6; Right Arrow**.
- Go to the previous character — **Space + Dot 3; Left Arrow**.
- Go to the next word — **Space + Dot 5; Space + Right Arrow**.
- Go to the previous word — **Space + Dot 2; Space + Left Arrow**.
- Read the next line — **Space + Dot 4; Down Arrow**.

- Read the previous line — **Space + Dot 1; Up Arrow.**
- Move the cursor to the beginning of the line — **Space + Dots 1 3.**
- Move the cursor to the end of the line — **Space + Dots 4 6.**
- Move the cursor to the beginning of the document — **Space + Dots 1 2 3.**
- Move the cursor to the end of the document — **Space + Dots 4 5 6.**
- Insert new line — **Select; Dot 8.**
- Delete the previous character (analogous to the Backspace key on PC) — **Dot 7.**
- Delete the character under the cursor (analogous to the Delete key on PC) — **Space + D (Space + Dots 1 4 5).**
- Enable/disable selection mode — **Dots 1 2 8.**
- Copy selected text — **Dots 1 4 8.**
- Cut selected text — **Dots 1 3 4 6 8.**
- Paste text you copied or cut before — **Dots 1 2 3 6 8.**
- Select All — **Dots 1 8.**
- Read the current line (press twice quickly to spell) — **Space + Dots 1 4.**
- Read the current word (press twice quickly to spell) — **Space + Dots 2 5.**
- Read the current character — **Space + Dots 3 6.**
- Read everything from the cursor to the end of the document — **Dots 1 2 4 5 8.**
- Read everything from the beginning of the document to the cursor — **Space + Dots 1 2 4 5 7.**
- Read the selected text — **Space + Dots 1 2 7.**
- Open context menu — **Space + M (Space + Dots 1 3 4).**
- Create a new document — **Dots 1 3 4 5 8.**
- Open a document — **Dots 1 3 5 8.**
- Save an existing document — **Dots 2 3 4 8.**
- Save a new untitled document or save a document under a new name — **Space + Dots 2 3 4.**
- Close the Editor application — **Space + Dots 1 3 5 6.**

7 Book Reader

The Book Reader application allows you to read books and documents on Orbit Speak.

Book Reader supports DAISY books, audiobooks, Microsoft Word files, TXT files, textual PDF files, HTML files, and EPUB files.

DAISY books and audiobooks must be provided as zipped files.

You can keep books on My Bookshelf, continue reading books, open downloaded books, search inside books, move by different reading units, use bookmarks, and adjust reading and speech settings.

7.1 Opening the Book Reader Application

To open **Book Reader**, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to Book Reader with the **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + Dot 4).
3. Press **Select** (Dot 8) or press **B (Dots 1 2)**.

To close Book Reader, press **Dot 7** until the application closes, or press **Space + Dots 1 3 5 6**, or press **Space + Dots 1 2 3 4 5 6** to return to the home screen.

7.2 Choosing What to Read

The first list in Book Reader helps you choose where you want to find or manage books.

The list contains the following items:

1. My Bookshelf
2. Online Services
3. Downloaded Books
4. Recently Read

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** on an item to continue.

After you select an item, the application shows the relevant content. For example, selecting My Bookshelf shows books stored in your bookshelf, selecting Downloaded Books shows books downloaded from online services, and selecting Recently Read shows books you opened recently.

Press **Select** on an item to open it, read it, or move one level deeper.

Press **Dot 7** to move one level higher. If you are already on the first list, pressing **Dot 7** to close Book Reader.

7.3 My Bookshelf

My Bookshelf contains books and supported reading content found on your Orbit Speak.

By default, Book Reader scans the following folders on internal storage and on the SD card:

- **Audiobooks**

- **Books**
- **Documents**

Supported files found in these folders are added to My Bookshelf automatically.

For DAISY books and audiobooks, add the zipped file to one of these folders. DAISY books and audiobooks must remain zipped to be detected and opened correctly.

You can also add books manually from internal storage or from an SD card.

Use My Bookshelf for books and documents you want to keep available in Book Reader.

To open My Bookshelf, open **Book Reader**, navigate to **My Bookshelf**, and press **Select**.

Use the **Up Arrow** and **Down Arrow** keys to move through the book list.

Press **Select** on a book to open it.

When a book opens, Book Reader starts at the saved reading position if one is available.

7.4 Adding Books

Book Reader adds supported content to My Bookshelf automatically when it scans the **Audiobooks**, **Books**, and **Documents** folders on internal storage and on the SD card.

Use **Scan Files** from the Book Reader context menu after copying new books or documents to these folders.

You can also add a book manually from internal storage or from an SD card.

For DAISY books and audiobooks, make sure the book is a zipped file before adding it.

To add a book manually, do the following:

1. Open **Book Reader**.
2. Press **Space + M (Space + Dots 1 3 4)** to open the context > menu.
3. Navigate to **Add Book** or press **A (Dot 1)**.
4. Press **Select**.

A file picker dialog opens.

1. Choose **Internal Storage** or **SD Card**, if an SD card is > inserted.
2. Navigate to the folder that contains the book.
3. Press **Select** on the book you want to add.

The book is added to My Bookshelf and opens for reading.

To close the file picker without adding a book, press **Dot 7**.

7.5 Downloaded Books

Downloaded Books contains books downloaded or borrowed from online services.

Use Downloaded Books when you want to open a book that was downloaded from an online library.

To open Downloaded Books, open **Book Reader**, navigate to **Downloaded Books**, and press **Select**.

Use the **Up Arrow** and **Down Arrow** keys to move through downloaded books.

Press **Select** on a book to open it.

7.6 Recently Read

Recently Read contains the last ten books you opened.

Use Recently Read when you want to quickly continue a book without searching for it again.

To open Recently Read, open **Book Reader**, navigate to **Recently Read**, and press **Select**.

Use the **Up Arrow** and **Down Arrow** keys to move through recently read books.

Press **Select** on a book to reopen it from the last saved reading position.

7.7 Context Menus in Book Reader

Book Reader includes context menus that provide actions for the item or screen you are currently using.

The available context menu items change depending on where you are. For example, the context menu in the first list contains application-level actions, the context menu in My Bookshelf contains book actions, and the context menu in the reading view contains reading, search, and bookmark actions.

To open a context menu, press **Space + M (Space + Dots 1 3 4)**.

Use the **Up Arrow** and **Down Arrow** keys to move through the menu items.

Press **Select** to activate the focused item.

Press the **Left Arrow (Space + Dot 3)** to close the context menu without selecting an item.

Context menus also support first-letter navigation. When a context menu is open, you can activate an item by typing its first-letter letter on the Perkins keyboard.

7.8 Book Reader Context Menu

The Book Reader context menu is available when focus is in the first Book Reader list.

The context menu includes the following items:

Add Book — first letter **A (Dot 1)**

Opens a file picker dialog so you can add a book from internal storage or an SD card.

Scan Files — first letter **S (Dots 2 3 4)**

Scans the **Audiobooks**, **Books**, and **Documents** folders on internal storage and the SD card and adds supported books and documents to My Bookshelf.

Use this option after copying new books or documents to the device.

Clear Recent — first letter **C** (Dots 1 4)

Clear all books from the Recently Read list.

This does not delete the books from My Bookshelf or from storage.

Book Reader Settings — first letter **B** (Dots 1 2)

Opens the Book Reader Settings dialog.

Book Reader Speech Options — type its first letter

Opens speech options for the reading view.

Use Book Reader Speech Options when you want Book Reader to use a different voice for reading books than the main text-to-speech voice system.

Exit — first letter **E** (Dots 1 5)

Closes Book Reader and returns to the Home Screen.

7.9 Bookshelf Context Menu

The Bookshelf context menu is available when focus is on a book in My Bookshelf.

To open the context menu, move to a book and press **Space + M**.

The context menu includes the following items:

Add Book — first letter **A** (Dot 1)

Opens a file picker dialog so you can add another book to My Bookshelf.

Open Book — first letter **O** (Dots 1 3 5)

Opens the selected book for reading.

Delete Book — first letter **D** (Dots 1 4 5)

Deletes or removes the selected book.

When you choose **Delete Book**, a confirmation dialog opens with the following options:

- **Delete from Bookshelf:** Removes the book from My Bookshelf but > keeps the file on the device.
- **Delete from Device:** Deletes the book file from storage.
- **Cancel:** Closes the dialog without deleting anything.

In this dialog, use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the options and press **Select** to choose one.

Warning: **Delete from Device** removes the file from storage. Make sure you no longer need the book before choosing this option.

Exit — first letter **E** (**Dots 1 5**)

Closes Book Reader and returns to the Home Screen.

7.10 Recently Read Context Menu

The Recently Read context menu is available when focus is in the Recently Read list.

The context menu includes the following items:

Open Book — first letter **O** (**Dots 1 3 5**)

Opens the selected book from the Recently Read list.

Clear Recent — first letter **C** (**Dots 1 4**)

Clear all books from the Recently Read list.

This does not delete the books from My Bookshelf or from storage.

Exit — first letter **E** (**Dots 1 5**)

Closes Book Reader and returns to the Home Screen.

7.11 Reading a Book

When a book is open, Book Reader enters the reading view.

The reading view allows you to start and stop reading, move through the book, search for text, go to a specific location, use bookmarks, and adjust reading options.

Depending on the **Automatically Read** setting, Book Reader can start reading automatically when a book opens. If automatic reading is off, press **Select** (Dot 8) to start reading.

Press **Select** again to pause or resume reading.

7.12 Reading Commands

The following commands are available in the reading view:

- **Select** (Dot 8): Start, pause, or resume reading.
- **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + Dot 4): > Choose the movement unit.
- **Left Arrow** (Space + Dot 3) and **Right Arrow** (Space + Dot 6): > Move by the selected movement unit.
- **Dot 7 + F1** and **Dot 7 + F4**: Decrease or increase Book Reader > volume.
- **Space + F1** and **Space + F4**: Decrease or increase reading > speed.
- **Dot 8 + B**: Add a bookmark at the current reading position.

- **Dot 8 + F:** Find Next — move to the next occurrence of the last search text.
- **Dot 7 + F:** Find Previous — move to the previous occurrence of the last search text.
- **Space + M (Space + Dots 1 3 4):** Open the reading view > context menu. Use it to open the Find dialog, open the Go To > dialog, and work with bookmarks.
- **Where Am I:** Announces the current reading position and other > available position information. It is available from the reading > view context menu.
- **Dot 7:** Close the book and return to the previous Book Reader > list.

Book Reader volume is relative to the system volume. For example, if the system volume is set to 50 percent, the maximum Book Reader volume is limited by that system volume level.

7.13 Movement Units While Reading

Movement units' control what the **Left Arrow** and **Right Arrow** keys do while you are reading.

They let you choose how you want to move through the current book. For example, you can move by time, word, sentence, page, heading, or bookmark.

During reading:

- Use the **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + > Dot 1) keys to choose the movement unit.
- Use the **Left Arrow** (Space + Dot 3) and **Right Arrow** (Space + > Dot 6) keys to move by the selected movement unit.

For example:

- If the selected movement unit is **1 minute**, press the **Right > Arrow** to move forward one minute, or press the **Left Arrow** to > move backward one minute.
- If the selected movement unit is **Word**, press the **Right Arrow >** to move to the next word, or press the **Left Arrow** to move to > the previous word.
- If the selected movement unit is **Sentence**, press the **Right > Arrow** to move to the next sentence, or press the **Left Arrow >** to move to the previous sentence.
- If the selected movement unit is **Page**, press the **Right Arrow >** to move to the next page, or press the **Left Arrow** to move to > the previous page.
- If the selected movement unit is **Heading**, press the **Right > Arrow** to move to the next heading, or press the **Left Arrow** to > move to the previous heading.
- If the selected movement unit is **Bookmark**, press the **Right > Arrow** to move to the next bookmark, or press the **Left Arrow >** to move to the previous bookmark.

Orbit Speak announces the selected movement unit when you change it.

Available movement units include:

- 1 minute
- 2 minutes
- 5 minutes
- 10 minutes
- Word
- Sentence
- Page
- Bookmark
- Heading Level 1
- Heading Level 2
- Heading Level 3

The movement units available in a book depend on the book format and structure. For example, page navigation requires page information, heading navigation requires headings in the book, and bookmark navigation requires bookmarks in the book.

7.14 Find and Go to Dialogs

The reading view includes dialogs for finding text and moving to a specific location.

Find Dialog

The Find dialog allows you to search for text in the current book.

To search in a book, do the following:

1. While reading a book, press **Space + M** to open the reading view > context menu and choose **Find**.

The Find dialog opens.

1. Enter the text you want to find.
2. Press **Tab** (Space + Dots 4 5) to move to **OK** and press > **Select**.

If a match is found, Book Reader moves to the matching text.

If no matching text is found, Orbit Speak speaks a message and your reading position does not change.

To close the dialog without searching, press **Space + Dots 1 3 5 6**, or move to **Cancel** and press **Select**.

Find Next and Find Previous

After you search for text, use Find Next to move to the next occurrence of the same search text. Press Dot 8 + F to Find Next.

Press Dot 7 + F to Find Previous, which moves to the previous occurrence of the search text.

Find Next and Find Previous are also available from the reading view context menu.

Go To Dialog

The Go To dialog allows you to move directly to a specific place in the book.

To go to a location, do the following:

1. While reading a book, press **Space + M** to open the reading view > context menu and choose **Go To**.

The Go to Dialog is open.

1. Choose the type of location, such as **Page** or **Percentage**, > using the **Up Arrow** and **Down Arrow** keys to change the combo > box value.
2. Press **Tab** to move to the value field and enter the value.
3. Press **Tab** to move to **OK** and press **Select**.

If the location is valid, Book Reader moves to that location.

If the location is not valid, Orbit Speak speaks an error message and keeps the dialog open so you can correct the value.

To close the dialog without moving, press **Space + Dots 1 3 5 6**, or move to **Cancel** and press **Select**.

7.15 Reading View Context Menu

The Reading View context menu is available while a book is open.

To open the context menu, press **Space + M** (**Space + Dots 1 3 4**) from the reading view.

The context menu includes the following groups of actions:

7.15.1 File Actions

File actions allow you to open or close books.

They include:

- **Open Book** — first letter **O** (**Dots 1 3 5**): Opens a file > picker so you can choose another book.
- **Close Book** — first letter **C** (**Dots 1 4**): Closes the > current book and returns to My Bookshelf.
- **Close Book and Clear Position** — type its first letter: Closes the current book > and clears the saved reading position for that book.
- **Exit** — first letter **E** (**Dots 1 5**): Closes Book Reader and > returns to the Home Screen.

7.15.2 Go To Actions

Go To actions allow you to search or move to a specific location.

They include:

- **Find** — first letter **F** (**Dots 1 2 4**): Opens the Find > dialog.
- **Find Next** — Dot 8 + F: Moves to the next occurrence of the last search text.

- **Find Previous** — Dot 7 + F: Moves to the previous occurrence of the last search text.
- **Go To** — first letter **G** (Dots 1 2 4 5): Opens the Go To > dialog.

7.15.3 Reading Actions

Reading actions read specific parts of the current book.

They include:

- **Toggle Continuous Reading** — first letter **T** (Dots 2 3 4 > 5): Starts or stops continuous reading.
- **Read Current Paragraph** — first letter **R** (Dots 1 2 3 5): > Reads the current paragraph.
- **Read Current Sentence** — type its first letter: Reads the current > sentence.
- **Read Current Page** — type its first letter: Reads the current > page.

7.15.4 Bookmark Actions

Bookmark actions allow you to save and return to reading positions.

They include:

- **Set Bookmark** — first letter **S** (Dots 2 3 4)
- **Jump to Bookmark** — first letter **J** (Dots 2 4 5)
- **Delete Bookmark** — first letter **D** (Dots 1 4 5)
- **Bookmarks List** — first letter **B** (Dots 1 2)

Press the **Left Arrow** (Space + Dot 3) to close the context menu.

7.16 Bookmarks

Bookmarks allow you to save important positions in a book and return to them later.

You can move between bookmarks from the reading view context menu or by using the **Bookmark** movement unit while reading.

7.16.1 Setting a Bookmark

To set a bookmark, do one of the following:

- Press **Dot 8 + B** while reading.
- Open the reading view context menu and choose **Set Bookmark**.

To set a bookmark from the context menu, do the following:

1. Open the book.
2. Move to the position where you want to place the bookmark.
3. Press **Space + M** to open the reading view context menu.
4. Navigate to **Set Bookmark** or press **S** (Dots 2 3 4).

5. Press **Select**.

The bookmark is saved.

7.16.2 Jumping to a Bookmark

To jump to a bookmark from the context menu, do the following:

1. Open the reading view context menu.
2. Navigate to **Jump to Bookmark** or press **J (Dots 2 4 5)**.
3. Press **Select**.
4. Choose the bookmark you want.
5. Press **Select**.

Book Reader moves to the selected bookmark.

To move between bookmarks while reading, choose **Bookmark** as the movement unit. Then press the **Right Arrow** to move to the next bookmark, or the **Left Arrow** to move to the previous bookmark.

7.16.3 Deleting a Bookmark

To delete a bookmark, do the following:

1. Open the reading view context menu.
2. Navigate to **Delete Bookmark** or press **D (Dots 1 4 5)**.
3. Press **Select**.
4. Choose the bookmark you want to delete.
5. Press **Select**.

The bookmark is removed.

7.16.4 Bookmarks List

The **Bookmarks List** option shows all bookmarks for the current book. Open the context menu (**Space + M**) and choose **Bookmarks List** or press **B (Dots 1 2)**.

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** on a bookmark to move to it.

7.17 Book Reader Settings

The Book Reader Settings dialog allows you to customize how Book Reader behaves when opening and navigating books.

To open Book Reader Settings, do the following:

1. Open **Book Reader**.
2. Press **Space + M** to open the context menu.

3. Navigate to **Book Reader Settings** or press **B (Dots 1 2)**.
4. Press **Select**.

This is a dialog. Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the settings and use the **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + Dot 4) to change the value of the focused setting.

The settings dialog includes the following settings:

7.17.1 Automatically Read

This setting controls whether Book Reader starts reading automatically when a book opens.

The available options are:

- **On:** Book Reader starts reading automatically when a book opens.
- **Off:** Book Reader waits for you to press **Select** before > reading.

Use the **Up Arrow** and **Down Arrow** keys to choose the option you prefer.

7.17.2 Preferred Reading Mode for DAISY Books

DAISY books can contain text, recorded audio, or both.

This setting controls which reading mode Book Reader uses for DAISY books.

The available options are:

- **Text Mode:** Book Reader reads the book text using text-to-speech.
- **Audio Mode:** Book Reader plays the recorded audio included in the > DAISY book.

Use the **Up Arrow** and **Down Arrow** keys to choose the option you prefer.

7.17.3 Heading Level Navigation

This setting controls how heading navigation works.

The available options are:

- **Current Level:** Moves only through headings at the selected > heading level.
- **Current Level Plus Higher Levels:** Moves through headings at the > selected level and higher levels.

For example, if you are reading at Heading Level 2, **Current Level** moves only through Heading Level 2 headings. **Current Level Plus Higher Levels** moves through Heading Level 2 and Heading Level 1 headings.

Use the **Up Arrow** and **Down Arrow** keys to choose the option you prefer.

7.17.4 Saving or Cancelling Book Reader Settings

Press **Tab** to move to **OK** and press **Select** to save your changes.

Move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to close the dialog without saving changes.

7.18 Book Reader Speech Options

The Book Reader Speech Options dialog allows you to choose the voice used for reading books.

Use this dialog when you want Book Reader to use a different voice from the main system text-to-speech voice. For example, you can keep one voice for menus and system messages and use another voice for reading books.

These settings affect Book Reader reading speech. They do not change the general system speech settings used outside the reading view.

To open Book Reader Speech Options, do the following:

1. Open **Book Reader**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Book Reader Speech Options** (press its first letter >, since it shares “B” with Book Reader > Settings).
4. Press **Select**.

The dialog includes the following settings:

7.18.1 Engine

This setting allows you to choose the speech engine used for reading.

7.18.2 Language

This setting allows you to choose the reading language.

Voice

This setting allows you to choose the voice.

7.18.3 Speech Rate

This setting allows you to choose how fast Book Reader reads.

7.18.4 Pitch

This setting allows you to adjust the voice pitch.

7.18.5 Volume

This setting allows you to adjust the reading volume.

Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the settings.

Use the **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + Dot 1) to change the value of the focused setting.

Press **Tab** to move to **OK** and press **Select** to save your changes.

Move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to close the dialog without saving changes.

7.19 Closing Book Reader

To move one level higher in Book Reader, press **Dot 7**.

To close the current book and return to the previous Book Reader list, press **Dot 7** from the reading view, or use **Close Book** from the reading view context menu.

To completely close Book Reader, press **Space + Dots 1 2 3 4 5 6** to return to the home screen, or press **Space + Dots 1 3 5 6**, or open the context menu and choose **Exit**.

8 Online Libraries

8.1 About Online Libraries

The **Online Libraries** feature allows you to access supported online library services from Book Reader.

You can add online services, log in to library accounts, browse library categories, search for books, view book information, download books, stream books when supported, and borrow or return books when supported by the service.

Online Libraries require an active internet connection.

Books downloaded from online libraries appear in **Downloaded Books** in Book Reader.

8.2 Opening Online Services

Online library services are available from the **Online Services** item in Book Reader.

To open Online Services, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to **Book Reader**.
3. Press **Select** or press **B (Dots 1 2)**.
4. Navigate to **Online Services**.
5. Press **Select**.

The Online Services list opens.

If you have already added online services, they appear in this list.

If no services have been added yet, Orbit Speak speaks a message telling you that no online services are available and that you can use the context menu to add one.

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** on a service to open it.

Press **Dot 7** to return to the first list in Book Reader.

8.3 Adding an Online Service

To use an online library, you must add the service and log in with your account.

To add an online service, do the following:

1. Open **Online Services**.
2. Press **Space + M (Space + Dots 1 3 4)** to open the context > menu.
3. Navigate to **Add Online Service** or press **A (Dot 1)**.
4. Press **Select**.

A list of supported online library services opens.

1. Navigate to the service you want to add.
2. Press **Select**.

A login dialog opens.

The login dialog is a dialog. Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the Username field, the Password field, **OK**, and **Cancel**.

1. Enter your username.
2. Press **Tab** and enter your password.
3. Press **Tab** to move to **OK** and press **Select**.

If the login is successful, the service is added to the Online Services list.

If the login information is not correct, or if the service cannot be reached, Orbit Speak speaks an error message.

To close the login dialog without adding the service, press **Space + Dots 1 3 5 6**, or move to **Cancel** and press **Select**.

8.4 Logging Out and Removing Online Service

You can remove an online service from the Online Services list.

To remove a service, do the following:

1. Open **Online Services**.
2. Navigate to the service you want to remove.
3. Press **Space + M** to open the context menu.
4. Navigate to **Delete and Log Out** or press **D (Dots 1 4 5)**.
5. Press **Select**.

A confirmation dialog opens.

1. Choose **Yes** to remove the service and log out.
2. Choose **No**, or press **Space + Dots 1 3 5 6**, to cancel. Use **> Tab** to move between **Yes** and **No** and **Select** to **>** confirm.

Warning: Removing an online service also removes books downloaded from that service.

8.5 Browsing an Online Library

After you add and log in to an online service, you can browse its available content.

To browse an online library, do the following:

1. Open **Online Services**.
2. Navigate to the service you want.
3. Press **Select**.

The library opens and shows its available categories.

Use the **Up Arrow** and **Down Arrow** keys to move through categories, subcategories, and book lists.

Press **Select** to open a category, show a book list, or open book information.

Press **Dot 7** to move one level higher.

The categories and available content depend on the selected online library.

8.6 Searching for Books

You can search for books in an online library.

To search for a book, do the following:

1. Open **Online Services**.
2. Open the online library service you want to search.
3. Press **Space + M** to open the context menu and choose **Search**, **>** or press **S (Dots 2 3 4)**.

The Search dialog opens.

1. Enter the search text.
2. Press **Tab** (Space + Dots 4 5) to move to **OK** and press **> Select**.

A list of matching books opens.

Use the **Up Arrow** and **Down Arrow** keys to move through the search results.

Press **Select** on a book to open its Book Information dialog.

If no matching books are found, Orbit Speak speaks a message.

Press **Dot 7** to return to the previous screen.

8.7 Book Information

The Book Information dialog shows details about a selected book.

To open Book Information, move to a book in an online library list or search results and press **Select**.

The Book Information dialog shows details such as:

- Title
- Author
- Format
- Availability

The dialog contains the following actions:

- **Download Book**
- **Close**

Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the actions.

Select **Download Book** to download the book.

Select **Close**, or press **Space + Dots 1 3 5 6**, to close the dialog without downloading.

8.8 Downloading Books

You can download a book from an online library and read it later from **Downloaded Books**.

To download a book, do one of the following:

- Open the Book Information dialog and choose **Download Book**.
- Move to a book, open the context menu, and choose **Download Book**.

A download screen opens and shows the download progress.

To cancel the download, press **Dot 7**.

When the download finishes, the book opens automatically in Book Reader.

Downloaded books are also added to **Downloaded Books**.

8.9 Streaming Books

Some online libraries support streaming.

Streaming allows you to read or listen to a book without downloading it first.

When streaming is available for the selected book, the context menu includes **Stream Book**.

To stream a book, do the following:

1. Move to the book.

2. Press **Space + M** to open the context menu.
3. Navigate to **Stream Book** (type its first letter).
4. Press **Select**.

The book starts playing or reading without being downloaded.

If streaming is not supported by the selected library or book, the Stream Book option is not shown.

8.10 Borrowing or Returning Books

Some online libraries require books to be borrowed before they can be read.

When borrowing is supported, the context menu includes **Issue Book** or a similar borrowing option.

To borrow a book, move to the book, open the context menu, and choose **Issue Book**.

After the book is issued, you can download or read it according to the library rules.

When a borrowed book can be returned, the context menu includes **Return Book**.

To return a book, move to the book, open the context menu, and choose **Return Book**.

Returning a book removes its borrowed status. Depending on the service, the downloaded copy can also be removed or become unavailable.

8.11 Context Menus in Online Libraries

Online Libraries include context menus that provide actions for the current service, category, book, or screen.

The available context menu items change depending on where you are and what the selected online library supports.

To open a context menu, press **Space + M** (**Space + Dots 1 3 4**).

Use the **Up Arrow** and **Down Arrow** keys to move through the menu items.

Press **Select** to activate the focused item.

Press the **Left Arrow** (**Space + Dot 3**) to close the context menu without selecting an item.

Context menus also support first-letter navigation. When a context menu is open, you can activate an item by typing its first-letter letter on the Perkins keyboard.

Common context menu items include:

Add Online Service — first letter **A** (**Dot 1**)

Opens a list of supported online library services so you can add and log in to a service.

Delete and Log Out — first letter **D** (**Dots 1 4 5**)

Removes the selected online service and logs out of the account.

Warning: This also removes books downloaded from that service.

Search — first letter **S** (Dots 2 3 4)

Opens the Search dialog.

Book Information — first letter **B** (Dots 1 2)

Opens the Book Information dialog for the selected book.

Download Book — type its first letter

Downloads the selected book.

Stream Book — type its first letter

Streams the selected book when streaming is supported.

Issue Book — first letter **I** (Dots 2 4)

Borrows or checks out the selected book when required by the online library.

Return Book — first letter **R** (Dots 1 2 3 5)

Returns a borrowed book when supported by the online library.

Exit — first letter **E** (Dots 1 5)

Closes Online Libraries or Book Reader, depending on where you are.

8.12 Reading Downloaded Books

Books downloaded from online libraries appear in **Downloaded Books** in Book Reader.

To open a downloaded book, do the following:

1. Open **Book Reader**.
2. Navigate to **Downloaded Books**.
3. Press **Select**.
4. Navigate to the book you want to read.
5. Press **Select**.

The book opens in Book Reader.

Reading commands, movement units, bookmarks, Find, Go To, and speech options work the same as described in the Book Reader section.

8.13 Closing Online Libraries

To move one level higher while browsing an online library, press **Dot 7**.

To return from Online Services to the first list in Book Reader, press **Dot 7** until the first list appears.

To close Book Reader completely, press **Space + Dots 1 2 3 4 5 6** to return to the home screen, or open the context menu and choose **Exit**.

9 Newspapers (Magazines)

9.1 Introduction

The Newspapers category lets you subscribe to newspapers and magazines from supported online libraries and read their issues in Book Reader. The operation, dialogs, and keys are the same as other Online Libraries and Downloaded Books sections; only the content is different.

If no newspapers are added yet, the Newspapers list says:

“No newspapers. Use the context menu to add a newspaper.”

Note: First-letter navigation is supported in all long lists for this feature. To know more about this feature, read the topic number 3, First letter navigation.

9.1.1 Opening the Newspapers category

1. Switch to the home screen by pressing **Space + Dots 1 2 3 4 5 6**.
2. Using the **Up Arrow** (Space + Dot 1) and **Down Arrow** (Space + > Dot 1) keys, navigate to **Book Reader**, and press **Select >** (Dot 8), or press **B (Dots 1 2)**.
3. In the Book Reader categories list, navigate to **Newspapers** and > press **Select**.
 - If newspapers are already added, the list shows each **subscribed > newspaper** and the **number of unread issues**.
 - If a newspaper has no new unread issues, the device announces this > when you focus on it.

To exit Newspapers and return to the Book Reader categories list, press **Dot 7**.

9.2 Adding a newspaper (subscribe)

Use the Newspapers context menu to add newspapers from a supported library.

1. With **Newspapers** open, press **Space + M (Space + Dots > 1 3 4)** to open the context menu.
2. Choose **Add newspaper** and press **Select** or press **A (Dot > 1)**.
 - > The **Select newspaper library** dialog opens with the list of > supported libraries.
3. Focus your preferred library using the **Up Arrow** and **Down > Arrow** keys and press **Select**.
 - If you are not logged in to that library, the standard **Login >** dialog opens with **Username**, **Password**, **OK**, and > **Cancel**. Use **Tab** (Space + Dots 4 5) and **Shift + Tab >** (Space + Dots 1 2) to move between these controls, type in the > fields, and press **Select** on **OK**.
 - If the login information you entered is incorrect, the device > announces that credentials are invalid.
 - If there is no internet connection, the device announces that > online services are unavailable.

4. After a successful login, the library shows its **newspaper > categories** (for example, by region, language, or topic). > Navigate to a category and press **Select**.
5. The list of **newspapers** in that category appears. Focus a > newspaper by navigating there using the **Up Arrow** and **Down > Arrow** keys and press **Select** to **subscribe**.
 - After subscribing, the **issues** for that newspaper are shown > immediately.
 - From this point forward, this newspaper appears in the main > **Newspapers** list.

To return to Newspapers without subscribing, press **Dot 7**.

9.3 Opening and reading an issue

1. From **Book Reader in the newspaper section**, focus a subscribed > newspaper and press **Select** to open its **issues** list.
2. Focus on the issue you want and press **Select**.
 - > The issue is **downloaded** and then **opens for reading** > automatically.

Reading and navigation work exactly as described in the Book Reader chapter:

- **Select** (Dot 8): start or stop reading.
- **Up Arrow** (Space + Dot 1) / **Down Arrow** (Space + Dot 4): > change between the navigational units supported by Book Reader.
- **Left Arrow** (Space + Dot 3) / **Right Arrow** (Space + Dot 6): > move to the next or previous item by the navigational unit > selected with the Up and Down Arrow keys.
- **Dot 7 + F1** / **Dot 7 + F4**: decrease or increase the Book > Reader-specific volume. This volume is relative to the system > volume, so if your system volume is at 50%, the 100% Book Reader > volume will sound like 50%.
- **Space + F1** / **Space + F4**: increase or decrease the reading > speed.

9.4 Managing newspapers and issues

Open the context menu (**Space + M**) at the level you are on (Newspapers list or a newspaper issues list) to manage items.

In the Newspapers list (focus on a newspaper):

- **Delete newspaper (unsubscribe)** — first letter **D** (Dots > **1 4 5**) — unsubscribes from the focused newspaper.
 - > A confirmation dialog is shown. Choose **Yes** to unsubscribe or > **Cancel** to keep it. Use **Tab** to move between the buttons and > **Select** to confirm.
 - > After unsubscribing, the newspaper is removed from the Newspapers > list.

In an issues list (focus on an issue):

- **Open** — first letter **O** (Dots **1 3 5**) — downloads (if > needed) and opens the issue for reading.

- **Delete** — type its first letter — removes the downloaded copy of the > focused issue (confirmation required).
- **Exit** — first letter **E** (**Dots 1 5**) — closes the issues > list and returns to the Newspapers list.

To leave Newspapers and return to the Book Reader categories, press **Dot 7**.

9.5 Notes

- **First-letter navigation** is supported in all long lists and combo > boxes used by this feature. To learn more about this feature, > please read topic 3: First letter navigation.
- The flow and controls are the same as other Online Libraries and > Downloaded Books screens.
- Availability of libraries and newspapers depends on your region and > account.

10 Braille Reader Application

10.1 Introduction

Braille Reader lets you open and read braille-formatted books and documents on Orbit Speak. It supports common braille file types such as **BRF**, **BRL**, and **BRA**.

For accurate words, select the matching **Braille table** in **Settings and Braille tables** before opening a file.

10.2 Locating and Opening the Application

To open Braille Reader, do the following:

1. If you are in another application, press **Space + Dots 1 2 3 4 5 6** > to return to the home screen.
2. Press the **Up Arrow** (Space + Dot 1) or **Down Arrow** (Space + > Dot 1) until you hear “**Braille Reader,**” or press its first letter >.
3. Press **Select** (Dot 8) to open the application.
4. On first open without a file loaded, the device announces that > Braille Reader is open (for example, “**Braille Reader, no > files**”). This simply means no book is open yet.

To close Braille Reader, press **Dot 7**, or press **Space + Dots 1 3 5 6**, or press **Space + Dots 1 2 3 4 5 6** to return to the home screen.

10.3 Opening and Reading the Book

You can open a book in two ways.

10.3.1 Open from the Braille Reader menu

1. With Braille Reader open, press **Space + M** (**Space + Dots > 1 3 4**) to open the context menu.
2. Press the **Down Arrow** to **File** (first letter **F**, **Dots > 1 2 4**), then press **Select** to open it.

3. Focus **Open** and press **Select** or press **O** (Dots 1 3 > 5).
4. The Open dialog announces the current storage location (for example, > **Internal storage** or **SD card**).
 - Choose a storage using the **Up Arrow** or **Down Arrow**, then > press **Select**.
5. You are now on a list of folders and files.
 - Move with the **Up Arrow** and **Down Arrow**.
 - Press **Select** on a folder to enter it.
 - Press **Dot 7** to go up one level.
6. Focus on a braille file (**brf**, **brl**, **bra**) and press > **Select**. The book opens and is ready for reading.

10.3.2 Open from File Manager

1. From the home screen, navigate to **Utilities**, then press > **Select**, or press **U** (Dots 1 3 6).
2. Navigate to **File Manager** and press **Select** to open it, or > press **F** (Dots 1 2 4).
3. Move through folders with the **Up Arrow** and **Down Arrow**.
 - Press **Select** to enter a folder.
 - Press **Dot 7** to go up one level.
4. Focus on a braille file (**brf**, **brl**, **bra**) and press > **Select**. The file opens directly in **Braille Reader**.

Note: Only one book can be open at a time.

11 [Media Player](#)

The **Media Player** application allows you to play audio files on Orbit Speak. It is mainly designed for music, but it can also play supported video files as audio only.

Media Player can organize your media in a library, play files from folders, show recently played items, search for media, manage playlists, create a temporary playback queue, and stream media from a URL.

Supported audio formats include:

- MP3
- WAV
- WMA
- FLAC
- AAC
- RA

- M4A
- OGG
- APE

11.1 Opening the Media Player

On the Orbit Speak you move through screens with the five navigation keys, each of which has a Braille-chord equivalent:

- **Up Arrow = Space + Dot 1**
- **Down Arrow = Space + Dot 4**
- **Left Arrow = Space + Dot 3**
- **Right Arrow = Space + Dot 6**
- **Select = Dot 8**

To open **Media Player**, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the home screen.
2. Navigate to **Media Player** with the **Up Arrow** and **Down Arrow** keys.
3. Press **Select** or press the first letter **M** (**Dots 1 3 4**).

To close Media Player, press **Left Arrow** (**Space + Dot 3**) until the application closes, or press **Space + Dots 1 3 5 6** to exit the application, or press **Space + Dots 1 2 3 4 5 6** to return to the home screen.

11.2 Choosing What to Play

The first list in Media Player helps you choose how you want to find or play media.

The list contains the following items:

1. **Library** — first letter **L** (**Dots 1 2 3**)
2. **Folders** — first letter **F** (**Dots 1 2 4**)
3. **Recently Played** — first letter **R** (**Dots 1 2 3 5**)
4. **Search** — first letter **S** (**Dots 2 3 4**)
5. **Playlists** — first letter **P** (**Dots 1 2 3 4**)

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** on an item to continue or type the item's first letter.

After you select an item, the application shows the relevant content. For example, selecting **Library** shows the library sections, selecting **Folders** shows available storage locations, and selecting **Playlists** shows your saved playlists.

Press **Select** on an item to open it, play it, or move one level deeper.

Press **Left Arrow (Space + Dot 3)** to move one level higher. If you are already on the first list, pressing **Left Arrow** closes Media Player.

11.3 Library

The **library** item organizes media files found on your Orbit Speak.

The library is offered only when Enable Music Library is turned on in the Media Player settings. When that setting is off, the Library item does not appear, and Folders, Recently Played, Search and Playlists are used instead.

To open the library, do the following:

1. Open **Media Player**.
2. Navigate to **Library**.
3. Press **Select** or press **L (Dots 1 2 3)**.

When Media Player opens, Orbit Speak automatically scans for supported media files and adds them to the library. It scans the whole of internal storage and of the SD card, including supported files in subfolders. Ringtones, Notifications and Alarms folders at the top of a volume are skipped.

The library uses information from the media files, such as track title, artist, and album, to organize your music.

The library contains the following sections:

1. **Recently Added** — first letter **R (Dots 1 2 3 5)**
2. **Artists** — first letter **A (Dot 1)**
3. **Albums** — type their first letter
4. **Songs** — first letter **S (Dots 2 3 4)**
5. **Genre** — first letter **G (Dots 1 2 4 5)**

Use the **Up Arrow** and **Down Arrow** keys to move through the library sections. Press **Select** to open the focused section. Press **Left Arrow (Space + Dot 3)** to return to the first list.

11.3.1 Recently Added

The **Recently Added** section shows tracks that were recently added to the media library.

Use this section when you have copied new music to the device and want to find it quickly.

11.3.2 Artists

The **Artists** section shows artists found in the media library.

When you select an artist, Media Player shows albums by that artist first. If no album information is available, it shows the songs by that artist directly.

11.3.3 Albums

The **Albums** section shows albums found in the media library.

When you select an album, Media Player shows the songs in that album.

11.3.4 Songs

The **Songs** section shows all songs found in the media library.

Use the **Up Arrow** and **Down Arrow** keys to move through the songs. Press **Select** to play the focused song.

11.3.5 Genre

The **Genre** section lists songs by their genre, such as pop, rock, and so on.

Note: The artists, albums, and genre lists show only songs that have a singer, album name, genre, or artist's name stored in their properties.

To revisit the tracks you have heard recently, open **Recently Played**.

To find something specific, open **Search** by navigating to it and pressing **Select**, or by pressing **S (Dots 2 3 4)**.

11.4 Folders

The **Folders** item allows you to play media files from a folder-based view, similar to File Manager.

Use this item when you want to browse storage directly instead of using the organized media library.

To open Folders, do the following:

1. Open **Media Player**.
2. Navigate to **Folders**.
3. Press **Select** or press **F (Dots 1 2 4)**.

A list of available storage locations opens.

The list includes:

- **Internal Storage**
- **SD Card**, if an SD card is inserted

Choose the storage location you want and press **Select**.

Media Player shows only folders that contain supported media files. Subfolders are included. This makes it easier to find playable media without browsing through unrelated folders.

Use the **Up Arrow** and **Down Arrow** keys to move through folders and files.

Press **Select** on a folder to open it.

Press **Dot 7** to return to the previous folder level.

Press **Select** on a media file to start playback.

When playback is started from a folder, the previous track (**Dot 1**) and next track (**Dot 4**) commands move only between supported media files in the selected folder.

The context menu in Folders provides the same actions available for media items, such as **Play**, **Play Next**, **Add to Queue**, **Create Playlist**, **Add to Playlist**, **Delete**, and **Properties**.

If the context menu is opened on a folder, playlist actions apply to the supported songs in that folder. For example, **Create Playlist** creates a playlist and adds the supported songs from the folder.

Note: Folders do not require files to be added to the media library before they can be played.

11.5 Recently Played

The **Recently Played** item shows media items that you played recently.

To open Recently Played, do the following:

1. Open **Media Player**.
2. Navigate to **Recently Played**.
3. Press **Select** or press **R (Dots 1 2 3 5)**.

Use the **Up Arrow** and **Down Arrow** keys to move through recently played items. Press **Select** to play the focused item.

Press **Left Arrow (Space + Dot 3)** to return to the first list.

11.6 Search

The **Search** item allows you to search for a song, artist, album, or other media item in the library.

To search for media, do the following:

1. Open **Media Player**.
2. Navigate to **Search**.
3. Press **Select** or press **S (Dots 2 3 4)**.
4. Enter the search text on the Perkins keyboard.
5. Move to **OK** with **Tab (Space + Dots 4 5)** and press **Select**.

A list of search results opens.

Use the **Up Arrow** and **Down Arrow** keys to move through the results. Press **Select** to play or open the focused result.

Press **Left Arrow (Space + Dot 3)** to close the search results and return to the previous screen.

11.7 Playlists

The **Playlists** item allows you to create, open, play, rename, delete, and manage playlists.

A playlist is a saved group of media items. Use playlists when you want to keep a permanent group of tracks, such as favorite songs, lessons, recordings, or albums from different folders.

Playlists are different from the queue. The queue is temporary and is mainly used for the current playback session. A playlist is saved and can be used again later.

11.7.1 Opening Playlists

To open Playlists, do the following:

1. Open **Media Player**.
2. Navigate to **Playlists**.
3. Press **Select** or press **P (Dots 1 2 3 4)**.

The Playlists list opens.

Use the **Up Arrow** and **Down Arrow** keys to move through your playlists.

Press **Select** on a playlist to open it.

Press **Left Arrow (Space + Dot 3)** to return to the first list.

11.7.2 Creating a Playlist

You can create a playlist from a song, folder, album, artist, search result, or other supported media item.

To create a playlist, do the following:

1. Navigate to the item you want to add to a new playlist.

This can be a song, folder, album, artist, or another supported item.

2. Press **Space + M (Space + Dots 1 3 4)** to open the context menu.
3. Navigate to **Create Playlist**.
4. Press **Select** or press **C (Dots 1 4)**.
5. Enter a name for the playlist on the Perkins keyboard.
6. Move to **OK** with **Tab (Space + Dots 4 5)** and press **Select**.

The playlist is created.

If you created the playlist from a song, that song is added to the playlist.

If you created the playlist from a folder, Media Player adds the supported songs from that folder to the playlist.

If you created a playlist from an album or artist, Media Player adds the supported songs from that album or artist to the playlist.

11.7.3 Adding Items to an Existing Playlist

To add an item to an existing playlist, do the following:

1. Navigate to the song, folder, album, artist, or other supported item that you want to add.

2. Press **Space + M** (**Space + Dots 1 3 4**) to open the context menu.
3. Navigate to **Add to Playlist**.
4. Press **Select**.
5. Choose the playlist you want with the **Up Arrow** and **Down Arrow** keys.
6. Press **Select**.

The selected item is added to the playlist.

If the selected item is a folder, album, or artist, Media Player adds the supported songs from that item to the playlist.

11.7.4 Playing a Playlist

To play a playlist, do the following:

1. Open **Media Player**.
2. Navigate to **Playlists**.
3. Press **Select** or press **P** (**Dots 1 2 3 4**).
4. Navigate to the playlist you want.
5. Press **Select**.

The playlist opens.

To start playback, press **Select** on the first item you want to play or open the context menu with **Space + M** and choose **Play**.

11.7.5 Playlist Context Menu

When focus is on a playlist or on an item inside a playlist, press **Space + M** (**Space + Dots 1 3 4**) to open the context menu.

The available items change depending on whether focus is on a playlist or on a track inside the playlist.

The context menu includes the following items:

- **Play** — first letter **P** (**Dots 1 2 3 4**): Plays the selected playlist or playlist item.
- **Play Next** — type its first letter: Plays the selected playlist or item after the current track finishes.
- **Add to Queue** — first letter **A** (**Dot 1**): Adds the selected playlist or item to the end of the queue.
- **Rename Playlist** — first letter **R** (**Dots 1 2 3 5**): Changes the name of the playlist.
- **Delete Playlist** — first letter **D** (**Dots 1 4 5**): Deletes the playlist.
- **Remove from Playlist** — type its first letter: Removes the selected item from the playlist.
- **Properties** — type its first letter: Shows information about the selected playlist or playlist item.

Deleting a playlist does not delete the media files from the device. It only deletes the playlist.

Removing an item from a playlist does not delete the media file from the device. It only removes the item from that playlist.

11.8 Playing Files Opened from File Manager

Media Player can also play supported media files that you open directly from **File Manager**.

To play a file from File Manager, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the home screen.
2. Navigate to **File Manager** and press **Select** or press **F (Dots 1 2 4)**.
3. Open the storage location and folder that contains the media file.
4. Move to the file you want to play.
5. Press **Select**.

The file opens on the Media Player and starts playing.

If you activate only one file from File Manager, Media Player plays only that file.

If you want to play several files from the same folder, you must mark the files first. You can mark all files in the folder or mark specific files.

To play several files from File Manager, do the following:

1. Open **File Manager**.
2. Open the folder that contains the media files.
3. Mark the files you want to play.

To mark one file, move to it and press **Space**, or use **Mark/Unmark** from the File Manager context menu.

To mark all files in the folder, open the File Manager context menu with **Space + M**, navigate to **Select All**, and press **Select**.

4. After marking the files, press **Select** on one of the marked files, or choose the appropriate open or play command from the File Manager context menu, if available.

Media Player opens and plays the marked files.

Note: When you play several files from File Manager, the previous track (**Dot 1**) and next track (**Dot 4**) commands move between the marked files.

11.9 Context Menus in Media Player

Media Player includes context menus that provide actions for the item or screen you are currently using.

The available context menu items change depending on where you are. For example, the context menu for a song contains playback and library actions, while the context menu on the playback screen contains playback controls such as stop, next track, previous track, shuffle, repeat, and settings.

To open a context menu, press **Space + M** (**Space + Dots 1 3 4**).

Use the **Up Arrow** and **Down Arrow** keys to move through the menu items.

Press **Select** to activate the focused item or press the item's first letter.

Press **Left Arrow** (**Space + Dot 3**) to close the context menu without selecting an item.

11.10 Library and First List Context Menu

The library and first list context menu allow you to add media to the library, open a stream URL, rescan the library, or close Media Player.

To open this context menu, press **Space + M** while focus is in the first list or the main Library list.

The context menu includes the following items:

11.10.1 Add File to Library

First letter **A** (**Dot 1**).

This option opens a file picker so you can add one specific media file to the library.

Use the **Up Arrow** and **Down Arrow** keys to move through files and folders. Press **Select** to open a folder or choose a file.

11.10.2 Add Folder to Library

Press its first letter.

This option opens a folder picker so you can add a whole folder to the library.

When you add a folder, supported media files in that folder are added to the media library.

11.10.3 Open URL

First letter **O** (**Dots 1 3 5**).

This option allows you to stream media from a URL.

To open a URL, do the following:

1. Open the context menu with **Space + M**.
2. Navigate to **Open URL**.
3. Press **Select**.
4. Enter the URL in the edit box.
5. Move to **OK** with **Tab** (**Space + Dots 4 5**) and press **Select**.

If the URL is valid and supported, playback starts.

To close the dialog without opening the URL, move to **Cancel** with **Tab** and press **Select**, or press **Space + Dots 1 3 5 6**.

11.10.4 Rescan

First letter **R** (Dots **1 2 3 5**).

This option scans the library folders again and updates the media library.

Use this option after copying new files to internal storage or to the SD card.

11.10.5 Exit

First letter **E** (Dots **1 5**).

This option closes Media Player and returns to the home screen.

11.11 Media Item Context Menu

The Media Item context menu is available when focus is on a song, album, artist, folder, playlist, or other playable item.

To open the context menu, move to an item and press **Space + M**.

The context menu includes the following items:

11.11.1 Play

First letter **P** (Dots **1 2 3 4**).

Plays the selected item immediately.

If another item is already playing, playback changes to the selected item.

11.11.2 Play Next

Press its first letter.

Add the selected item after the currently playing item.

Use this option when you want the selected item to play next without stopping the current track.

11.11.3 Add to Queue

First letter **A** (Dot **1**).

Add the selected item to the end of the playback queue.

The queue is the temporary list of items that Media Player will play.

11.11.4 Create Playlist

First letter **C** (Dots **1 4**).

Creates a new playlist.

If this option is used on a song, the song can be added to the new playlist.

If this option is used on a folder, Media Player can create a playlist and add the supported songs from that folder.

11.11.5 Add to Playlist

Press its first letter.

Add the selected item to an existing playlist.

If this option is used on a folder, Media Player can add the supported songs from that folder to the selected playlist.

11.11.6 Delete

First letter **D** (Dots 1 4 5).

Deletes or removes the selected item.

When you choose **Delete**, a confirmation dialog opens. Move between its controls with **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2), and press **Select** to activate one of the following options:

- **Delete from Library:** Removes the item from the Media Player library but keeps the file on the device.
- **Delete from Device:** Deletes the file from storage.
- **Cancel:** Closes the dialog without deleting anything.

Warning: **Delete from Device** removes the file from storage. Make sure you no longer need the file before choosing this option.

11.11.7 Properties

Press its first letter.

Opens a dialog showing information about the selected item.

The Properties dialog shows information such as:

- Title
- Artist
- Album
- Track number
- Duration
- File name
- File path
- Format
- Size

The information is read-only.

To close the Properties dialog, press **Left Arrow** (Space + Dot 3), press **Select**, or move to **Close** with **Tab** and press **Select**.

11.12 Playback Screen

The playback screen opens when media starts playing.

The playback screen allows you to control playback, move within the current track, move between tracks, change playback speed, adjust player volume, add bookmarks, open bookmarks, and open playback options.

When the playback screen opens, Media Player announces the application name, the current track, and the playback state.

Whether the track title is spoken automatically depends on the **Automatically Speak Track Title** setting.

11.13 Playback Commands

The following commands are available from the playback screen:

- **Select** or **Space**: Play or pause.
- **Dot 1**: Move to the previous track.
- **Dot 4**: Move to the next track.
- **Dot 2**: Decrease player volume by 5 percent.
- **Dot 5**: Increase player volume by 5 percent.
- **Dot 3**: Decrease playback speed.
- **Dot 6**: Increase playback speed.
- **N (Dots 1 3 4 5)**: Return to normal speed and replay the last few seconds. Press it again to return to the previous speed.
- **Space + N**: Speak information about the current track, including the current time position, time remaining, and total track duration.
- **Space + Dots 1 5 6**: Speak the same information as Space + N.
- **B (Dots 1 2)**: Add a bookmark at the current playback position.
- **Dot 8 + B**: Open the bookmarks list for the current track.
- **Dot 8 + S**: Stop playback.
- **Space + F (Space + Dots 1 2 4)**: Open Search.
- **Space + M (Space + Dots 1 3 4)**: Open the playback screen context menu.
- **Dot 7**: Close the playback screen and return to the previous Media Player list.

To turn shuffle on or off, or to turn repeat on or off, open the playback screen context menu with Space + M and choose Shuffle or Repeat.

11.14 Bookmarks

Media Player allows you to add bookmarks in the current file and return to them later.

Bookmarks are useful when you want to save important positions in long recordings, lessons, lectures, or other audio files.

11.14.1 Adding a Bookmark

To add a bookmark, press B (Dots 1 2) from the playback screen.

Media Player adds a bookmark at the current playback position.

11.14.2 Opening the Bookmarks List

To open the bookmarks list, press Dot 8 + B from the playback screen.

The bookmarks list opens as a dialog.

Use the Speak dialog navigation in the bookmarks list. Move between the dialog controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** and move through the bookmark items with the **Up Arrow** and **Down Arrow** keys.

11.14.3 Moving to a Bookmark

To move to a bookmark, do the following:

1. Open the bookmarks list from the context menu (**Space + M → Bookmarks**).
2. Navigate to the bookmark you want with the **Up Arrow** and **Down Arrow** keys.
3. Press **Select**.

Media Player moves playback to the selected bookmark position in the file.

11.14.4 Deleting a Bookmark

Each bookmark in the bookmarks list has a context menu.

To delete a bookmark, do the following:

1. Open the bookmarks list from the context menu (**Space + M → Bookmarks**).
2. Navigate to the bookmark you want to delete.
3. Press **Space + M** to open its context menu.
4. Navigate to **Delete**.
5. Press **Select** or press **D (Dots 1 4 5)**.

The bookmark is deleted.

Press **Left Arrow (Space + Dot 3)** to close the bookmarks list and return to the playback screen.

11.15 Movement Units During Playback

Movement units' control what the **Left Arrow (Space + Dot 3)** and **Right Arrow (Space + Dot 6)** keys do while media is playing.

They let you choose how you want to move through the current playback. For example, you can move forward or backward by 10 seconds, jump by one minute, move to the next or previous track, or change playback speed.

This gives you one set of navigation keys that can perform different actions depending on the selected movement unit.

During playback:

- Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (**Space Dot 1**)** keys to choose the movement unit.
- Use the **Left Arrow (Space + Dot 3)** and **Right Arrow (Space + Dot 6)** keys to move by the selected movement unit.

For example:

- If the selected movement unit is **10 seconds**, press **Right Arrow** to move forward 10 seconds, or press **Left Arrow** to move backward 10 seconds.
- If the selected movement unit is **1 minute**, press **Right Arrow** to move forward one minute, or press **Left Arrow** to move backward one minute.
- If the selected movement unit is **Track**, press **Right Arrow** to move to the next track, or press **Left Arrow** to move to the previous track.
- If the selected movement unit is **Playback Speed**, press **Right Arrow** to increase playback speed, or press **Left Arrow** to decrease playback speed.

Orbit Speak announces the selected movement unit when you change it.

Available movement units include:

- **5 seconds**
- **10 seconds**
- **15 seconds**
- **30 seconds**
- **45 seconds**
- **1 minute**
- **5 minutes**
- **10 minutes**
- **15 minutes**
- **30 minutes**

- **1 hour**
- **Track**
- **Bookmark**

You can choose which movement units are available in the Media Player settings. Movement units that are turned off in settings do not appear when you cycle through movement units during playback.

11.16 Playback Modes

Media Player supports several playback modes.

11.16.1 Normal Playback

In normal playback, tracks play in order. When the current track finishes, Media Player moves to the next track.

When the last track finishes, playback stops unless repeat is enabled.

11.16.2 Repeat

Repeat is a single switch that is either on or off. When repeat is on, Media Player starts the current playback list again when the last track finishes. When repeat is off, playback stops at the end of the list. Turn it on or off from the playback screen context menu with Space + M and choose Repeat.

11.16.3 Shuffle

Shuffle changes the order of playback.

When shuffle is on, tracks play in a random order.

When shuffle is off, tracks play in their normal order, such as the order in an album, folder, playlist, or queue.

You can turn shuffle on or off from the playback screen context menu (**Space + M → Shuffle**).

Note: Shuffle and repeat can be used together. For example, if shuffle is on and repeat is on, Media Player plays the list in a random order and then starts again.

11.17 Queue

The queue is a temporary list of items that Media Player will play.

Use **Play Next** to place an item immediately after the current track.

Use **Add to Queue** to place an item at the end of the queue.

Items can be added to the queue from library lists, search results, playlists, and folders.

The queue is useful when you want to choose several tracks or folders to play without creating a permanent playlist.

11.18 Playback Screen Context Menu

To open the playback screen context menu, press **Space + M** while the playback screen is open.

Playback pauses automatically while the context menu is open.

The context menu includes the following items:

11.18.1 Pause or Play

First letter **P** (Dots **1 2 3 4**).

This item reads Pause while something is playing and Play while it is not, and performs what it says.

11.18.2 Stop

First letter **S** (Dots **2 3 4**).

Stops playback completely.

Stop is different from pause. When playback is paused, you can resume from the same position. When playback is stopped, Media Player returns to the beginning of the track or clears the current playback state, depending on the selected item.

11.18.3 Next Track

First letter **N** (Dots **1 3 4 5**).

Moves to the next track.

11.18.4 Previous Track

Press its first letter.

Moves to the previous track.

11.18.5 Playback Speed

Press its first letter.

Opens a submenu containing available playback speed values.

The normal playback speed is **100 percent**.

Choose a lower value to play more slowly. Choose a higher value to play more quickly.

11.18.6 Shuffle

Press its first letter.

Turns shuffle on or off.

When shuffle is on, tracks play in random order. When shuffle is off, tracks play in normal order.

11.18.7 Repeat

First letter **R** (Dots **1 2 3 5**).

Turns repeat on or off.

When repeat is on, the current playback list starts again when the last track finishes. When repeat is off, playback stops at the end of the list.

11.18.8 Bookmarks

First letter **B** (Dots 1 2).

Open the bookmarks list for the current file.

11.18.9 Track Information

First letter **T** (Dots 2 3 4 5).

Opens a dialog with information about the current track.

The dialog shows information such as the track title, artist, album, duration, file path, and format.

To close the dialog, press **Left Arrow (Space + Dot 3)**, press **Select**, or move to **Close** with **Tab** and press **Select**.

11.18.10 Settings

Press its first letter.

Opens the Media Player settings dialog.

11.18.11 Close Playback Screen

First letter **C** (Dots 1 4).

Closes the playback screen and returns to the Media Player list.

Playback continues in the background, depending on the current playback state.

11.18.12 Exit

First letter **E** (Dots 1 5).

Completely closes Media Player.

11.19 Media Player Settings

The Media Player settings dialog allows you to customize playback behavior.

To open Media Player settings, do one of the following:

- From the playback screen, press **Dot 8 + S**, or open the playback screen context menu with **Space + M** and choose **Settings**.
- From a Media Player list context menu, choose **Settings**, if available.

The settings dialog uses the Speak dialog model. Move between the settings with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**. Change the focused value or move within a list with the **Up Arrow** and **Down Arrow** keys. Confirm a choice with **Select (Dot 8)**.

The settings dialog includes the following settings:

11.19.1 Automatically Speak Track Title

This setting controls whether Media Player automatically announces the track title when playback starts or when the track changes.

The available options are:

- **On:** Media Player speaks the track title automatically.
- **Off:** Media Player does not speak the track title automatically.

Use the **Up Arrow** and **Down Arrow** keys to choose the option you prefer.

11.19.2 Movement Units List

This list controls which movement units are available during playback.

Move through the list with the **Up Arrow** and **Down Arrow** keys. Press **Select** on a movement unit to check or uncheck it.

Checked movement units are available when cycling through movement units with the **Up Arrow** and **Down Arrow** keys during playback.

Unchecked movement units are hidden from the playback movement unit cycle.

11.19.3 Equalizer

This setting allows you to choose an equalizer preset.

Available presets are:

- **Flat**
- **Classical**
- **Club**
- **Dance**
- **Full bass**
- **Full bass and treble**
- **Full treble**
- **Headphones**
- **Rock**
- **Pop**
- **Large Hall**
- **Live**
- **Party**
- **Reggae**

- Ska
- Soft
- Soft rock
- Techno

Use the **Up Arrow** and **Down Arrow** keys to choose the preset you prefer.

11.19.4 On Startup

This setting controls what Media Player does when it opens.

The available options are:

- **Music Library:** Media Player opens to the first list of choices. This is the default behavior.
- **Last Opened File:** Media Player opens the last file that was played.

Use the **Up Arrow** and **Down Arrow** keys to choose the option you prefer.

If **Last Opened File** is selected, Media Player attempts to open the last played file the next time the application starts.

If the last played file is no longer available, for example because it was deleted or the SD card was removed, Media Player opens to the first list of choices instead.

11.19.5 Enable Music Library

This setting controls whether Media Player builds and offers the music library. It is off when the application is new.

When it is off, the Library item is not offered and no files are indexed. Folders, Recently Played, Search and Playlists remain available, so you can play music that is organised in folders without waiting for a scan.

Turn this setting on to use the Library. The first scan of a full memory card takes several minutes.

11.19.6 Allow Background Playback

This setting controls whether playback continues when you leave the playback screen or the application. It is off when the application is new.

When it is off, leaving the playback screen or closing Media Player pauses playback. When it is on, playback continues.

11.19.7 Stop Playback During Speech

This setting controls whether playback stops while Orbit Speak is speaking. It is on when the application is new.

When it is on, playback stops for the length of each announcement, so that speech can be made out over the audio.

11.19.8 Announce Playback Status

This setting controls whether Media Player says the playback state aloud. It is on when the application is new.

When it is on, Media Player says playing, paused or stopped after a playback key. When it is off, it does not, and the announcement it opens with names the track without naming the state. An answer to something you asked for is always spoken.

11.19.9 Saving or Cancelling Media Player Settings

Move to **OK** with **Tab (Space + Dots 4 5)** and press **Select** to save your changes.

Move to **Cancel** and press **Select**, or press **Space + Dots 1 3 5 6**, to close the dialog without saving changes.

11.20 Closing Media Player

To close the playback screen and return to the Media Player list, press Dot 7, or open the context menu with Space + M and choose Close Playback Screen.

To completely close Media Player, press **Space + Dots 1 2 3 4 5 6** to return to the home screen, or open the context menu and choose **Exit**.

12 Internet Radio

The **Internet Radio** application allows you to listen to online radio stations on Orbit Speak.

You can browse stations by location or genre, search for stations, save stations to My Stations or Favorites, play recently used stations, add stations from a URL, and import or export station lists.

Internet Radio requires an active internet connection.

12.1 Opening Internet Radio

To open **Internet Radio**, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the home screen.
2. Navigate to **Internet Radio** with the **Up Arrow (Space + Dot 4)** and **Down Arrow (Space + Dot 4)** keys.
3. Press **Select (Dot 8)** or press the first letter **I (Dots 2 4)**.

To close Internet Radio, press **Left Arrow (Space + Dot 3)** until the application closes, press **Space + Dots 1 3 5 6** to exit the application, or press **Space + Dots 1 2 3 4 5 6** to return to the home screen.

12.2 Choosing How to Find or Manage Stations

The first list on Internet Radio helps you choose how you want to find or manage stations.

The list contains the following items:

1. **Browse Stations** — first letter **B** (Dots 1 2)
2. **Search** — first letter **S** (Dots 2 3 4)
3. **My Stations** — first letter **M** (Dots 1 3 4)
4. **Favorites** — first letter **F** (Dots 1 2 4)
5. **Recently Played** — first letter **R** (Dots 1 2 3 5)

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** on an item to continue or type the item's first letter.

After you select an item, the application shows the relevant content. For example, selecting **Browse Stations** shows browsing options, selecting **Search** opens station search, and selecting **Favorites** shows your favorite stations.

Press **Select** on an item to open it, play it, or move one level deeper.

Press **Left Arrow** (**Space + Dot 3**) to move one level higher. If you are already on the first list, pressing **Left Arrow** to close Internet Radio.

12.3 Browsing Stations

The **Browse Stations** item lets you browse the available online stations, for example by location or genre.

To browse stations, open **Internet Radio**, navigate to **Browse Stations**, and press **Select**, or press **B** (Dots 1 2).

Use the **Up Arrow** and **Down Arrow** keys to move through the browsing options and station lists. Press **Select** on a station to start playback.

Press **Left Arrow** (**Space + Dot 3**) to move one level higher.

12.4 Searching for Stations

The **Search** item allows you to search for an Internet radio station by name or keyword.

To search for a station, do the following:

1. Open **Internet Radio**.
2. Navigate to **Search**.
3. Press **Select** or press **S** (Dots 2 3 4).
4. Enter the search text on the Perkins keyboard.
5. Move to **OK** with **Tab** (**Space + Dots 4 5**) and press **Select**.

A list of matching stations is open.

Move through the results with the **Up Arrow** and **Down Arrow** keys.

Press **Select** on a station to start playback.

Stations in search results use the same Station context menu as other station lists.

If no matching stations are found, Orbit Speak speaks a message.

Press **Left Arrow (Space + Dot 3)** to return to the previous screen.

12.5 My Stations

The **My Stations** item contains stations you have added manually or imported from a station list file.

Use My Stations for stations that are not found through browsing or searching, or for stations you want to keep in a personal list.

Press **Select** on a station to start playback.

12.6 Favorites

The **Favorites** item contains stations you have marked as favorites.

Use Favorites for stations you listen to often.

Press **Select** on a station to start playback.

12.7 Recently Played

The **Recently Played** item shows stations you played recently.

Use Recently Played when you want to quickly return to a station you used before.

Press **Select** on a station to start playback.

12.8 Playing a Station

To play a station, move to the station and press **Select**.

When playback starts, the playback screen opens.

The playback screen shows the current station and allows you to control playback.

If the station cannot be played, Orbit Speak speaks an error message. This can happen if the station is offline, the stream address is no longer valid, or the internet connection is not available.

12.9 Context Menus in Internet Radio

Internet Radio includes context menus that provide actions for the item or screen you are currently using.

The available context menu items change depending on where you are. For example, the context menu for a station contains station actions, while the context menu for a list contains list actions such as importing or exporting stations.

To open a context menu, press **Space + M (Space + Dots 1 3 4)**.

Use the **Up Arrow** and **Down Arrow** keys to move through the menu items.

Press **Select** to activate the focused item.

Press **Left Arrow (Space + Dot 3)** to close the context menu without selecting an item.

Context menus also support first-letter navigation. When a context menu is open, you can activate an item by pressing its first letter.

12.10 Station Context Menu

The Station context menu is available when focus is on a station.

To open the Station context menu, move to a station and press **Space + M**.

The Station context menu includes the following items:

12.10.1 Play

First letter **P (Dots 1 2 3 4)**.

Plays the selected station.

12.10.2 Add to Favorites

First letter **A (Dot 1)**.

Adds the selected station to Favorites.

Use this option for stations you listen to often.

12.10.3 Remove from Favorites

First letter **R (Dots 1 2 3 5)**.

Removes the selected station from Favorites.

This option is available when the selected station is already in Favorites.

12.10.4 Add to My Stations

Press its first letter.

Add the selected station to My Stations.

Use this option when you want to keep a station in your personal station list.

12.10.5 Remove from My Stations

Press its first letter.

Removes the selected station from My Stations.

This option is available when the selected station is in My Stations.

12.10.6 Properties

Press its first letter.

Opens a dialog showing information about the selected station.

The Properties dialog shows information such as:

- Station name
- Stream URL
- Country
- Language
- Genre

The information is read-only.

To close the Properties dialog, press **Left Arrow (Space + Dot 3)**, press **Select**, or move to **Close** with **Tab** and press **Select**.

12.11 List Context Menu

The List context menu is available when focus is on a station list or in the first list.

To open the List context menu, press **Space + M**.

The List context menu includes the following items:

12.11.1 Search for Station

First letter **S (Dots 2 3 4)**.

Opens the station search screen.

12.11.2 Add Station from URL

First letter **A (Dot 1)**.

Opens a dialog where you can add a station manually by entering its stream URL.

The station is added to **My Stations**.

12.11.3 Import Stations List

First letter **I (Dots 2 4)**.

Opens a file picker so you can import stations from a playlist file.

Imported stations are added to **My Stations**.

12.11.4 Export Stations List

First letter **E (Dots 1 5)**.

Opens a save file dialog so you can export all stations from the current list.

The exported file is saved as an **M3U** playlist file.

12.11.5 Refresh

First letter **R (Dots 1 2 3 5)**.

Refreshes the current list.

Use this option if a list does not show the expected stations or if the internet connection was unavailable when the list first opened.

12.11.6 Exit

Press its first letter.

Closes Internet Radio and return to the home screen.

12.12 Adding a Station From a URL

You can add a station manually if you know its stream URL.

Stations added from a URL are saved in **My Stations**.

To add a station from a URL, do the following:

1. Open **Internet Radio**.
2. Press **Space + M (Space + Dots 1 3 4)** to open the context menu.
3. Navigate to **Add Station from URL**.
4. Press **Select** or press **A (Dot 1)**.

A dialog opens. Move between its controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

1. Enter the station name, if requested.
2. Enter the station stream URL.
3. Move to **OK** with **Tab** and press **Select**.

The station is added to **My Stations**.

To close the dialog without adding the station, move to **Cancel** with **Tab** and press **Select**, or press **Space + Dots 1 3 5 6**.

If the station cannot be added, Orbit Speak speaks an error message.

12.13 Importing and Exporting Station Lists

Internet Radio allows you to import and export station lists.

Use **Export Stations List** when you want to back up a list of stations or copy it to another device.

Use **Import Stations List** when you want to add stations from a playlist file, backup file, or another device.

12.13.1 Exporting a Station List

The **Export Stations List** option exports all stations from the current list to one playlist file.

For example:

- If you are in **Favorites**, exporting the station list exports all stations in Favourites.

- If you are in **My Stations**, exporting the station list exports all stations in My Stations.
- If you are in **Recently Played**, exporting the station list exports all stations in Recently Played.

To export a station list, do the following:

1. Open **Internet Radio**.
2. Open the station list you want to export.
3. Press **Space + M** to open the context menu.
4. Navigate to **Export Stations List**.
5. Press **Select** or press **E (Dots 1 5)**.

A save file dialog opens. Move between its controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

1. Choose the location where you want to save the file.
2. Enter a file name.
3. Move to **OK** with **Tab** and press **Select**.

The station list is saved as an **M3U** playlist file.

After the export finishes, Orbit Speak speaks a success message or an error message.

12.13.2 Importing a Station List

The **Import Stations List** option imports stations from a playlist file.

Supported playlist file types include:

- PLS
- M3U
- M3U8

Imported stations are added to **My Stations**.

To import a station list, do the following:

1. Open **Internet Radio**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Import Stations List**.
4. Press **Select** or press **I (Dots 2 4)**.

An open file dialog appears.

1. Navigate to the playlist file you want to import with the **Up Arrow** and **Down Arrow** keys.
2. Press **Select** or move to **OK** with **Tab** and press **Select**.

Orbit Speak imports the stations from the selected file and adds them to **My Stations**.

After the import finishes, Orbit Speak speaks a success message or an error message.

If the file is not supported, cannot be opened, or does not contain valid station information, Orbit Speak speaks an error message.

12.14 Playback Screen

The playback screen opens when a station starts playing.

The playback screen allows you to control station playback, adjust player volume, manage the current station as a favorite, hear station information, and open playback options.

12.14.1 Playback Screen Commands

The following commands are available from the playback screen:

- **Select or Space:** Play or pause.
- **Dot 2:** Decrease player volume by 5 percent.
- **Dot 5:** Increase player volume by 5 percent.
- **Dot 1:** Move to the previous station.
- **Dot 4:** Move to the next station.
- **Up Arrow (Space + Dot 1):** Increase player volume. Down Arrow decreases it.
- **Left Arrow (Space + Dot 3):** Move to the previous station. Right Arrow moves to the next one.
- **Dot 8 + S:** Stop playback.
- **B (Dots 1 2):** Add the station to Favourites, or remove it from Favourites.
- **Dot 8 + R:** Start or stop recording the station.
- **Dot 8 + P:** Pause or resume the recording.
- **Dot 8 + H:** Open the help.
- **Space + F (Space + Dots 1 2 4):** Search for stations.
- **Dot 8 + I:** Open the Station Information dialog.
- **Space + M (Space + Dots 1 3 4):** Open the playback screen context menu.
- **Dot 7:** Close the playback screen and return to the previous Internet Radio list.

To add the station that is playing to Favourites, or remove it from Favourites, press B (Dots 1 2) or Dot 8 + B. You can also open the playback screen context menu with Space + M and choose the item there.

12.14.2 Station Information Dialog

The Station Information dialog shows information about the currently playing station.

It contains:

- Station name
- Station URL
- Close button

To close the dialog, press **Left Arrow (Space + Dot 3)**, press **Select**, or move to **Close** with **Tab (Space + Dots 4 5)** and press **Select**.

12.14.3 Playback Screen Context Menu

To open the playback screen context menu, press **Space + M** while the playback screen is open.

Playback pauses automatically while the context menu is open.

The playback screen context menu includes the following items:

- **Play or pause** — first letter **P (Dots 1 2 3 4)**: Starts or pauses playback, depending on the current playback state.
- **Stop** — first letter **S (Dots 2 3 4)**: Stops playback completely.
- **Station Information** — type its first letter: Opens the Station Information dialog.
- **Add to Favourites** — first letter **A (Dot 1)**: Adds the current station to Favourites.
- **Remove from Favourites** — first letter **R (Dots 1 2 3 5)**: Removes the current station from Favourites.
- **Settings** — type its first letter: Opens Internet Radio settings, if available.
- **Close** — first letter **C (Dots 1 4)**: Closes the playback screen and returns to the previous Internet Radio list.
- **Exit** — first letter **E (Dots 1 5)**: Completely closes Internet Radio.

12.15 Closing Internet Radio

To close the playback screen and return to the previous Internet Radio list, press **Left Arrow (Space + Dot 3)**, or open the playback screen context menu with **Space + M** and choose **Close**.

To completely close Internet Radio, press **Space + Dots 1 2 3 4 5 6** to return to the home screen, or open the context menu and choose **Exit**.

13 Podcasts

The **Podcasts** application allows you to find, add, and manage podcasts, download or stream episodes, and play them on Orbit Speak.

You can search for podcasts by name, add podcasts from a feed address, import and export podcast lists, collect new episodes in an Inbox, build a queue of episodes to listen to, download episodes for offline listening, and stream episodes over the internet.

Podcasts requires an active internet connection when searching for podcasts, updating podcast feeds, streaming episodes, or downloading episodes.

13.1 Opening Podcasts

To open Podcasts, do the following:

Press **Space + Dots 1 2 3 4 5 6** (the home command) to go to the Home Screen.

Navigate to **Podcasts** with the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys.

Press **Select (Dot 8)**, or press the first letter **P (Dots 1 2 3 4)**.

To close Podcasts, press **Space + Dots 1 3 5 6**, or press **Space + Dots 1 2 3 4 5 6** to return to the Home Screen.

13.2 The First List

The first list in Podcasts helps you choose what to listen to.

The list contains the following items:

Inbox

Queue

All Podcasts

Inbox contains the new episodes from all of your podcasts.

Queue contains the episodes you have chosen to listen to, in the order they will play.

All Podcasts contains the podcasts you have added.

Each item is spoken with the number of episodes it contains. For example, you can hear "Inbox, 12 new episodes", or "Inbox, empty".

When an episode is playing or paused, a **Now Playing** item appears at the top of the list and gives the name of the episode.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the list.

Press **Select (Dot 8)** to open the focused item.

You can turn **Inbox** and **Queue** off in Main Screen Settings. If you turn both of them off, Podcasts opens on your list of podcasts.

13.3 Episode States

Every episode is in one of the following states:

Inbox: The episode is new, and you have not yet chosen what to do with it.

Queued: You have added the episode to the Queue. Adding an episode to the Queue removes it from the Inbox.

Played: You have finished the episode, or you have marked it as played.

Orbit Speak speaks the new state each time an episode changes state.

To remove an episode from the Inbox without listening to it, mark it as played.

You can mark a played episode as unplayed again. Your saved position in the episode is kept.

13.4 Adding Podcasts

You can add podcasts in three ways:

Search for podcasts by name.

Add a podcast from a feed address.

Import podcasts from an OPML file.

13.4.1 Searching for Podcasts

The **Search podcast by name** option allows you to search for podcasts by name, topic, or keyword.

To search for a podcast, do the following:

Open Podcasts.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu.

Navigate to **Search podcast by name**.

Press **Select (Dot 8)**.

A dialog opens.

Type the name of the podcast in the **Podcast name** box.

Move to **Search** and press **Select (Dot 8)**.

The search results open in a list. Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the results.

Press **Select (Dot 8)** on a result to continue to the subscription confirmation.

If no podcasts match your search, Orbit Speak speaks "No podcasts found".

13.4.2 Adding a Podcast from a Feed Address

Use this option when you know the direct feed address for a podcast.

To add a podcast from a feed address, do the following:

Open Podcasts.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu.

Navigate to **Add podcast**.

Press **Select (Dot 8)**.

A dialog opens.

Type the podcast feed address in the **Feed address** box.

Move to **Next** and press **Select (Dot 8)**.

Podcasts collects the feed and opens the subscription confirmation.

To close the dialog without adding a podcast, press **Space + Dots 1 5**, or move to **Cancel** and press **Select (Dot 8)**.

If the podcast cannot be added, Orbit Speak speaks an error message.

13.4.3 Confirming a Subscription

Both ways of adding a podcast end with the same confirmation.

The confirmation gives the name of the podcast, its description, the number of episodes, and the newest episode.

The confirmation also contains the following settings:

New episodes go to: Choose whether new episodes from this podcast go to the **Inbox**, go to the **Queue**, or go **Nowhere**. Episodes that go nowhere can still be found under **All Podcasts**.

Episodes to place in Inbox: Choose how many of the episodes the podcast already has are treated as new. The choices are 0, 1, 3, 5, 10, and All episodes. The default is 3.

Move to **Subscribe** and press **Select (Dot 8)**.

The podcast is added to your podcast list. The older episodes are marked as played, and you can find them under **All Podcasts**.

If you have already added this podcast, Orbit Speak speaks a message and offers to open it.

13.5 The Inbox

The Inbox contains the new episodes from all of your podcasts.

Each episode is spoken with its title, the podcast it belongs to, and the date it was published.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the episode list.

Press **Select (Dot 8)** on an episode to play it.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu for the focused episode.

To empty the Inbox, add the episodes you want to the Queue, and mark the rest as played.

13.6 The Queue

The Queue contains the episodes you have chosen to listen to. The order of the Queue is the order in which the episodes play.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the Queue.

Press **Select (Dot 8)** on an episode to play it.

When an episode finishes, it is marked as played and removed from the Queue, and the next episode in the Queue plays.

13.6.1 Reordering the Queue

The Queue context menu contains the following options for moving the focused episode:

Move up

Move down

Move to top

Move to bottom

After each move, Orbit Speak speaks the new position of the episode. For example, "Position 3 of 11".

Moving the episode that is currently playing does not stop playback.

13.6.2 Sorting the Queue

To sort the Queue, open the context menu and navigate to **Sort the queue by**.

The following options are available:

Newest first

Oldest first

Podcast, A to Z

Podcast, Z to A

Sorting the Queue changes the order of the episodes permanently. Orbit Speak speaks "Queue sorted".

13.7 All Podcasts

All Podcasts contains the podcasts you have added.

Each podcast is spoken with its name and the number of episodes you have not played, or "all played".

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the podcast list.

Press **Select (Dot 8)** on a podcast to show its episodes.

13.7.1 Podcast Context Menu

To open the context menu for a podcast, move to it and press **Space + M (Space + Dots 1 3 4)**.

The following options are available:

Refresh: Checks this podcast for new episodes and speaks the result.

Podcast settings: Opens the settings for this podcast. See Podcast Settings.

Podcast information: Speaks the name, author, description, feed address, number of episodes, and newest episode.

Unsubscribe: Removes the podcast together with its episodes and downloads. A confirmation dialog opens first.

13.8 Episode Lists

The Inbox, the Queue, and each podcast all use the same kind of episode list.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the episode list.

Press **Select (Dot 8)** on an episode to play it.

Podcasts remembers your position in each list. When you return to a list, you are placed on the episode you left.

13.8.1 Episode Context Menu

To open the context menu for an episode, move to it and press **Space + M (Space + Dots 1 3 4)**.

The following options are available:

Play: Plays the episode.

Add to queue or Remove from queue.

Mark as played or Mark as unplayed.

Download episode or Remove download.

Episode information: Speaks the episode title, the podcast, the date it was published, and the show notes.

Sort by: Changes the order of the list.

13.8.2 Sorting Episodes

To sort an episode list, open the context menu and navigate to **Sort by**.

The following options are available:

Newest first

Oldest first

Podcast, A to Z

Podcast, Z to A

The podcast options are not offered inside a single podcast.

Podcasts remembers the sort order for the Inbox and for podcast lists separately.

13.9 Downloading Episodes

Episodes can be downloaded for offline listening, or streamed over the internet.

When an episode is downloaded automatically depends on the **Download episodes** setting. See Downloads and Storage Settings.

To download the focused episode yourself, open the context menu and navigate to **Download episode**.

When you play an episode, Podcasts uses the downloaded file if there is one, and streams the episode if there is not.

If the connection is lost during a download, the download continues from where it stopped when the connection returns.

Orbit Speak speaks the progress of a download as a percentage.

If there is not enough free space for an episode, Orbit Speak speaks a message giving the size of the episode and the free space available.

Downloaded files are deleted a number of days after the episode has been played. The episode itself is kept, and you can download it again.

To remove a downloaded file yourself, open the context menu and navigate to **Remove download**.

13.10 Playing an Episode

Press **Select (Dot 8)** on an episode in any list to play it.

The playback screen opens when an episode starts playing.

The playback screen allows you to control playback, move through the episode, adjust playback speed, and open the chapter and bookmark lists.

13.11 Playback Screen Commands

The following commands are available from the playback screen:

Space: Play or pause.

Dot 1: Move to the previous chapter.

Dot 4: Move to the next chapter.

Dot 2: Decrease player volume.

Dot 5: Increase player volume.

Dot 3: Decrease playback speed.

Dot 6: Increase playback speed.

C (Dots 1 4): Open the chapter list for the current episode.

B (Dots 1 2): Add a bookmark at the current position.

Dots 1 2 8: Open the bookmarks list.

N (Dots 1 3 4 5): Return to normal speed. Use it again to return to the previous speed.

G (Dots 1 2 4 5): Open Go to Time, to move to a position that you type.

S (Dots 2 3 4): Stop playback.

Dots 1 2 3 4 8: Move to the previous episode.

Dots 1 3 4 5 8: Move to the next episode.

Space + Dots 1 5 6: Where Am I. Speaks the current position, time remaining, and total episode length.

Up Arrow and **Down Arrow:** Choose the movement unit.

Left Arrow and **Right Arrow:** Move by the chosen movement unit.

Space + Dots 1 5: Leave the playback screen. The episode continues playing.

The single dot commands work on the playback screen only. In a list, type the first letter of an item to move to it.

The following commands are available anywhere in Podcasts:

Space + Dots 1 2 4: Search for a podcast by name.

Dots 2 3 4 8: Open the settings.

Dots 2 4 8: Speak information about the focused episode or podcast.

13.12 Movement Units During Playback

Movement units allow you to choose how far you move each time you press the **Left Arrow (Space + Dot 3)** and **Right Arrow (Space + Dot 6)** keys.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to choose the movement unit. Orbit Speak speaks each unit as you reach it.

Use the **Left Arrow (Space + Dot 3)** and **Right Arrow (Space + Dot 6)** keys to move backward or forward by the chosen unit.

The following movement units are available:

Time jump: Moves by a fixed amount of time. Each available interval is offered as a separate unit. The intervals are 5 seconds, 10 seconds, 15 seconds, 30 seconds, 1 minute, 5 minutes, and 10 minutes.

Episode: Moves to the previous or next episode in the list you opened the episode from.

Chapter: Moves to the previous or next chapter. This unit is offered only when the episode has chapters.

Bookmark: Moves to the previous or next bookmark. This unit is offered only when the episode has bookmarks.

You can choose which units are offered, and in what order, in Playback Settings.

When you reach the start or the end of the episode, Orbit Speak speaks "Beginning of the episode" or "End of the episode".

When there are no more chapters, bookmarks, or episodes to move to, Orbit Speak speaks "No more chapters", "No more bookmarks", or "No more episodes".

13.13 Playback Speed

Playback speed can be set from half speed to three times speed, in steps of a quarter.

Orbit Speak speaks the new speed each time you change it.

To return to normal speed, use the normal speed command. Use it again to return to the speed you were using.

The speed you choose for a podcast is remembered for that podcast.

You can set the speed used for all podcasts in Playback Settings, and the speed for one podcast in Podcast Settings.

13.14 Where Am I

The Where Am I command speaks your current position in the episode, the time remaining, and the total length of the episode.

You can turn each of these three parts on or off in Playback Settings.

The times given do not change when you change the playback speed.

13.15 Go to Time

Go to Time allows you to move to a position that you type.

To move to a position, do the following:

Use the Go to Time command, or open the context menu and navigate to **Go to time**.

A dialog opens with the **Hours**, **Minutes**, and **Seconds** boxes.

Type the position you want.

Move to **Go** and press **Select (Dot 8)**.

If the position you typed is past the end of the episode, Orbit Speak speaks a message and the dialog stays open so that you can correct it.

To close the dialog without moving, press **Space + Dots 1 5**.

13.16 Chapter List

Some episodes are divided into chapters by the podcast.

The chapter list gives the title and start time of each chapter, and opens on the chapter that is playing.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the chapter list.

Press **Select (Dot 8)** on a chapter to move to it.

Playback pauses while the chapter list is open, and continues when you choose a chapter or close the list.

A chapter without a title is spoken as "Chapter" followed by its number.

If the episode has no chapters, Orbit Speak speaks "No chapters".

13.17 Bookmarks

A bookmark marks a position inside an episode so that you can return to it later.

13.17.1 Adding a Bookmark

To add a bookmark, use the add bookmark command while the episode is playing, or open the context menu and navigate to **Add bookmark**.

Orbit Speak speaks the position of the new bookmark.

13.17.2 Opening the Bookmarks List

To open the bookmarks list, use the bookmarks list command, or open the context menu and navigate to **Bookmarks**.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the bookmarks list.

A bookmark without a name is spoken as its position in the episode.

13.17.3 Moving to a Bookmark

Press **Select (Dot 8)** on a bookmark in the bookmarks list to move to that position in the episode.

You can also choose the **Bookmark** movement unit and use the **Left Arrow (Space + Dot 3)** and **Right Arrow (Space + Dot 6)** keys to move between bookmarks.

13.17.4 Deleting a Bookmark

To delete a bookmark, do the following:

Open the bookmarks list.

Move to the bookmark you want to delete.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu.

Navigate to **Delete this bookmark** and press **Select (Dot 8)**.

Orbit Speak speaks "Bookmark deleted".

13.18 Skipping the Start and End of Episodes

Many podcasts begin and end every episode with the same music or announcements. Podcasts can skip these parts for you.

To set the part to skip at the start, listen until the introduction has finished, open the context menu, and navigate to **Skip the start, up to here**.

To set the part to skip at the end, open the context menu when the closing part begins, and navigate to **Skip the end, from here**.

The settings apply to all episodes of that podcast.

You can also type these values in Podcast Settings, as **Skip from start** and **Skip from end**.

13.19 What Plays Next

When an episode finishes, it is marked as played and removed from the Queue, and Podcasts looks for the next episode to play.

Podcasts looks in the following order:

The rest of the list you are listening to, skipping any episode you have already played.

The Queue.

The Inbox.

The next episode of the same podcast that you have not played.

The next podcast with an episode you have not played.

You can turn each of these steps on or off in Playback Settings.

To stop when the current episode finishes, open the context menu and navigate to **Stop after this episode**. This applies to the current episode only.

13.20 Playback Screen Context Menu

To open the context menu on the playback screen, press **Space + M (Space + Dots 1 3 4)**.

The following options are available:

Play or Pause

Stop

Previous episode and Next episode

Chapters

Add bookmark and Bookmarks

Go to time

Playback speed, containing **Faster**, **Slower**, and **Normal speed, or back**

Report the time

Say what is playing

Skip the start, up to here and Skip the end, from here

Stop after this episode

Settings

Exit

13.21 Leaving the Playback Screen

Press **Space + Dots 1 5** to leave the playback screen. The episode continues playing.

To return to the playback screen, move to the **Now Playing** item at the top of the first list and press **Select (Dot 8)**.

To stop playback when you leave the playback screen, turn on **Stop playback when leaving the player** in Playback Settings.

Opening the chapter list or the bookmarks list does not stop playback.

When you close Podcasts, playback stops.

13.22 Updating Podcasts

Podcasts checks your podcasts for new episodes automatically, and does not interrupt you while it checks.

You can set how often Podcasts checks in Podcasts Settings. The default is every six hours.

When you open the application, Orbit Speak speaks the number of new episodes. For example, "Inbox, 12 new episodes".

If new episodes arrive while you have a list open, they are added to the list and your position in the list does not change.

To check one podcast immediately, move to it in **All Podcasts**, open the context menu, and navigate to **Refresh**.

Orbit Speak speaks the number of new episodes, "Already up to date", or "Refresh failed".

13.23 Importing and Exporting Podcasts

An OPML file contains a list of podcasts. You can use an OPML file to move your podcasts to or from another application.

Import OPML and **Export OPML** are in the context menu of the first list.

13.23.1 Importing an OPML File

To import podcasts from an OPML file, do the following:

Open Podcasts.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu.

Navigate to **Import OPML** and press **Select (Dot 8)**.

A file picker dialog opens. Choose the OPML file.

A list of the podcasts in the file opens.

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move through the list, and press **Select (Dot 8)** to tick or untick a podcast.

To tick or untick all of the podcasts, open the context menu and navigate to **Select all** or **Select none**.

Open the context menu and navigate to **Import selected**.

Orbit Speak speaks the number of podcasts added, the number you had already added, and the number that could not be collected.

13.23.2 Exporting to an OPML File

To export your podcasts to an OPML file, do the following:

Open Podcasts.

Press **Space + M (Space + Dots 1 3 4)** to open the context menu.

Navigate to **Export OPML** and press **Select (Dot 8)**.

A list of your podcasts opens. Tick the podcasts you want to export.

Open the context menu and navigate to **Export selected**.

A file picker dialog opens. Choose where to save the file.

Orbit Speak speaks the number of podcasts exported.

13.24 Podcast Settings

Podcast Settings contains settings for one podcast, and overrides the settings used for all podcasts.

To open Podcast Settings, move to the podcast in **All Podcasts**, open the context menu, and navigate to **Podcast settings**.

The following settings are available:

New episodes go to: Inbox, Queue, or Nowhere.

Playback speed

Skip from start: The amount of time to skip at the start of every episode.

Skip from end: The amount of time to skip at the end of every episode.

Each setting also offers **Default**, which uses the setting for all podcasts.

13.25 Podcasts Application Settings

To open the settings, open the context menu of the first list and navigate to **Settings**.

The settings are divided into the following categories:

Main screen

Lists

Podcasts

Playback

Downloads and storage

Advanced

Press **Select (Dot 8)** on a category to open it.

13.25.1 Main Screen Settings

Show Inbox: Turns the **Inbox** item on or off.

Show Queue: Turns the **Queue** item on or off.

Show Now Playing entry: Turns the **Now Playing** item on or off.

Open on: Chooses the item Podcasts opens on.

13.25.2 List Settings

Say when an episode was published: Turns the publication date on or off in episode lists.

How dates are said: Choose between a relative date, such as 8 hours ago, or the date and time.

13.25.3 Podcasts Settings

Refresh interval: How often Podcasts checks for new episodes. The default is every six hours.

New episodes go to: Where new episodes go for all podcasts. Choose **Inbox**, **Queue**, or **Nowhere**.

Episodes placed in Inbox when subscribing: How many episodes are treated as new when you add a podcast. The default is 3.

13.25.4 Playback Settings

Default speed: The playback speed used for all podcasts.

Keep playing through this list: Continues with the next episode in the list when an episode finishes.

At the end of the list, start again at the top.

Resume from saved position: Continues an episode from where you stopped.

Stop playback when leaving the player.

Report elapsed time, Report remaining time, and Report total time: Turn each part of Where Am I on or off.

Configure movement units: Opens a dialog where you choose which movement units are offered, in what order, and which time intervals are available.

13.25.5 Downloads and Storage Settings

Download episodes: Choose **When queued**, **When they arrive**, **Only when I choose**, or **Never, stream only**.

Store downloads on: Choose **Internal storage** or **SD card**.

Delete played downloads after: The number of days a downloaded file is kept after the episode has been played. The default is 30 days.

13.25.6 Advanced Settings

Classic mode: Turns the **Inbox** and the **Queue** off, and opens Podcasts on your list of podcasts. A confirmation dialog opens first, and you can turn Classic mode off again.

Restore default settings: Returns all settings to their original values. A confirmation dialog opens first.

About: Speaks the version of the application.

13.25.7 Saving or Canceling Podcasts Application Settings

Changes are not applied until you save them.

To save your changes, move to **OK** and press **Select (Dot 8)**. Orbit Speak speaks "Settings saved".

To close a settings category without saving, move to **Cancel** and press **Select (Dot 8)**, or press **Space + Dots 1 5**.

13.26 Podcasts from the Previous Application

If you used the previous Podcasts application, your podcasts are moved to the new application the first time you open it.

Your podcasts, episodes, saved positions, downloaded files, and bookmarks are moved. Orbit Speak speaks what was found.

Settings are not moved, and you can set them again in Podcasts Application Settings.

13.27 Closing Podcasts

To close Podcasts, press **Space + Dots 1 3 5 6**, press **Space + Dots 1 2 3 4 5 6** to return to the Home Screen, or open the context menu and navigate to **Exit**.

Playback stops when you close Podcasts.

14 Voice Recorder

The Voice Recorder application allows you to make high-quality recordings in **WAV** or **MP3** format.

You can record lectures, meetings, notes, or any sound around you.

14.1 Opening the Voice Recorder Application

1. Press **Space + Dots 1 2 3 4 5 6** (the home command) to return to the home screen.

2. Navigate to the **Voice Recorder** application using the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys.
3. Press **Select (Dot 8)** or press the first letter **V (Dots 1 2 3 6)**, to open. You will hear “Voice Recorder.”
4. You can also press F3 from anywhere on the device to open the Voice Recorder.

14.2 Main Screen Overview

When the Voice Recorder opens, you are placed in a list of your recordings, showing the folders and audio files in the folder that is open.

- The first time you open the application this is the default recordings folder. After that it is the folder you were in last, which is remembered when the device restarts.
- Use the Up Arrow (Space + Dot 1) and Down Arrow (Space + Dot 4) keys to move through the list, or press the first letter of an item.
- Press Select (Dot 8) on a folder to open it. Press Select on a recording to open the playback screen and start playing it.
- Press Dot 7 to go up one level.
- The status of the application is announced as you move: the name of each recording, and its length.

14.3 Starting and Stopping a Recording

To start recording, press F3. This works from any screen in the Voice Recorder, and F3 pressed anywhere else on the device opens the Voice Recorder first.

The recording is made in the folder that is open, whichever recording is focused. The Voice Recorder announces the file name and the folder before it starts, and then announces the elapsed time.

To stop recording, press F3 again. You can also start a recording with Space + N (Space + Dots 1 3 4 5), or from the context menu with New Recording.

The recording is saved automatically in the folder it was made in.

14.4 Pausing and Resuming a Recording

While recording, press Space or Select (Dot 8) to pause. You will hear “Recording paused.”

Press Space or Select again to continue recording from the same point.

All time and bookmarks remain saved while paused. While a recording is running, other keys are refused, so a recording cannot be ended by accident. The context menu can be opened while the recording is paused.

14.5 Adding Bookmarks While Recording

You can add bookmarks at any time during recording to mark important moments. Each bookmark stores the **timestamp** of the moment it was added.

To add a bookmark while recording, press **Dot 8 + B**.

You will hear “Bookmark added,” along with the time position.

14.6 Managing Your Recordings

The list of recordings is the first screen of the application, so there is no separate screen to open.

1. Recordings and folders are listed together, with folders first. Move through them with the Up Arrow (Space + Dot 1) and Down Arrow (Space + Dot 4) keys, or press the first letter of an item.
2. Press Select (Dot 8) on a recording to play it, or Select on a folder to open it.
3. The following commands are available from the list:
4. Space + N (Space + Dots 1 3 4 5) starts a new recording. Space + R (Space + Dots 1 2 3 5) renames the focused recording. Space + D (Space + Dots 1 4 5) deletes it. Dot 8 + F creates a new folder. Dot 8 + P speaks the properties of the focused recording. Dot 8 + H opens the help.

14.6.1 Recordings List Context Menu

Open the context menu by pressing Space + M (Space + Dots 1 3 4). Move through the items with the Up Arrow and Down Arrow keys and press Select to activate. You can also press an item’s first letter. The menu includes:

- **New Recording — first letter N (Dots 1 3 4 5). Starts a recording in the folder that is open.**
- **Play — first letter P (Dots 1 2 3 4). Opens the focused recording on the playback screen.**
- **Rename — first letter R (Dots 1 2 3 5). Gives the focused recording a new name. Type the new name on the Perkins keyboard.**
- **Delete — first letter D (Dots 1 4 5). Removes the focused recording after confirmation. A folder is removed only when it is empty.**
- **New Folder — first letter F (Dots 1 2 4). Creates a folder inside the folder that is open.**
- **Properties — speaks the name, folder, format, length, size and creation date of the focused recording.**
- **Settings — opens the settings dialog.**
- **Help — lists the commands available on the current screen.**
- **Exit — closes the Voice Recorder.**

14.7 Playback Screen

The playback screen opens when you press Select on a recording, and when a recording you have just made is opened.

The following commands are available from the playback screen:

Space: play or pause.

Dot 1: move to the previous recording in the folder. Dot 4: move to the next recording.

Dot 2: decrease player volume. Dot 5: increase player volume.

Dot 3: decrease playback speed. Dot 6: increase playback speed. Dot 8 + D: return to normal speed.

Dot 8 + G: go to a position that you type. Dot 8 + T: speak the current position and the length.

Dot 8 + I: speak the name, format, length and size of the recording.

Dot 8 + B: add a bookmark. Dot 8 + K: open the bookmarks list.

Up Arrow (Space + Dot 1) and Down Arrow (Space + Dot 4): choose the movement unit.

Left Arrow (Space + Dot 3) and Right Arrow (Space + Dot 6): move by the selected movement unit.

The movement units are 5, 10, 15, 30 and 45 seconds, 1, 5, 10, 15 and 30 minutes, 1 hour, File, and Bookmark. With File selected, left and right move between recordings in the folder. With Bookmark selected, they move between the bookmarks in the current recording.

Dot 7 closes the playback screen and returns to the list of recordings.

14.8 Using Bookmarks During Playback

While a recording is playing, you can add bookmarks and move between them.

14.8.1 Opening the Bookmarks List

While playback is active, press Dot 8 + K to open the bookmarks list. Press Select (Dot 8) on a bookmark to move to that point in the recording.

Bookmarks are stored with the recording, so they remain when it is renamed.

14.8.2 Moving Between Bookmarks

- Choose the Bookmark movement unit with the Up Arrow (Space + Dot 1) and Down Arrow (Space + Dot 4) keys.
- Then press the Left Arrow (Space + Dot 3) to move to the previous bookmark and the Right Arrow (Space + Dot 6) to move to the next one.

The player announces the bookmark's name and jumps to that point in the recording.

14.8.3 Bookmarks List Context Menu

The bookmarks list includes a context menu, opened with Space + M, with:

- **Rename — first letter R (Dots 1 2 3 5).** Edit the name of the bookmark. Type the new name on the Perkins keyboard.
- **Delete — first letter D (Dots 1 4 5).** Removes the bookmark permanently.
- **Close — closes the bookmarks list and returns to the playback screen.**
- **Exit — closes the Voice Recorder.**

Use the **Up Arrow** and **Down Arrow** keys to move and press **Select (Dot 8)** to activate any option.

14.9 Settings Screen

To customize your recording preferences:

1. Open the context menu with Space + M (Space + Dots 1 3 4) and choose Settings.
2. The settings screen is a dialog. Use Tab (Space + Dots 4 5) and Shift + Tab (Space + Dots 1 2) to move between settings.
3. Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to change the value of the focused setting.
4. Press **Tab** to move to **OK** and press **Select** to save and return.

14.9.1 Available Settings

The table below describes the use of each setting option.

Setting	Options / Description
Mute speech during recording	Stops the screen reader from speaking while a recording is running, so speech is not captured.
Automatically start recording on launch	Starts a recording as soon as the Voice Recorder is opened.
File format	Choose between MP3 or WAV.
Default storage	Choose where recordings are saved: internal storage or the SD card.
Recording source	Choose the recording source: the default microphone, or another available source.
File name format	Choose between Date and Time or Sequential Numbers.
Notification when recording	Choose the notification given when a recording starts.
Gain	Adjusts recording sensitivity.
Sample rate	Chooses recording quality: 8 kHz, 16 kHz, 22.05 kHz, 44.1 kHz or 48 kHz.
Bit rate	Chooses audio bit rate: 96, 128, 160, 192, 256 or 320 kbps.
Movement units	Chooses which movement units are offered on the playback screen.
Monitor recording through headphones	A check box. When it is checked and headphones are connected, you hear what is being recorded as it is recorded.

14.10 Playback and the Media Player

Recordings are played on the Voice Recorder's own playback screen, described above. The audio itself is handled by the Orbit Media Player's playback service, so a recording keeps playing to the same standard as any other audio on the device.

A recording can also be opened in the Media Player from the file manager, where the Media Player's own commands apply.

14.11 Shortcut Summary Table

Below is the table which lists the shortcut commands you can use while using the Voice Recorder application.

Action	Orbit Speak (Perkins Braille)
Start / Stop Recording	F3
New Recording (from the list of recordings)	Space + N (Space + Dots 1 3 4 5)
Pause / Resume Recording	Space, or Select (Dot 8)
Add Bookmark While Recording	Dot 8 + B
Rename Recording	Space + R (Space + Dots 1 2 3 5)
Delete Recording	Space + D (Space + Dots 1 4 5)
New Folder	Dot 8 + F
Recording Properties	Dot 8 + P
Help	Dot 8 + H
Up One Level in the List	Dot 7
Open Settings	Space + M, then Settings
Play / Pause Playback	Space
Previous Recording	Dot 1
Next Recording	Dot 4
Decrease Volume	Dot 2
Increase Volume	Dot 5
Decrease Playback Speed	Dot 3
Increase Playback Speed	Dot 6
Normal Playback Speed	Dot 8 + D
Go to Time	Dot 8 + G

Action	Orbit Speak (Perkins Braille)
Speak Position and Length	Dot 8 + T
Recording Information	Dot 8 + I
Add Bookmark During Playback	Dot 8 + B
Open Bookmarks List	Dot 8 + K
Next Movement Unit	Down Arrow (Space + Dot 4)
Previous Movement Unit	Up Arrow (Space + Dot 1)
Next Position (according to movement unit)	Right Arrow (Space + Dot 6)
Previous Position (according to movement unit)	Left Arrow (Space + Dot 3)
Go Back One Screen	Space + E (Space + Dots 1 5), or Space + Z (Space + Dots 1 3 5 6)

15 [Clock and Time Management](#)

The Clock and Time Management group contains the tools for checking the time and date and for working with alarms, world times, the stopwatch, and the countdown timer.

Open the group from the Home Screen: press **Home (Space + Dots 1 2 3 4 5 6)**, navigate to **Clock and Time Management** and press **Select (Dot 8)**, or press **C (Dots 1 4)**.

On the Orbit Speak the five navigation keys are typed as Braille chords:

- **Up Arrow = Space + Dot 1**
- **Down Arrow = Space + Dot 4**
- **Left Arrow = Space + Dot 3**
- **Right Arrow = Space + Dot 6**
- **Select = Dot 8**

Other commands used throughout this chapter:

- Open the context menu = **Space + M (Space + Dots 1 3 4)**
- Go up one level / Back = **Left Arrow**
- Close the current application = **Space + Dots 1 3 5 6**
- Return to the Home Screen = **Space + Dots 1 2 3 4 5 6**

All numbers and times are typed on the Perkins keyboard in Braille. There are no numeric keypad and no keypad modes.

15.1 Check the Current Time

To hear the current time, open **Clock and Time Management**, navigate to **Check Current Time** and press **Select**, or press **C (Dots 1 4)**. Orbit Speak announces the current time.

15.2 Check the Current Date

To hear the current date, open **Clock and Time Management**, navigate to **Check Current Date** and type its first letter, or navigate to it and press **Select**. Orbit Speak announces the current date.

15.3 Alarm Clock

Alarm Clock allows you to create and manage alarms on Orbit Speak.

Use Alarm Clock when you want Orbit Speak to alert you at a specific time.

15.3.1 Opening Alarm Clock

To open Alarm Clock, do the following:

1. Press **Home (Space + Dots 1 2 3 4 5 6)** to go to the Home Screen.
2. Navigate to **Clock and Time Management** and press **Select** or press **C (Dots 1 4)**.
3. Navigate to **Alarm Clock** and press **Select** or press **A (Dot 1)**.

The Alarm Clock list opens.

If alarms have already been created, the list shows your saved alarms. If no alarms have been created yet, Orbit Speak speaks a message telling you that the list is empty and that you can use the context menu to create an alarm.

Use the **Up Arrow** and **Down Arrow** keys to move through the Alarm Clock list.

Press **Left Arrow** to return to the Clock and Time Management group.

15.3.2 Creating an Alarm

To create an alarm, do the following:

1. Open **Alarm Clock**.
2. Press **Space + M** to open the context menu.
3. Navigate to **New Alarm** and press **Select**.

The Create New Alarm Dialog opens. The dialog contains settings for the alarm time, tone, duration, repeat interval, and frequency.

Move between the dialog controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

Change a combo box value with the **Up Arrow** and **Down Arrow** keys.

Type the alarm hour and minute on the Perkins keyboard.

Move to **OK** and press **Select** to save the alarm.

Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving.

15.3.3 Alarm Time

The alarm time controls when the alarm will ring. Set the alarm hour and minute in the Create New Alarm dialog by typing the values on the Perkins keyboard.

Make sure the device date, time, and time format are correct before relying on alarms.

15.3.4 Alarm Tone

Alarm Tone controls the sound or vibration used when the alarm rings. Cycle the value with **Up Arrow** and **Down Arrow**. Available alarm tones include:

- **Tone 1**
- **Tone 2**
- **Tone 3**
- **Vibration Only**

Choose **Vibration Only** if you want the alarm to vibrate without playing a tone.

15.3.5 Alarm Duration

Alarm Duration controls how long the alarm rings before it stops automatically. Available duration options include:

- **1 minute**
- **2 minutes**
- **3 minutes**
- **5 minutes**
- **10 minutes**

15.3.6 Repeat Interval

Repeat Interval controls how long Orbit Speak waits before alerting again if the alarm is not dismissed. Available repeat interval options include:

- **Off**
- **1 minute**
- **2 minutes**
- **3 minutes**
- **5 minutes**
- **10 minutes**

- **15 minutes**
- **20 minutes**

Choose **Off** if you do not want the alarm to repeat after the first alert.

15.3.7 Frequency

Frequency controls when the alarm repeats. Available frequency options include:

- **Just Once**
- **Every Day**
- **Individual days of the week**

Use **Just Once** for a one-time alarm. Use **Every Day** for an alarm that rings every day. Choose individual days of the week when you want the alarm to ring only on selected days.

15.3.8 Editing an Alarm

To edit an alarm, do the following:

1. Open **Alarm Clock**.
2. Move to the alarm you want to edit with the **Up Arrow** and **Down Arrow** keys.
3. Press **Space + M** to open the context menu.
4. Navigate to **Edit Alarm** and press **Select**.

The Edit Alarm dialog opens. Move between controls with **Tab** and **Shift + Tab**, change combo values with **Up Arrow** and **Down Arrow**, and type any time values on the Perkins keyboard.

Move to **OK** and press **Select** to save your changes.

Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving changes.

15.3.9 Turning an Alarm on or Off

You can turn an alarm on or off without deleting it. To turn an alarm on or off, do the following:

1. Open **Alarm Clock**.
2. Move to the alarm you want to change.
3. Press **Space + M** to open the context menu.
4. Navigate to **Turn on** or **Turn Off** and press **Select**.

Orbit Speak updates the alarm state and speaks a confirmation message.

15.3.10 Deleting an Alarm

To delete an alarm, do the following:

1. Open **Alarm Clock**.

2. Move to the alarm you want to delete.
3. Press **Space + M** to open the context menu.
4. Navigate to **Delete Alarm** and press **Select**.

A confirmation dialog opens. Move between **Yes** and **No** with **Tab** and **Shift + Tab**. Choose **Yes** and press **Select** to delete the alarm. Choose **No** and press **Select**, or press **Left Arrow**, to cancel.

Warning: Deleting an alarm removes it from Alarm Clock.

15.3.11 When an Alarm Rings

When an alarm rings, Orbit Speak opens an alarm dialog. The dialog contains the current alarm information and controls for responding to the alarm. The available controls can include:

- **Snooze**
- **Dismiss**

Move between the controls with **Tab** and **Shift + Tab**, and press **Select** to activate the focused control.

Choose **Snooze** if you want Orbit Speak to alert you again after the selected repeat interval. Choose **Dismiss** to stop the alarm.

15.3.12 Alarm Clock Context Menu

The Alarm Clock context menu provides actions for creating and managing alarms.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **New Alarm** — Opens the Create New Alarm dialog.
- **Edit Alarm** — Opens the Edit Alarm dialog for the focused alarm.
- **Delete Alarm** — Deletes the focused alarm after confirmation.
- **Turn On** or **Turn Off** — Turns the focused alarm on or off. The item name depends on the current state of the alarm.
- **Exit** — Closes Alarm Clock and returns to the Clock and Time Management group.

15.3.13 Closing Alarm Clock

To close Alarm Clock and return to the Clock and Time Management group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home (Space + Dots 1 2 3 4 5 6)**.

15.4 World Clock

World Clock allows you to check the current time in different cities around the world.

Use World Clock when you want to know the time in another country, region, or time zone.

15.4.1 Opening World Clock

To open World Clock, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Clock and Time Management** and press **Select** or press **C (Dots 1 4)**.
3. Navigate to **World Clock** and press **Select** or press **W (Dots 2 4 5 6)**.

The World Clock list opens.

If you have already added cities, the list shows the cities and their current times. If no cities have been added yet, Orbit Speak speaks a message telling you that the list is empty and that you can use the context menu to add a city.

Use the **Up Arrow** and **Down Arrow** keys to move through the World Clock list.

Press **Left Arrow** to return to the Clock and Time Management group.

15.4.2 Adding a city

To add a city to World Clock, do the following:

1. Open **World Clock**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Add City** and press **Select**.

A city selection dialog opens.

1. Move through the available cities with the **Up Arrow** and **Down Arrow** keys.
2. Press **Select** on the city you want to add.

The city is added to the World Clock list.

To close the dialog without adding a city, press **Left Arrow**, or move to **Cancel** and press **Select**.

15.4.3 Checking the Time in a City

To check the time in a city, do the following:

1. Open **World Clock**.
2. Move through the city list with the **Up Arrow** and **Down Arrow** keys.

Orbit Speak speaks each city name and its current local time. If the city also includes date information, Orbit Speak speaks that information as well.

15.4.4 World Clock Context Menu

The World Clock context menu provides actions for the current city list or focused city.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The available context menu items depend on whether a city is focused. Common context menu items include:

- **Add City** — Opens the city selection dialog so you can add another city to the World Clock list.
- **Delete City** — Removes the focused city from the World Clock list. When you choose **Delete City**, a confirmation dialog opens. Choose **Yes** and press **Select** to remove the city. Choose **No** and press **Select**, or press **Left Arrow**, to cancel.
- **Refresh** — Updates the times shown in the World Clock list.
- **Exit** — Closes World Clock and return to the Clock and Time Management group.

15.4.5 Closing World Clock

To close World Clock and return to the Clock and Time Management group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

15.5 Stopwatch

Stopwatch allows you to measure elapsed time.

Use Stopwatch when you want to time an activity, track duration, or measure how long something takes.

15.5.1 Opening Stopwatch

To open Stopwatch, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Clock and Time Management** and press **Select** or press **C (Dots 1 4)**.
3. Navigate to **Stopwatch** and press **Select** or press **S (Dots 2 3 4)**.

The Stopwatch screen opens.

15.5.2 Stopwatch Screen

The Stopwatch screen contains the current elapsed time and controls for starting, stopping, and resetting the stopwatch. The available controls can include:

- **Start**
- **Stop**
- **Reset**
- **Close**

Move between the controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**, and press **Select** to activate the focused control.

15.5.3 Starting the Stopwatch

To start the stopwatch, do the following:

1. Open **Stopwatch**.

2. Move to **Start**.
3. Press **Select**.

The stopwatch starts counting. Orbit Speak speaks or shows the elapsed time.

15.5.4 Stopping the Stopwatch

To stop the stopwatch, do the following:

1. While the stopwatch is running, move to **Stop**.
2. Press **Select**.

The stopwatch stops counting. The elapsed time remains available on the Stopwatch screen.

15.5.5 Resuming the Stopwatch

To resume timing after stopping the stopwatch, move to **Start** and press **Select** again. The stopwatch continues counting from the stopped time.

15.5.6 Resetting the Stopwatch

To reset the stopwatch, do the following:

1. Stop the stopwatch, if it is running.
2. Move to **Reset**.
3. Press **Select**.

The elapsed time is reset to zero.

15.5.7 Checking the Elapsed Time

While Stopwatch is open, move to the elapsed time item to hear the current elapsed time. If the stopwatch is running, the time continues to update.

15.5.8 Stopwatch Context Menu

The Stopwatch context menu provides actions for the current stopwatch screen.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **Start** — Starts or resumes the stopwatch.
- **Stop** — Stops the stopwatch.
- **Reset** — Resets the elapsed time to zero.
- **Exit** — Closes Stopwatch and returns to the Clock and Time Management group.

15.5.9 Closing Stopwatch

To close Stopwatch and return to the Clock and Time Management group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

15.6 Countdown Timer

Countdown Timer allows you to set a timer that counts down from a selected amount of time.

Use Countdown Timer when you want Orbit Speak to alert you after a specific duration, such as 5 minutes, 30 minutes, or 1 hour.

15.6.1 Opening Countdown Timer

To open Countdown Timer, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Clock and Time Management** and press **Select** or press **C (Dots 1 4)**.
3. Navigate to **Countdown Timer** and type its first letter or navigate to it and press **Select**.

The Countdown Timer screen opens.

15.6.2 Countdown Timer Screen

The Countdown Timer screen contains edit boxes for setting the countdown duration and buttons for controlling the timer. The screen contains the following controls:

- **Hours** edit box
- **Minutes** edit box
- **Seconds** edit box
- **Start** button
- **Pause** button, when the timer is running
- **Resume** button, when the timer is paused
- **Reset** button
- **Close** button

Move between the controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.

Type the values in the **Hours**, **Minutes**, and **Seconds** edit boxes on the Perkins keyboard. Only numeric values are accepted.

Orbit Speak checks the values before starting the timer. If the value is not valid, Orbit Speak speaks a clear error message and the timer does not start.

15.6.3 Setting a Timer

To set a timer, do the following:

1. Open **Countdown Timer**.
2. Move to the **Hours** edit box and type the number of hours.
3. Move to the **Minutes** edit box and type the number of minutes.

4. Move to the **Seconds** edit box and type the number of seconds.
5. Move to **Start**.
6. Press **Select**.

The countdown starts. Orbit Speak speaks a clear message indicating that the timer has started.

You do not need to enter values in all three edit boxes. For example, to set a timer for 5 minutes, type **5** in the **Minutes** edit box and leave the other edit boxes empty or set to zero.

15.6.4 Starting, Pausing, Resuming, and Resetting

Countdown Timer uses the same control behavior as Stopwatch.

To start the countdown, move to **Start** and press **Select**. To pause the countdown, move to **Pause** and press **Select**. To resume a paused countdown, move to **Resume** and press **Select**. To reset the countdown, move to **Reset** and press **Select**.

Orbit Speak speaks clear messages for each action, such as when the timer starts, pauses, resumes, resets, or finishes.

15.6.5 Using Select from the Time Edit Boxes

When focus is in the **Hours**, **Minutes**, or **Seconds** edit box, pressing **Select** performs the same action as the current main timer button. For example:

- If the timer has not started, pressing **Select** in an edit box starts the timer.
- If the timer is running, pressing **Select** in an edit box pauses the timer.
- If the timer is paused, pressing **Select** in an edit box resumes the timer.

This allows you to control the timer without moving away from the time edit boxes.

15.6.6 Checking the Remaining Time

While the timer is running, move to the remaining time item to hear how much time is left. The remaining time continues to update while the timer is active.

15.6.7 Timer Feedback

Countdown Timer provides feedback using the same feedback options as Stopwatch. Depending on your settings, feedback can include:

- Sounds
- Speech
- Vibration
- Vibration and speech

The same settings used for Stopwatch feedback also apply to Countdown Timer.

15.6.8 When the Timer Finishes

When the countdown reaches zero, Orbit Speak alerts you. The alert uses the same feedback behavior as Stopwatch, according to your selected settings. Orbit Speak also speaks a clear message indicating that the countdown has finished.

Move to **Dismiss** and press **Select** to stop the alert, if a dismiss control is shown.

15.6.9 Countdown Timer Context Menu

The Countdown Timer context menu provides actions for the current timer screen.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **Start** — Starts the countdown timer using the entered duration.
- **Pause** — Pauses the countdown timer when it is running.
- **Resume** — Continues the countdown timer after it has been paused.
- **Reset** — Resets the countdown timer.
- **Exit** — Closes Countdown Timer and return to the Clock and Time Management group.

15.6.10 Closing Countdown Timer

To close Countdown Timer and return to the Clock and Time Management group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

16 Tools

The Tools group contains the Orbit Speak utilities: battery status, calculator, calendar, contacts, weather, software updates, and SD card formatting.

Open the group from the Home Screen: press **Home (Space + Dots 1 2 3 4 5 6)**, navigate to **Tools** and press **Select (Dot 8)**, or press **T (Dots 2 3 4 5)**.

Warning: The **Format SD Card** tool erases the SD card. Formatting deletes all files stored on the card and cannot be undone. Back up anything you want to keep before you use it.

Several items in this group begin with the letter C — Check Battery Status, Calculator, Calendar, Contacts, and Check for Updates — so they cannot all use C as first-letter navigation. The first item that begins with C keeps it; each of the others uses a distinct first letter, flagged below with.

As in the rest of the Orbit Speak interface, the navigation keys are Braille chords: **Up Arrow** = **Space + Dot 1**, **Down Arrow** = **Space + Dot 4**, **Left Arrow** = **Space + Dot 3**, **Right Arrow** = **Space + Dot 6**, **Select** = **Dot 8**. The context menu is **Space + M (Space + Dots 1 3 4)**, moving between dialog controls is **Tab (Space + Dots 4 5) / Shift + Tab (Space + Dots 1 2)**, and all text and numbers are typed on the Perkins keyboard.

16.1 Check the Battery Status

The first item in the Tools group checks the battery status. Navigate to **Check Battery Status** and press **Select**, or press **C (Dots 1 4)**, to hear the current battery level. You can also check the battery from anywhere by pressing **Space + Dots 1 6**.

16.2 Calculator

Your Orbit Speak has a simple calculator app that lets you calculate mathematical expressions.

To open the Calculator application, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Calculator** and type its first letter or navigate to it and press **Select**.

The application is now open and ready to use.

Type numbers and arithmetic operators directly on the Perkins keyboard. There are no keypad and no digit or symbol mode to switch between — type each operator sign (plus, minus, multiply, and divide) where you need it. You can also insert an operator from the context menu instead of typing it; see Calculator Menu below.

If you type a wrong number, you can erase the last entry by pressing **Backspace (Dot 7)**.

To calculate an expression, press **Select**. Orbit Speak speaks the result of the calculation. Press **Select** once more if you want to hear the result again.

To clear the display completely, open the context menu with **Space + M**, move down to **Clear All**, and press **Select**.

To close the Calculator application, press **Left Arrow** to go up one level, press **Home** to return to the Home Screen, or press **Space + Dots 1 3 5 6** to close the application. You can also close it from the context menu: open the menu with **Space + M**, move down to **Exit**, and press **Select**.

16.2.1 Calculator Menu

The Calculator context menu contains the arithmetic operator signs: Plus, Minus, Multiply, and Divide By. You can use it instead of typing the operator symbols on the Perkins keyboard.

- To open the menu, press **Space + M**.
- To close the menu, press **Left Arrow**.
- Move through the menu with the **Up Arrow** and **Down Arrow** keys.
- To select a menu item, press **Select**.

16.3 Calendar

Calendar allows you to check dates, move through days, and manage calendar events on Orbit Speak.

Use Calendar when you want to review upcoming events, add new events, edit existing events, or delete events.

To open Calendar, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Calendar** and type its first letter or navigate to it and press **Select**.

The Calendar screen opens. When Calendar opens, focus is on the current date. Orbit Speak speaks about the current date and the available events for that date, if any.

16.3.1 Calendar Navigation

Use the arrow keys to move through the calendar. The following commands are available:

- **Left Arrow (Space + Dot 3)**: Move to the previous day.
- **Right Arrow (Space + Dot 6)**: Move to the next day.
- **Up Arrow (Space + Dot 1)**: Move to the previous week.
- **Down Arrow (Space + Dot 4)**: Move to the next week.

When you move to a different date, Orbit Speak speaks the focused date. If the date contains events, Orbit Speak also indicates that events are available.

16.3.2 Checking Events for a Date

To check events for a date, do the following:

1. Open **Calendar**.
2. Use the arrow keys to move to the date you want.
3. Press **Space + M** to open the context menu.
4. Navigate to **Event List** and press **Select**.

The Event List opens for the selected date. Use the **Up Arrow** and **Down Arrow** keys to move through the events. Press **Select** on an event to open its details. Press **Left Arrow** to return to Calendar.

16.3.3 Adding an Event

To add a new event, do the following:

1. Open **Calendar**.
2. Move to the date where you want to add the event.
3. Press **Space + M** to open the context menu.
4. Navigate to **New Event** and press **Select**.

The New Event dialog opens. The dialog can include fields such as:

- **Title**

- **Date**
- **Start Time**
- **End Time**
- **Location**
- **Notes**
- **Reminder**

Move between the dialog controls with **Tab** and **Shift + Tab**. Type text and time values on the Perkins keyboard and change combo box or date values with the **Up Arrow** and **Down Arrow** keys.

Move to **OK** and press **Select** to save the event. Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving.

If required information is missing or the value is not valid, Orbit Speak speaks an error message and keeps the dialog open.

16.3.4 Viewing Event Details

To view event details, do the following:

1. Open **Calendar**.
2. Move to the date that contains the event.
3. Open the context menu and choose **Event List**.
4. Move to the event you want.
5. Press **Select**.

The event details open. Use the **Up Arrow** and **Down Arrow** keys to move through the event information. Press **Left Arrow** to return to the Event List.

16.3.5 Editing an Event

To edit an event, do the following:

1. Open **Calendar**.
2. Move to the date that contains the event.
3. Open the context menu and choose **Event List**.
4. Move to the event you want to edit.
5. Press **Space + M** to open the context menu.
6. Navigate to **Edit Event** and press **Select**.

The Edit Event dialog opens. Move between fields with **Tab** and **Shift + Tab**, change combo or date values with the **Up Arrow** and **Down Arrow** keys, and type text on the Perkins keyboard.

Move to **OK** and press **Select** to save your changes. Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving changes.

16.3.6 Deleting an Event

To delete an event, do the following:

1. Open **Calendar**.
2. Move to the date that contains the event.
3. Open the context menu and choose **Event List**.
4. Move to the event you want to delete.
5. Press **Space + M** to open the context menu.
6. Navigate to **Delete Event** and press **Select**.

A confirmation dialog opens. Move between **Yes** and **No** with **Tab** and **Shift + Tab**. Choose **Yes** and press **Select** to delete the event. Choose **No** and press **Select**, or press **Left Arrow**, to cancel.

Warning: Deleting an event removes it from Calendar.

16.3.7 Calendar Context Menu

The Calendar context menu provides actions for the focused date.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **New Event** — Opens the New Event dialog for the focused date.
- **Event List** — Opens the list of events for the focused date.
- **Go to Today** — Moves focus back to the current date.
- **Go to Date** — Opens a dialog where you can enter or choose a date. Type or set the date, then Calendar moves focus to that date.
- **Exit** — Closes Calendar and return to the Tools group.

16.3.8 Event List Context Menu

The Event List context menu provides actions for the focused event.

To open the context menu, move to an event in the Event List and press **Space + M**. The context menu can include the following items:

- **Event Details** — Opens the details for the focused event.
- **Edit Event** — Opens the Edit Event dialog for the focused event.
- **Delete Event** — Deletes the focused event after confirmation.

- **New Event** — Opens the New Event Dialog.
- **Close** — Closes the Event List and return to Calendar.

16.3.9 Closing Calendar

To close Calendar and return to the Tools group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

16.4 Contacts

Contacts allow you to store and manage contact information on Orbit Speak.

Use Contacts when you want to keep names, phone numbers, email addresses, and other contact details. Contacts also allow you to import contacts from a vCard file and export contacts to a vCard file.

16.4.1 Opening Contacts

To open Contacts, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Contacts** and type its first letter or navigate to it and press **Select**.

The Contacts list opens.

If contacts have already been added, the list shows your saved contacts. If no contacts have been added yet, Orbit Speak speaks a message telling you that the list is empty and that you can use the context menu to add or import contacts.

Use the **Up Arrow** and **Down Arrow** keys to move through the Contacts list. Press **Select** on a contact to open its details. Press **Left Arrow** to return to the Tools group.

16.4.2 Adding a Contact

To add a contact, do the following:

1. Open **Contacts**.
2. Press **Space + M** to open the context menu.
3. Navigate to **New Contact** and press **Select**.

The New Contact Dialog opens. The dialog can include fields such as:

- **First Name**
- **Last Name**
- **Phone Number**
- **Email Address**
- **Address**

- **Notes**

Move between the dialog controls with **Tab** and **Shift + Tab** and type the information you want to save on the Perkins keyboard.

Move to **OK** and press **Select** to save the contact. Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving.

If required information is missing or a field contains invalid information, Orbit Speak speaks an error message and keeps the dialog open.

16.4.3 Viewing Contact Details

To view a contact, do the following:

1. Open **Contacts**.
2. Use the **Up Arrow** and **Down Arrow** keys to move through the contact list.
3. Press **Select** on the contact you want.

The contact details are open. Use the **Up Arrow** and **Down Arrow** keys to move through the available details. Press **Left Arrow** to return to the Contacts list.

16.4.4 Editing a Contact

To edit a contact, do the following:

1. Open **Contacts**.
2. Move to the contact you want to edit.
3. Press **Space + M** to open the context menu.
4. Navigate to **Edit Contact** and press **Select**.

The Edit Contact dialog opens. Move between the fields with **Tab** and **Shift + Tab** and type your changes on the Perkins keyboard.

Move to **OK** and press **Select** to save your changes. Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving changes.

16.4.5 Deleting a Contact

To delete a contact, do the following:

1. Open **Contacts**.
2. Move to the contact you want to delete.
3. Press **Space + M** to open the context menu.
4. Navigate to **Delete Contact** and press **Select**.

A confirmation dialog opens. Move between **Yes** and **No** with **Tab** and **Shift + Tab**. Choose **Yes** and press **Select** to delete the contact. Choose **No** and press **Select**, or press **Left Arrow**, to cancel.

Warning: Deleting a contact removes it from Contacts.

16.4.6 Selecting Contacts

The Contacts list allows you to select one or more contacts. Use selection when you want to export only specific contacts.

To select a contact, move to it and press **Space**. When a contact is selected, the word **selected** is added to the contact's name in the list.

To unselect a selected contact, move to it and press **Space** again.

16.4.7 Selecting All Contacts

To select all contacts, open the context menu with **Space + M** and choose **Select All**. After all contacts are selected, the word **selected** is added to each contact name in the list.

16.4.8 Exporting Selected Contacts

Contacts can export selected contacts to a vCard file. To export selected contacts, do the following:

1. Open **Contacts**.
2. Select the contacts you want to export by moving to each one and pressing **Space**.
3. Press **Space + M** to open the context menu.
4. Navigate to **Export Selected Contacts** and press **Select**.

A save file dialog opens.

1. Choose the location where you want to save the vCard file. Move through the folder list with the **Up Arrow** and **Down Arrow** keys and press **Dot 7** to go up a folder level.
2. Type the file name on the Perkins keyboard.
3. Move to **OK** and press **Select**.

The selected contacts are saved to a vCard file according to the save file dialog parameters. When export finishes, Orbit Speak speaks a success message or a failure message.

16.4.9 Exporting All Contacts

To export all contacts, select all contacts first and then use **Export Selected Contacts**. Do the following:

1. Open **Contacts**.
2. Open the context menu and choose **Select All**.
3. Open the context menu.
4. Navigate to **Export Selected Contacts** and press **Select**.
5. Choose the save location and type the file name in the save file dialog.
6. Move to **OK** and press **Select**.

All selected contacts are saved to a vCard file. When export finishes, Orbit Speak speaks a success message or a failure message.

16.4.10 Importing Contacts from a File

Contacts can import contacts from a vCard file. To import contacts, do the following:

1. Open **Contacts**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Import Contacts from File** and press **Select**.

An open file dialog opens.

1. Navigate to the vCard file you want to import. Move through the list with the **Up Arrow** and **Down Arrow** keys and press **Dot 7** to go up a folder level.
2. Press **Select** or move to **OK** and press **Select**.

Orbit Speak imports the contacts from the selected vCard file. When import finishes, Orbit Speak speaks of a success message or a failure message.

16.4.11 Contacts Context Menu

The Contacts context menu provides actions for the contact list or the focused contact.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **New Contact** — Opens the New Contact dialog.
- **Edit Contact** — Opens the Edit Contact dialog for the focused contact.
- **Delete Contact** — Deletes the focused contact after confirmation.
- **Select All** — Selects all contacts in the Contacts list.
- **Export Selected Contacts** — Exports the selected contacts to a vCard file.
- **Import Contacts from File** — Opens an open file dialog so you can import contacts from a vCard file.
- **Contact Details** — Opens the details for the focused contact.
- **Exit** — Closes Contacts and returns to the Tools group.

16.4.12 Closing Contacts

To close Contacts and return to the Tools group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

16.5 Weather

Weather allows you to check current weather information and forecast information for a selected location.

This feature requires an active internet connection.

Use Weather when you want to know the current temperature, weather conditions, and forecast details.

16.5.1 Opening Weather

To open Weather, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Weather** and press **Select** or press **W (Dots 2 4 5 6)**.

The Weather application is open.

If a location has already been selected, Orbit Speak shows the weather information for that location. If no location has been selected yet, Orbit Speak asks you to add or choose a location.

16.5.2 Adding a Location

To add a location, do the following:

1. Open **Weather**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Add Location** and press **Select**.

A location search dialog opens.

1. Type the city or location name on the Perkins keyboard.
2. Move to **OK** and press **Select**.

A list of matching locations opens.

1. Move through the results with the **Up Arrow** and **Down Arrow** keys.
2. Press **Select** on the location you want.

The location is added to Weather and its weather information is shown.

To close the dialog without adding a location, press **Left Arrow**, or move to **Cancel** and press **Select**. If the location cannot be found, Orbit Speak speaks an error message.

16.5.3 Checking Weather Information

When Weather opens, use the **Up Arrow** and **Down Arrow** keys to move through the available weather information. The information can include:

- Current temperature
- Feels-like temperature
- Weather condition
- High and low temperature
- Humidity
- Wind speed

- Chance of rain
- Forecast information

The exact information depends on the weather service and the selected location.

16.5.4 Changing Locations

If you have added more than one location, you can choose which location to view. To change location, do the following:

1. Open **Weather**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Locations** and press **Select**.

The list of locations opens.

1. Move through the locations with the **Up Arrow** and **Down Arrow** keys.
2. Press **Select** on the location you want.

Weather information for the selected location is shown.

16.5.5 Refreshing Weather Information

Weather information is updated from the internet. To refresh weather information, do the following:

1. Open **Weather**.
2. Press **Space + M** to open the context menu.
3. Navigate to **Refresh** and press **Select**.

Orbit Speak retrieves the latest weather information for the selected location. If the update succeeds, the new weather information is shown. If the update fails, Orbit Speak speaks an error message.

16.5.6 Weather Context Menu

The Weather context menu provides actions for managing locations and updating weather information.

To open the context menu, press **Space + M**. Use the **Up Arrow** and **Down Arrow** keys to move through the menu items, and press **Select** to activate the focused item. Press **Left Arrow** to close the context menu without selecting an item.

The context menu can include the following items:

- **Add Location** — Opens the location search dialog so you can add a new city or location.
- **Locations** — Opens the list of saved weather locations. Use this option to switch between locations.
- **Delete Location** — Removes the focused or selected location from Weather. When you choose **Delete Location**, a confirmation dialog opens. Choose **Yes** and press **Select** to remove the location. Choose **No** and press **Select**, or press **Left Arrow**, to cancel.
- **Refresh** — Updates the weather information for the current location.

- **Exit** — Closes Weather and returns to the Tools group.

16.5.7 Closing Weather

To close Weather and return to the Tools group, press **Left Arrow**. To close the application entirely, press **Space + Dots 1 3 5 6**. To return to the Home Screen, press **Home**.

16.6 Check for Updates

Check for Updates allows you to check for software updates, install available updates, install firmware updates from an SD card, and configure update settings.

This feature requires an active internet connection when checking for updates online.

16.6.1 Opening Check for Updates

To open Check for Updates, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Check for Updates** and type its first letter or navigate to it and press **Select**.

The updater main screen opens.

16.6.2 Updater Main Screen

The updater main screen contains product information and update actions. The screen contains the following elements:

- **Product information** text box
- **Check for Updates** button
- **Install from SD Card** button
- **Settings** button
- **Close** button

Move between the controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**, and press **Select** to activate the focused button. Press **Left Arrow** to close the updater and return to the Tools group.

16.6.3 Product Information

The **Product information** text box contains information about the device and update configuration. It can include:

- Product name
- Market
- Currently installed version
- Update channel

Move to the product information text box to hear this information.

16.6.4 Checking for Updates

To check for updates, do the following:

1. Open **Check for Updates**.
2. Move to **Check for Updates**.
3. Press **Select**.

Orbit Speak checks the selected update channel for available updates.

If no update is available, Orbit Speak speaks a message telling you that the device is up to date. If an update is available, the Update Available dialog opens. If the check fails, Orbit Speak speaks an error message. This can happen if the internet connection is not available or the update server cannot be reached.

16.6.5 Update Available Dialog

When an update is available, Orbit Speak opens a dialog containing information about the new update. The dialog can include information such as:

- New version
- Update channel
- Update details or release information

The dialog contains options to download and install the update or cancel. Move between the controls with **Tab** and **Shift + Tab**.

To install the update, move to **Download and Install** and press **Select**.

To close the dialog without installing the update, move to **Cancel** and press **Select**, or press **Left Arrow**.

16.6.6 Installing Updates

When update installation starts, a dialog titled **Installing Updates** opens. The Installing Updates dialog contains:

- A progress bar
- Status messages
- **Cancel** button

During installation, the progress bar and status messages update according to the current action. Orbit Speak speaks status messages during the update process. Status messages can include:

- Downloading
- Decrypting
- Extracting
- Installing application
- Installing application name

When each action begins or changes, Orbit Speak speaks the updated status.

16.6.7 Cancelling Update Installation

To cancel the update process, move to **Cancel** and press **Select**.

If cancellation is allowed at the current stage, Orbit Speak cancels the update process and speaks a message. If cancellation is not possible at the current stage, Orbit Speak continues the update process and speaks the appropriate status message.

Do not turn off Orbit Speak while updates are being installed.

16.6.8 Installing from SD Card

The **Install from SD Card** button allows you to install an update file from an SD card. Use this option when you have received an update file and copied it to the SD card.

To install from an SD card, do the following:

1. Copy the update file to the SD card according to the update instructions you received.
2. Insert the SD card into Orbit Speak.
3. Open **Check for Updates**.
4. Move to **Install from SD Card**.
5. Press **Select**.

Orbit Speak checks the SD card for a valid update file. If a valid update file is found, Orbit Speak starts the update flow. If no valid update file is found, Orbit Speak speaks an error message.

16.6.9 Firmware Update Flow

Firmware updates use the same flow, prompts, and dialogs as in earlier versions of Orbit Speak. Follow the prompts spoken by Orbit Speak.

Make sure the device has enough battery power before starting a firmware update. Do not remove the SD card, disconnect power, or turn off the device while a firmware update is being installed.

16.6.10 Updater Settings

The **Settings** button opens the updater settings dialog. Use this dialog to choose the update channel and configure automatic update checking.

To open updater settings, do the following:

1. Open **Check for Updates**.
2. Move to **Settings**.
3. Press **Select**.

The settings dialog opens.

The updater settings dialog contains four controls:

- **Auto Check** Checkbox

- **Update Channel** selector combo box
- **OK** button
- **Cancel** button

Move between the dialog controls with **Tab** and **Shift + Tab**.

Change the selected update channel in the combo box with the **Up Arrow** and **Down Arrow** keys.

Press **Select** on **Auto Check** to check or uncheck automatic update checking.

Move to **OK** and press **Select** to save your changes. Move to **Cancel** and press **Select**, or press **Left Arrow**, to close the dialog without saving changes.

16.6.11 Auto Check

The **Auto Check** checkbox controls whether Orbit Speak checks for updates automatically.

When Auto Check is selected, Orbit Speak can check for updates automatically according to the device update behavior. When Auto Check is not selected, you can still check for updates manually using the **Check for Updates** button.

16.6.12 Update Channel

The **Update Channel** selector controls which update channel Orbit Speak uses when checking for updates. The selected update channel is shown in the product information text box on the updater main screen.

Choose the update channel you want with the **Up Arrow** and **Down Arrow** keys, then move to **OK** and press **Select** to save the setting.

16.6.13 Closing Check for Updates

To close the updater, move to **Close** and press **Select**, or press **Left Arrow**. To return to the Home Screen, press **Home**.

16.7 Format SD Card

Format SD Card erases and reformats the SD card in Orbit Speak.

Warning: Formatting the SD card deletes all files stored on the card. This action cannot be undone. Back up any recordings, documents, contacts, or other files you want to keep before you format the card.

To format the SD card, do the following:

1. Press **Home** to go to the Home Screen.
2. Navigate to **Tools** and press **Select** or press **T (Dots 2 3 4 5)**.
3. Navigate to **Format SD Card** and press **Select** or press **F (Dots 1 2 4)**.
4. A confirmation dialog opens. Move between **Yes** and **No** with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.
5. Choose **Yes** and press **Select** to format the card, or choose **No** and press **Select**, or press **Left Arrow**, to cancel.

When formatting begins, Orbit Speak speaks status messages and speaks a confirmation message when the card has been formatted. Do not remove the SD card or turn off the device while formatting is in progress.

To return to the Tools group, press **Left Arrow**. To return to the Home Screen, press **Home**.

16.8 App Catalog

- The App Catalog is found in the **Tools** group. It lists the third-party applications that Orbit Research has approved for your Orbit Speak, and it is where you install and remove them. For more about approved applications, see the Third-Party Applications chapter.
- To open the App Catalog, navigate to it in the **Tools** group and press **Select (Dot 8)**, or press **A (Dot 1)**.
- The App Catalog opens as a dialog that lists the applications available for your Orbit Speak. At present the list contains one application, **BARD Mobile**.
- To install applications, do the following:
- Move through the list of applications with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**.
- Press **Select (Dot 8)** on an application to check it and mark it for installation. Press **Select** again to uncheck it.
- When you have checked the applications you want, move to the **Install** button with **Tab (Space + Dots 4 5)** and press **Select**. The App Catalog downloads and installs the checked applications.
- To leave the App Catalog without installing anything, move to the **Close** button and press **Select**, or press **Space + Dots 1 3 5 6**.
- To remove an application, do the following:
- Move to the application in the list.
- Press **Space + M (Space + Dots 1 3 4)** to open the context menu, navigate to **Remove**, press **Select**, and confirm. The application is removed from your Orbit Speak.

17 Third-Party Applications

- The earlier chapters of this guide describe the applications developed by Orbit Research. In addition to these, Orbit Speak can run selected third-party applications — programs developed by other companies and organizations, not by Orbit Research.
- To protect your experience, Orbit Speak does not allow arbitrary applications to be installed. Only third-party applications that Orbit Research has specifically tested and approved can be added. Each approved application has been checked to confirm that it runs reliably on Orbit Speak and that it can be operated with the Perkins braille keyboard through the built-in screen reader, in the same way as Orbit Speak's own applications. Applications that have not been approved cannot be installed.

- Approved applications are installed from the **App Catalog** in the **Tools** group. The App Catalog lists the third-party applications currently available for your Orbit Speak; you select one from the list and confirm to install it.
- Because these applications are not developed by Orbit Research, the behavior of each one is defined by its original developer. This guide explains how to operate each approved application using the Orbit Speak keyboard, and notes where the instructions are adapted from the developer's own documentation. The following chapter describes the first approved application, **BARD Mobile**.

18 [Reading NLS BARD Books with BARD Mobile](#)

18.1 About This Section

- **BARD Mobile** is a free Android application from the National Library Service for the Blind and Print Disabled (NLS). It lets eligible patrons download and read talking books and magazines from the BARD collection. On Orbit Speak, you operate BARD Mobile with the Perkins braille keyboard and the built-in screen reader instead of touching the screen, so the pages, buttons, and lists you would normally reach with finger gestures are reached with braille chords and the **Select** key.
- This section is based on the official BARD Mobile for Android user guide published by the National Library Service, and it explains the same features in terms of the Orbit Speak keyboard. For account questions, eligibility, and the full feature set, the NLS guide remains the authoritative source.

18.2 Before You Start

- Make sure you have these items ready before signing in:
- An active NLS BARD account and password.
- A working internet connection. Wi-Fi is the simplest option for downloading books.
- The guide uses the phrase move focus to mean pressing **Tab** or **Shift + Tab** until the screen reader speaks the control you want.

18.3 How Orbit Speak Keys Work Inside BARD Mobile

- When BARD Mobile is running on Orbit Speak, each item on the screen is presented one at a time and spoken aloud. The keys behave as follows:
- **Tab (Space + Dots 4 5)**: Move to the next item on the screen, the same as swiping right with a touch screen reader.
- **Shift + Tab (Space + Dots 1 2)**: Move to the previous item on the screen, the same as swiping left.
- **Right Arrow** and **Left Arrow**: Move between the four main tabs at the top of the app, and change the value of a slider or an adjustable control such as the reading position, speed, or tone.

- **Select (Dot 8):** Activate the item currently in focus. This opens a book, presses a button, follows a link, ticks a checkbox, or starts and stops playback, depending on what is in focus. It replaces the double-tap you would use on a touch screen.
- **Back (Space + Dots 1 5):** Leave the current screen and return to the one before it. Use this in place of the app's Navigate up control.
- **Space + Dots 1 3 5 6:** Close BARD Mobile and return to the Home Screen.

18.4 Signing In

- You need an active NLS BARD account before you can use the app. New members set their password on the BARD website first; the app itself cannot create an account. Once your account exists, sign in on Orbit Speak like this:
- Open **BARD Mobile**. The first screen asks for your account details.
- Press **Tab (Space + Dots 4 5)** to reach the username field, press **Select (Dot 8)**, and type your BARD username (usually your email address) on the Perkins keyboard.
- Press **Tab** to reach the password field, press **Select**, and type your password.
- Continue with **Tab** to the agreement for the terms of service, and press **Select** to accept it.
- Move to the **Log in** button and press **Select**.
- The first time you sign in, the app asks where downloaded books should be kept. Choose a location and confirm it. Keep in mind that changing this location later removes everything you have already downloaded, so pick a place you intend to keep.

18.5 The Four Main Tabs

- Every screen in BARD Mobile has a row of tabs. Move between them with **Left Arrow** and **Right Arrow**. The four tabs are:
- **Bookshelf:** The books and magazines already downloaded to your device.
- **Get Books:** The BARD collection, where you browse and download new titles.
- **Settings:** Controls for playback and your account.
- **Now Reading:** The playback screen for the title you currently have open.
- Above the tabs, each screen shows its title on the left and a **More options** button on the right. Reach the **More options** button with **Tab (Space + Dots 4 5)** and press **Select** to open a short menu of extra actions and help for that screen.

18.6 Finding and Downloading Books (Get Books)

- Move to the **Get Books** tab with **Left Arrow** or **Right Arrow**. This tab has its own row of categories, which you also move through with **Left Arrow** and **Right Arrow**:

- **Wish List:** Titles you have saved on the BARD website to read later.
- **Recently Added:** Titles newly added to the collection.
- **Most Popular:** The titles other members download most often.
- **Browse Magazines:** Magazines available for download.
- **Previous Downloads:** Titles you have downloaded in the last thirty days, in case you want them again.
- **BARD Website:** A link that opens the full BARD site for anything not covered by the categories above.
- Within a category, use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move through the list of titles. You can sort the list by title or by author using the sorting controls before the list. To download a title, move focus to it and press **Select (Dot 8)**.
- While a title downloads, the app reports its progress as a percentage. When it finishes, the title moves to your **Bookshelf**. If you choose a title you already own, the app tells you it is already on your Bookshelf. If you start a download by mistake, let it finish and then remove it from the Bookshelf, since a download in progress cannot be stopped from the **Get Books** tab.

18.7 Your Downloaded Titles (Bookshelf)

- Move to the **Bookshelf** tab to see what you have downloaded. Your titles are grouped into folders by type: audio books, audio magazines, and the user guide. Move through the folders and titles with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**, and open a folder by pressing **Select (Dot 8)** on it.
- To sort the shelf, use the sorting controls before the shelf to arrange titles by title, by author, or by how recently you added them. To hear the full details of a title, such as its author, narrator, length, and description, move focus to it and open its information item, then press **Select** on the **Read** control to begin.
- If you like to keep your shelf organized, the **More options** button lets you create your own folders, rename them, move titles into them, and delete titles or folders you no longer want. When you delete, the app shows checkboxes next to your titles; move through them with **Tab** and **Shift + Tab**, press **Select** to tick the ones you want to remove, and confirm.

18.8 Reading a Book (Now Reading)

- When you open a title, BARD Mobile switches to the **Now Reading** tab, which is the playback screen. You can also return to it at any time by moving to the **Now Reading** tab. Move through its controls with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**. The main controls are:
- **Play and Stop:** Press **Select (Dot 8)** to start reading; press **Select** again to pause.
- **Reading position:** A slider that shows how far through the title you are. Move to it and use **Right Arrow** to move forward or **Left Arrow** to move back.

- **Rewind** and **Fast forward**: Press **Select** on the rewind control to jump back a few seconds, or on the fast-forward control to jump ahead.
- **Previous** and **Next**: These move backward and forward by one navigation point, such as one chapter. Press **Select** to move a single point.
- **Navigation level**: This control sets what **Previous** and **Next** jump by, such as by chapter, by section, by phrase, or by bookmark, depending on how the title is structured. Land on it and press **Select** to change the level. The control announces the current choice.

18.8.1 Jumping to a Specific Place

- For a more precise move, move focus to the **Navigation** control and press **Select (Dot 8)**. Playback pauses and a navigation screen opens with tabs you move between using **Left Arrow** and **Right Arrow**:
- **Contents**: The list of chapters and sections. The section you are currently in is marked. Where a heading contains sub-sections, an expand control lets you open it with **Select**.
- **Page**: Available for magazines, for jumping to a page.
- **Bookmark**: Your saved bookmarks.
- Move through the entries with **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)**, and press **Select** on the one you want. The navigation screen closes and reading begins from that spot. Press **Back (Space + Dots 1 5)** to leave the navigation screen without choosing anything.

18.8.2 Bookmarks

- Bookmarks let you mark a spot and return to it later. On the **Now Reading** screen, move focus to the **Bookmark** control and press **Select (Dot 8)** to place a bookmark at your current position, or to remove a bookmark you are sitting on. Your bookmarks stay with the title between sessions and appear on the **Bookmark** tab of the navigation screen. Every title also comes with fixed bookmarks at the start, the first line, and the final chapter, which are there for convenience and cannot be removed.

18.8.3 The Sleep Timer

- If you like to read yourself to sleep, use the sleep timer on the **Now Reading** screen. Move focus to the sleep-timer control and press **Select (Dot 8)** to step through the choices: fifteen minutes, thirty minutes, forty-five minutes, sixty minutes, the end of the current chapter, and off. Each press moves to the next choice and the timer announces it. When the time runs out, the narration fades and stops.

18.8.4 Adjusting Speed and Tone While Reading

- The **Now Reading** screen also has a control that switches between speed and tone. Land on it and press **Select (Dot 8)** to choose which one you are adjusting, then use **Right Arrow** to increase the value and **Left Arrow** to decrease it. Speed ranges from half speed up to triple speed, and tone ranges from more bass to more treble. Adjustments made here apply to the current title only; to change the default for every title, use the **Settings** tab described below.

18.9 Settings

- Move to the **Settings** tab and use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move through the groups of settings. Press **Select (Dot 8)** to open a setting, and for on/off settings press **Select** to toggle them. The settings are organized into audio settings, account settings, and a shortcut to the device's own accessibility settings.

18.9.1 Audio Settings

- These control how titles sound and behave during playback. The ones most worth knowing are:
- **Speed** and **Tone**: Set the default narration speed (from half to triple, in steps) and the default tone (from more bass to more treble). Unlike the on-screen adjustments, these become the defaults for titles you open later.
- **Background playback**: Whether a title keeps playing when you move away from the app.
- **Automatic start of playback**: Whether a title begins playing on its own as soon as you open it.
- **Automatic five-second rewind**: Whether the app steps back a few seconds when you return to a paused title, so you can pick up the thread.
- **Skippable content**: Whether extras such as page numbers, footnotes, and sidebars are read aloud or skipped.
- **Verbosity** and **Silence button beeps**: How much spoken feedback and how many tones the controls produce. Turn these down for a quieter experience.
- A **Restore defaults** choice returns all audio settings to how they started.

18.9.2 Account Settings

- These cover your BARD account and storage. From here you can see where your downloads are stored. There is also an application reset, which erases all BARD Mobile books, magazines, and settings from the device and signs you out; use it only if you really mean to start over.

18.10 A Few Tips

- Downloads need a working internet connection. Wi-Fi is simplest.
- If you plan to reorganize your shelf into your own folders, do it once your titles are downloaded, since new downloads land in the standard folders by type.
- Speed and tone changes made while reading affect only the open title. Change the defaults in **Settings** if you want every title to sound the same way.
- For anything this section does not cover, or for the most current details about the BARD collection and your account, refer to the official BARD Mobile for Android user guide from the National Library Service, on which this adaptation is based.

19 [Settings](#)

The **Settings** group contains options for changing device behavior, screen reader feedback, speech settings, wireless connections, date and time, and voice management.

Use Settings when you want to configure how Orbit Speak works.

19.1 Opening settings

To open Settings, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to **Settings**.
3. Press **Select (Dot 8)**, or press **S (Dots 2 3 4)**, the first letter for Settings on the Home Screen.

The Settings group opens.

The Settings group contains the following items:

1. **Device Settings**
2. **Screen Reader Settings**
3. **Voice Manager: Google**
4. **Voice Manager: Vocalizer**
5. **Voice Manager for Runa TTS**

Use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 1)** keys to move through the list.

Press **Select (Dot 8)** to open the focused item. Each item also supports first-letter navigation you can type on the Perkins keyboard:

- **Device Settings — D (Dots 1 4 5)**
- **Screen Reader Settings — S (Dots 2 3 4)**
- **Voice Manager: Google — V (Dots 1 2 3 6)**
- **Voice Manager: Vocalizer —** type its first letter
- **Voice Manager for Runa TTS —** type its first letter

To return to the Home Screen, press **Left Arrow (Space + Dot 3)**.

19.2 Device settings

Device Settings contain general options for Orbit Speak.

Use Device Settings when you want to change device behavior, wireless settings, date and time, language, and startup behavior.

To open Device Settings, do the following:

1. Open **Settings**.
2. Navigate to **Device Settings**.
3. Press **Select** or press **D** (Dots 1 4 5).

Device Settings contain the following sections:

- **General Settings — G** (Dots 1 2 4 5)
- **Wi-Fi Settings — W** (Dots 2 4 5 6)
- **Bluetooth Settings — B** (Dots 1 2)
- **Date and Time Settings — D** (Dots 1 4 5)

Use the **Up Arrow** and **Down Arrow** keys to move through the sections.

Press **Select** to open the focused section.

Press **Left Arrow** to return to the Settings group.

19.3 General settings

General Settings contains general device behavior options.

To open General Settings, do the following:

1. Open **Settings**.
2. Open **Device Settings**.
3. Navigate to **General Settings**.
4. Press **Select** or press **G** (Dots 1 2 4 5).

General Settings is a dialog and can include the following options:

- **Airplane Mode**
- **Wi-Fi**
- **Bluetooth**
- **Sleep Timeout When Not in Use**
- **Media Sleep Timeout**
- **Startup Application**
- **Language**
- **Braille settings** — type its first letter

Use **Tab** (Space + Dots 4 5) and **Shift + Tab** (Space + Dots 1 2) to move between the controls in this dialog.

When a control is a combo box or adjustable setting, use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to change its value.

Press **Select (Dot 8)** to check or uncheck a checkbox, open a setting, or activate a focused button.

Press **Left Arrow** to return to Device Settings.

Airplane Mode

Airplane Mode turns wireless communication off.

When Airplane Mode is on, Wi-Fi and Bluetooth are disabled.

Use this setting when you want to turn off wireless features quickly.

Wi-Fi

This setting turns Wi-Fi on or off.

Wi-Fi must be on when using features that require the internet, such as online libraries, podcasts, internet radio, weather, software updates, and voice managers.

Bluetooth

This setting turns Bluetooth on or off.

Use Bluetooth when connecting supported wireless devices or accessories.

Sleep Timeout When Not in Use

Sleep Timeout When Not in Use controls how long Orbit Speak waits before going to sleep when the device is not being used.

Choose a shorter timeout to save battery power.

Choose a longer timeout if you do not want the device to sleep quickly while you are not pressing keys.

Media Sleep Timeout

Media Sleep Timeout controls sleep behavior while media is playing.

Use this setting when you want Orbit Speak to stop or sleep after a selected amount of time while playing media.

Startup Application

Startup Application controls what opens after Orbit Speak starts.

The default startup application is **Home Screen**.

You can choose the Home Screen or one of the available Orbit Speak applications.

When a different application is selected, Orbit Speak opens that application after the device starts.

This setting applies after device startup. It does not change the behavior when waking the device from sleep.

Language

Language controls the device language.

Changing the language affects the language used by Orbit Speak menus, messages, dialogs, and settings.

Braille settings

Braille settings let you select the Braille table you want to work with while entering text in the editor application, as well as when opening or saving Braille files.

Braille settings open as a dialog. Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls. When focus is on the combo box that contains the list of Braille tables, use the **Up Arrow** and **Down Arrow** keys to choose a table.

Press **Dot 8** or **select**, or activate the **OK** button, to save the change.

To close the dialog without changing the selected Braille table, activate the **Cancel** button, or press **Space + Dots 1 3 5 6**.

Please note that only English Braille tables are supported.

19.4 Wi-Fi settings

Wi-Fi Settings allows you to connect Orbit Speak to a wireless network.

Wi-Fi Settings open as a dialog.

To open Wi-Fi Settings, do the following:

1. Open **Settings**.
2. Open **Device Settings**.
3. Navigate to **Wi-Fi Settings**.
4. Press **Select** or press **W (Dots 2 4 5 6)**.

Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the dialog controls.

When focus is inside a list, use the **Up Arrow (Space + Dot 1)** and **Down Arrow (Space + Dot 4)** keys to move between items in that list.

Press **Select (Dot 8)** to activate the focused button or selected item.

To close the dialog, press **Space + Dots 1 3 5 6**.

If Wi-Fi is disabled, focus lands on the **Enable Wi-Fi** button.

Press **Select** on **Enable Wi-Fi** to turn Wi-Fi on.

When Wi-Fi is enabled, Orbit Speak searches for available networks.

A tone or message indicates that Orbit Speak is searching.

After the search finishes, the available networks are shown in the dialog.

Connecting to a Wi-Fi Network

To connect to a Wi-Fi network, do the following:

1. Open **Wi-Fi Settings**.
2. If Wi-Fi is disabled, press **Select** on **Enable Wi-Fi**.
3. Move to the networks list with **Tab**.
4. Use the **Up Arrow** and **Down Arrow** keys to move through the available networks.
5. Press **Select** on the network you want.

A list of actions opens.

1. Navigate to **Connect**.
2. Press **Select**.

If the network requires a password, a password edit box opens.

1. Enter the Wi-Fi password on the Perkins keyboard.
2. Move to **OK** with **Tab**.
3. Press **Select**.

Orbit Speak attempts to connect to the network.

If the connection succeeds, Orbit Speak speaks a confirmation message.

If the connection fails, Orbit Speak speaks an error message.

Wi-Fi Network Actions

When focus is on a Wi-Fi network, press **Select** to open the available actions.

The actions can include:

- **Disable Wi-Fi**
- **Refresh Network List**
- **Connect**
- **Disconnect**, when connected
- **Forget**, when the network is saved
- **Close**

Disconnecting from Wi-Fi

To disconnect from a connected Wi-Fi network, do the following:

1. Open **Wi-Fi Settings**.
2. Move to the connected network.

3. Press **Select**.
4. Navigate to **Disconnect**.
5. Press **Select**.

Orbit Speak disconnects from the network.

Forgetting a Wi-Fi Network

To forget a saved Wi-Fi network, do the following:

1. Open **Wi-Fi Settings**.
2. Move to the saved network.
3. Press **Select**.
4. Navigate to **Forget**.
5. Press **Select**.

The network information saved is removed.

If you want to connect to the network again later, you must enter the password again.

Refreshing the Network List

To search for available networks again, choose **Refresh Network List**.

Use this option if the network you want does not appear, or if you moved to a different location.

Disabling Wi-Fi

To turn Wi-Fi off, choose **Disable Wi-Fi** from the Wi-Fi Settings dialog.

When Wi-Fi is disabled, internet features are not available.

19.5 Bluetooth settings

Bluetooth Settings allows you to turn Bluetooth on or off and manage supported Bluetooth connections.

Bluetooth Settings opens as a dialog.

To open Bluetooth Settings, do the following:

1. Open **Settings**.
2. Open **Device Settings**.
3. Navigate to Bluetooth Settings.
4. Press Select or press B (Dots 1 2).

Use Tab (Space + Dots 4 5) and Shift + Tab (Space + Dots 1 2) to move between the dialog controls.

When focus is inside a list, use the Up Arrow and Down Arrow keys to move between items in that list.

Press **Select** to activate the focused button or selected item.

To close the dialog, press **Space + Dots 1 3 5 6**.

If Bluetooth is disabled, focus lands on the **Enable Bluetooth** button.

Press **Select** on **Enable Bluetooth** to turn Bluetooth on.

When Bluetooth is enabled, Orbit Speak can search for supported Bluetooth devices.

Managing Bluetooth Devices

To manage a Bluetooth device, do the following:

1. Open **Bluetooth Settings**.
2. If Bluetooth is disabled, press **Select** on **Enable Bluetooth**.
3. Move to the devices list with **Tab**.
4. Use the **Up Arrow** and **Down Arrow** keys to move through the available or saved devices.
5. Press **Select** on the device you want.

A list of available actions opens.

The actions can include:

- **Disable Bluetooth**
- **Refresh Device List**
- **Connect**
- **Disconnect**, when connected
- **Forget** or **remove**, when the device is saved
- **Close**

The exact actions depend on the selected device and connection state.

Disabling Bluetooth

To turn Bluetooth off, choose **Disable Bluetooth** from the Bluetooth Settings dialog.

When Bluetooth is disabled, Bluetooth connections are not available.

19.6 Date and Time settings

Date and Time Settings allows you to configure the device date, time, time zone, and related options.

To open Date and Time Settings, do the following:

1. Open **Settings**.
2. Open **Device Settings**.

3. Navigate to **Date and Time Settings**.
4. Press **Select** or press **D (Dots 1 4 5)**.

Date and Time Settings can include options such as:

- **Set Time**
- **Set Date**
- **Time Zone**
- **Time Format**
- **Automatic Date and Time**, if available

Date and Time Settings is a dialog. Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

Use the **Up Arrow** and **Down Arrow** keys to change combo box values.

Press **Select** to open a setting, check or uncheck a checkbox, or activate a focused button.

Correct date and time settings are important for alarms, calendar events, file dates, downloaded content, weather, and online services.

19.7 Screen Reader Settings

Screen Reader Settings contain speech, text-to-speech, and screen reader feedback options.

To open Screen Reader Settings, do the following:

1. Open **Settings**.
2. Navigate to **Screen Reader Settings**.
3. Press **Select** or press **S (Dots 2 3 4)**.

Screen Reader Settings contains the following options:

1. **General Settings — G (Dots 1 2 4 5)**
2. **Select TTS Engine — S (Dots 2 3 4)**

Use the **Up Arrow** and **Down Arrow** keys to move through the list.

Press **Select** to open the focused option.

Press **Left Arrow** to return to the Settings group.

19.8 Screen Reader General Settings

Screen Reader General Settings contains general screen reader feedback options.

To open Screen Reader General Settings, do the following:

1. Open **Settings**.
2. Open **Screen Reader Settings**.
3. Navigate to **General Settings**.
4. Press **Select** or press **G (Dots 1 2 4 5)**.

General Settings is a dialog and can include options such as:

- **Read Widget Roles**
- **Read Position Information**
- **Typing Echo**
- **Capitalization Alert**
- **Control Type Announcement**
- **Speak Hints**

Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

Use the **Up Arrow** and **Down Arrow** keys to change adjustable settings or combo box values.

Press **Select (Dot 8)** to check or uncheck a checkbox, open a setting, or activate a focused button.

Press **Left Arrow** to return to Screen Reader Settings.

Read Widget Roles

Read Widget Roles controls whether Orbit Speak speaks the type of focused control.

For example, Orbit Speak can announce whether the focused item is a button, edit box, checkbox, combo box, or list item.

Read Position Information

Read Position Information Controls whether Orbit Speak speaks the position of items in lists.

For example, Orbit Speak can speak “1 of 11” when focus is on the first item in a list of eleven items.

Typing Echo

Typing Echo controls what Orbit Speak speaks while you type.

Depending on the available options, Orbit Speak can speak characters, words, both characters and words, or no typing echo.

Capitalization Alert

Capitalization Alert controls how Orbit Speak indicates capital letters.

Use this setting if you want capital letters to be announced or indicated while typing or reading.

Control Type Announcement

Control Type Announcement controls whether Orbit Speak announces control types.

If **Read Widget Roles** is also available, use the setting name shown on your device.

Speak Hints

Speak Hints controls whether Orbit Speak speaks extra help information for controls.

Hints can be useful when learning the device.

Turning hints off can make speech shorter after you are familiar with the interface.

19.9 Select TTS Engine

Select TTS Engine contains text-to-speech engine and voice settings.

Use Select TTS Engine when you want to choose the speech engine, language, voice, rate, pitch, and speech volume.

To open Select TTS Engine, do the following:

1. Open **Settings**.
2. Open **Screen Reader Settings**.
3. Navigate to **Select TTS Engine**.
4. Press **Select** or press **S (Dots 2 3 4)**.

Select TTS Engine can include the following options:

- **Speech Engine**
- **Language**
- **Voice**
- **Speech Rate**
- **Pitch**
- **Speech Volume**
- **Main Volume**

Select TTS Engine is a dialog. Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

Use the **Up Arrow** and **Down Arrow** keys to change adjustable settings or combo box values.

Press **Select** to check or uncheck a checkbox, open a setting, or activate a focused button.

Press **Left Arrow** to return to Screen Reader Settings.

Speech Engine

Speech Engine controls which text-to-speech engine Orbit Speak uses. On the **Speech Engine** combo box, use the **Up Arrow** and **Down Arrow** keys to choose **Runa TTS**, **Google**, or **Vocalizer**.

Available engines depend on the voices and engines installed on your device.

Language

Language controls the speech language used by the selected speech engine.

Choose the language that matches the voice you want to use.

Voice

Voice controls which voice is used for speech.

The available voices depend on the selected speech engine and language.

If you install additional voices using a Voice Manager, restart Orbit Speak before selecting the new voices.

Speech Rate

Speech Rate controls how fast Orbit Speak speaks.

Choose a slower rate if speech is difficult to understand.

Choose a faster rate if you want information to be spoken more quickly.

You can also change speech rate from anywhere using the speech rate shortcut commands, **Space + F1** and **Space + F4**.

Pitch

Pitch controls the tone of the selected voice, if supported by the speech engine.

Some voices or speech engines may not support pitch changes.

Speech Volume

Speech Volume controls the volume of speech feedback.

This setting affects the voice used by Orbit Speak for screen reader feedback.

Main Volume

Main Volume controls the overall device volume.

This can affect speech, tones, and media, depending on the current application and audio output.

19.10 Voice Manager for Runa TTS

Voice Manager for Runa TTS allows you to install and manage the various voices available for the Vocalizer-based Runa TTS on Orbit Speak. This application is designed to be simple and easy to operate.

Use this application when you want to add more Runa TTS voices or remove Runa TTS voices you no longer need.

Voice Manager requires an active internet connection to retrieve and install voices.

Opening Voice Manager for Runa TTS

To open Voice Manager for Runa TTS, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to **Settings** or press **S (Dots 2 3 4)**.
3. Press **Select**.
4. Navigate to **Voice Manager for Runa TTS** or type its first letter.
5. Press **Select**.

When Voice Manager opens, Orbit Speak plays a tone and announces that voices are being fetched from the internet. Wait until the voice list is loaded.

Voice Manager Layout

Voice Manager contains the following controls:

- **Language** combo box
- **Voices** list
- **Install** button
- **Remove Voice** button, when an installed voice is selected
- **Close** button

When the application opens, focus is set to the **Language** combo box. The default value is **All Languages**. When **All Languages** are selected, voices for all available languages are shown.

The **Voices** list shows available and installed voices. Installed voices are always shown at the top of the list, making it easy to distinguish installed voices from those available for installation.

Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

Filtering Voices by Language

To filter voices by language, do the following:

1. Move to the **Language** combo box.
2. Press the **Up Arrow (Space + Dot 1)** or **Down Arrow (**Space Dot 1**)** key to choosing a language.

The voices list updates based on the selected language.

Choose **All Languages** to show voices for all available languages.

Installing Voices

You can install one voice or select several voices and install them together.

To select voices for installation, do the following:

1. Move to the **Voices** list with **Tab**.
2. Use the **Up Arrow** and **Down Arrow** keys to move through the voices.
3. Move to the voice you want to install.
4. Press **Select (Dot 8)** to select the voice.

To select more than one voice, repeat these steps for each voice you want to install.

1. Move to **Install** with **Tab**.
2. Press **Select**.

Orbit Speak downloads and installs the selected voices.

During installation, Orbit Speak speaks progress messages.

When installation finishes, Orbit Speak speaks a success message or an error message.

After voices are installed, Orbit Speak must be restarted before the new voices can be used. A dialog appears and asks whether you want to restart now.

- Choose **Yes** to restart Orbit Speak immediately.
- Choose **No** to continue using the device and restart later.

If you choose **No**, the installed voices become available after you restart the device.

Using an Installed Voice

After installing a voice and restarting the device, choose the voice from the appropriate speech settings.

To use a Runa TTS voice as the main system voice, open **Select TTS Engine**, choose Runa TTS as the speech engine if needed, then select the language and voice you want.

To use a Runa TTS voice for Book Reader only, open **Book Reader Speech Options**, choose Runa TTS as the speech engine if needed, then select the language and voice you want.

Removing Voices

To remove an installed voice, do the following:

1. Open **Voice Manager for Runa TTS**.
2. Move to the **Voices** list with **Tab**.
3. Navigate to the installed voice you want to remove with the **Up Arrow** and **Down Arrow** keys.
4. Press **Select** to select the voice.
5. Move to **Remove Voice** with **Tab**.
6. Press **Select**.

Orbit Speak removes the selected voice.

When removal finishes, Orbit Speak speaks a success message or an error message.

Closing Voice Manager for Runa TTS

To close to the Voice Manager, move to **Close** and press **Select**, or press **Space + Dots 1 3 5 6**.

19.11 Voice Manager: Google

Voice Manager: Google allows you to install and remove Google text-to-speech voices on Orbit Speak.

Use this application when you want to add more Google voices or remove Google voices you no longer need.

Voice Manager requires an active internet connection to retrieve and install voices.

Opening Voice Manager: Google

To open **Voice Manager: Google**, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to **Settings** or press **S (Dots 2 3 4)**.
3. Press **Select**.
4. Navigate to **Voice Manager: Google** or press **V (Dots 1 2 3 6)**.
5. Press **Select**.

When Voice Manager opens, Orbit Speak retrieves the list of available voices from the internet. A tone or message indicates that the voice list is being fetched.

Wait until the voice list is loaded.

Voice Manager Layout

Voice Manager contains the following controls:

- **Language** combo box
- **Voices** list
- **Install** button
- **Remove Voice** button, when an installed voice is selected
- **Close** button

Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

The **Language** combo box lets you filter the voices list by language.

The default value is **All Languages**. When **All Languages** are selected, voices for all available languages are shown.

The **Voices** list shows available and installed voices. Installed voices are shown at the top of the list.

Filtering Voices by Language

To filter voices by language, do the following:

1. Move to the **Language** combo box.
2. Press the **Up Arrow** or **Down Arrow** key to choose a language.

The voices list updates based on the selected language.

Choose **All Languages** to show voices for all available languages.

Installing Voices

You can install one voice or select several voices and install them together.

To select voices for installation, do the following:

1. Move to the **Voices** list with **Tab**.
2. Use the **Up Arrow** and **Down Arrow** keys to move through the voices.
3. Move to the voice you want to install.
4. Press **Select** to select the voice.

To select more than one voice, repeat these steps for each voice you want to install.

1. Move to **Install** with **Tab**.
2. Press **Select**.

Orbit Speak downloads and installs the selected voices.

During installation, Orbit Speak speaks progress messages.

When installation finishes, Orbit Speak speaks a success message or an error message.

After voices are installed, Orbit Speak must be restarted before the new voices can be used. A dialog appears and asks whether you want to restart now.

- Choose **Yes** to restart Orbit Speak immediately.
- Choose **No** to continue using the device and restart later.

If you choose **No**, the installed voices become available after you restart the device.

Using an Installed Voice

After installing a voice and restarting the device, choose the voice from the appropriate speech settings.

To use a Google voice as the main system voice, open **Select TTS Engine**, choose Google as the speech engine if needed, then select the language and voice you want.

To use a Google voice for Book Reader only, open **Book Reader Speech Options**, choose Google as the speech engine if needed, then select the language and voice you want.

Removing Voices

To remove an installed voice, do the following:

1. Open **Voice Manager: Google**.
2. Move to the **Voices** list with **Tab**.
3. Navigate to the installed voice you want to remove.
4. Press **Select** to select the voice.
5. Move to **Remove Voice** with **Tab**.
6. Press **Select**.

Orbit Speak removes the selected voice.

When removal finishes, Orbit Speak speaks a success message or an error message.

Closing Voice Manager: Google

To close to the Voice Manager, move to **Close** and press **Select**, or press **Space + Dots 1 3 5 6**.

19.12 Voice Manager: Vocalizer

Voice Manager: Vocalizer allows you to install and remove Vocalizer text-to-speech voices on Orbit Speak.

Use this application when you want to add more Vocalizer voices or remove Vocalizer voices you no longer need.

Voice Manager requires an active internet connection to retrieve and install voices.

Opening Voice Manager: Vocalizer

To open Voice Manager: Vocalizer, do the following:

1. Press **Space + Dots 1 2 3 4 5 6** to go to the Home Screen.
2. Navigate to **Settings** or press **S (Dots 2 3 4)**.
3. Press **Select**.
4. Navigate to **Voice Manager: Vocalizer** or type its first letter.
5. Press **Select**.

When Voice Manager opens, Orbit Speak retrieves the list of available voices from the internet. A tone or message indicates that the voice list is being fetched.

Wait until the voice list is loaded.

Voice Manager Layout

Voice Manager contains the following controls:

- Language combo box
- Voices list

- Install button
- Remove Voice button, when an installed voice is selected
- Close button

Use **Tab (Space + Dots 4 5)** and **Shift + Tab (Space + Dots 1 2)** to move between the controls.

The Language combo box lets you filter the voices list by language.

The default value is All Languages. When All Languages are selected, voices for all available languages are shown.

The Voices list shows available and installed voices. Installed voices are shown at the top of the list.

Filtering Voices by Language

To filter voices by language, do the following:

1. Move to the Language combo box.
2. Press the **Up Arrow** or **Down Arrow** key to choose a language.

The voices list updates based on the selected language.

Choose All Languages to show voices for all available languages.

Installing Voices

You can install one voice or select several voices and install them together.

To select voices for installation, do the following:

1. Move to the Voices list with **Tab**.
2. Use the **Up Arrow** and **Down Arrow** keys to move through the voices.
3. Move to the voice you want to install.
4. Press **Select** to select the voice.

To select more than one voice, repeat these steps for each voice you want to install.

1. Move to Install with **Tab**.
2. Press **Select**.

Orbit Speak downloads and installs the selected voices.

During installation, Orbit Speak speaks progress messages.

When installation finishes, Orbit Speak speaks a success message or an error message.

After voices are installed, Orbit Speak must be restarted before the new voices can be used. A dialog appears and asks whether you want to restart now.

- Choose Yes to restart Orbit Speak immediately.

- Choose No to continue using the device and restart later.

If you choose No, the installed voices become available after you restart the device.

Using an Installed Voice

After installing a voice and restarting the device, choose the voice from the appropriate speech settings.

To use a Vocalizer voice as the main system voice, open Select TTS Engine, choose Vocalizer as the speech engine if needed, then select the language and voice you want.

To use a Vocalizer voice for Book Reader only, open Book Reader Speech Options, choose Vocalizer as the speech engine if needed, then select the language and voice you want.

Removing Voices

To remove an installed voice, do the following:

1. Open Voice Manager: Vocalizer.
2. Move to the Voices list with **Tab**.
3. Navigate to the installed voice you want to remove.
4. Press **Select** to select the voice.
5. Move to Remove Voice with **Tab**.
6. Press **Select**.

Orbit Speak removes the selected voice.

When removal finishes, Orbit Speak speaks a success message or an error message.

Closing Voice Manager: Vocalizer

To close to the Voice Manager, move to Close and press **Select**, or press **Space + Dots 1 3 5 6**.

19.13 Closing Settings

To move one level higher in Settings, press **Left Arrow (Space + Dot 3)**.

To return to the Home Screen, press **Space + Dots 1 2 3 4 5 6**.

20 [Help](#)

The Help folder is the last option located on the Home Screen after Settings. As the name suggests, it contains useful information for when you get confused with the device or you just want to know more about your device.

To go to the Help folder, press **Space + Dots 1 2 3 4 5 6** to come back to the Home Screen. Press the **Down Arrow (Space + Dot 4)** until you hear “Help folder,” or press **H (Dots 1 2 5)**, the first letter for this item. Press **Select (Dot 8)** to open the folder.

Here are the options you will find inside the Help folder:

1. **User guide — U (Dots 1 3 6)**: This option opens the pre-installed user guide in the Book Reader application. You can play it anytime you want by coming here and pressing on the option.
2. **About — A (Dot 1)**: This option contains all the technical information about the device, such as serial number, application version, and firmware.

21 [Remote Mode](#)

In Remote Mode, Orbit Speak works as a braille display and braille keyboard for another device, such as a phone, tablet, or computer. You read the host's screen in braille and type and navigate using the Perkins keyboard and the navigation keys.

In Remote Mode, Orbit Speak emulates the Orbit Writer. To a connected host and its screen reader, Orbit Speak appears as an Orbit Reader 20 followed by the last four digits of its serial number, for example "Orbit Reader 20 1234". All of the Orbit Writer connection instructions apply to Orbit Speak in Remote Mode.

When you use Orbit Speak as a keyboard and display for another device, the screen reader on that device provides the braille translation and other braille settings. Consult the documentation for your screen reader.

Supported hosts and screen readers include Windows (JAWS, NVDA, SuperNova, and Narrator), Mac and iOS (VoiceOver), Android (TalkBack braille, BRLTTY, Our Braille, and Amazon VoiceView), and Chromebook (ChromeVox).

21.1 Opening Remote Mode

Return to the Home Screen by pressing Space + Dots 1 2 3 4 5 6, move to Remote Mode with the Up and Down Arrow keys, and press Select to open it. You can also switch to a channel directly with its activation command, described below, without opening the Remote Mode screen first.

21.2 Channels of Communication

Orbit Speak provides six channels: five Bluetooth channels and one USB channel. Only one channel is active at a time; the others stay in standby. Orbit Speak sends your keypresses to the device connected on the active channel. Activate a channel with its command:

- **Channel 1 (Bluetooth)** — Space + Left Arrow + Dot 1
- **Channel 2 (Bluetooth)** — Space + Left Arrow + Dot 2
- **Channel 3 (Bluetooth)** — Space + Left Arrow + Dot 3
- **Channel 4 (Bluetooth)** — Space + Right Arrow + Dot 4

- **Channel 5 (Bluetooth)** — Space + Right Arrow + Dot 5
- **Channel 6 (USB)** — Space + Right Arrow + Dot 6

When you switch to a channel, its status is indicated by a vibration pattern: three short pulses if no device is paired on the channel, two short pulses if a device is paired but not connected, and a single short pulse if a device is paired and connected.

21.3 Communication Protocols

Each channel uses a communication protocol. The five Bluetooth channels use Screen Reader Profile (SRP) or Keyboard-HID; the USB channel uses Orbit-HID or Braille-HID. The defaults are SRP for Bluetooth and Orbit-HID for USB, and for most situations you do not need to change them. Select a protocol with its command:

- **SRP (Bluetooth, default)** — Select + Dots 2 3 4 7
- **Keyboard-HID (Bluetooth)** — Select + Dots 1 3 7
- **Orbit-HID (USB, default)** — Select + Dots 1 3 5 7
- **Braille-HID (USB)** — Select + Dots 1 2 7
- **SRP (Screen Reader Profile):** Orbit Speak communicates as a braille device to the screen reader. What each key does depends on the screen reader. Most screen readers support SRP over Bluetooth.
- **Keyboard-HID:** Orbit Speak behaves like a standard Bluetooth QWERTY keyboard and talks directly to the host operating system rather than the screen reader. Use this when you want to type into a device as a keyboard.
- **Orbit-HID:** the default USB protocol, supported by screen readers such as NVDA, JAWS, Narrator, VoiceOver on Mac, BRLTTY on Android, and ChromeVox. It behaves like SRP but over USB.
- **Braille-HID:** the standard plug-and-play USB braille protocol. The screen reader detects Orbit Speak automatically with no manual display selection. It is supported by VoiceOver on Mac, by NVDA, and by JAWS 2026 and later.

Note: After activating the Keyboard-HID protocol on a Bluetooth channel, turn off Bluetooth on any previously paired iOS or Mac devices on other channels before enabling pairing on the desired channel.

21.4 Pairing a Device

To use Orbit Speak wirelessly, first pair it with the host over a Bluetooth channel:

- Activate the desired Bluetooth channel with its command, for example Space + Left Arrow + Dot 1 for channel 1.
- If the protocol you want is not already active, select it. SRP is the default for Bluetooth channels.

- Press and hold the same channel-activation keys for three seconds to enable pairing. Orbit Speak responds with a single short pulse. Enabling pairing forgets any device previously paired on that channel.
- On the host, start a Bluetooth scan and select "Orbit Reader 20 XXXX", where XXXX is the last four digits of the serial number on the back of the unit.
- Orbit Speak responds with a single short pulse when pairing succeeds, or two long pulses if it fails. If no pairing request arrives within three minutes, pairing is disabled automatically.

Forget the devices on all channels: press and hold Space + Down Arrow for three seconds. This forgets the paired device on all five Bluetooth channels and restores every channel to the default SRP protocol.

Reconnecting: at power on, Orbit Speak reconnects to the device on the last active channel, using the same protocol.

21.5 Connecting to a Host

21.5.1 iOS (VoiceOver)

Over Bluetooth with SRP: turn on VoiceOver on the iOS device (Settings > Accessibility > VoiceOver). On Orbit Speak, activate a Bluetooth channel and, if it is not already active, select SRP (Select + Dots 2 3 4 7). Hold the channel keys for three seconds to enable pairing. On the iOS device, go to Settings > Accessibility > VoiceOver > Braille and select "Orbit Reader 20 XXXX" to pair.

Over USB: activate the USB channel (Space + Right Arrow + Dot 6) and the Braille-HID protocol (Select + Dots 1 2 7), then connect the cable. VoiceOver detects the display automatically. For best results, use iOS 17 or later.

As a keyboard: to use Orbit Speak as a plain keyboard instead of through VoiceOver, select Keyboard-HID (Select + Dots 1 3 7), enable pairing, and pair from Settings > Bluetooth. Orbit Speak then connects directly to iOS as a keyboard.

21.5.2 Mac (VoiceOver)

Over USB: activate the USB channel (Space + Right Arrow + Dot 6) and the Braille-HID protocol (Select + Dots 1 2 7). Turn on VoiceOver with Command + F5, then connect the cable. VoiceOver recognizes the display automatically. For best results, use macOS 15 or later.

Over Bluetooth with SRP: activate a Bluetooth channel and SRP, then hold the channel keys for three seconds to enable pairing. With VoiceOver on, open VoiceOver Utility (VO + F8), choose Braille > Displays > Add (+), and select "Orbit Reader 20 XXXX".

21.5.3 Android

On current Android versions, TalkBack includes built-in braille support, which is the recommended way to use Orbit Speak with Android. Orbit Speak also works with BRLTTY (Bluetooth or USB) and the Our Braille app.

Over Bluetooth with SRP: turn on Bluetooth on the Android device. On Orbit Speak, activate a Bluetooth channel and, if needed, SRP (Select + Dots 2 3 4 7), then hold the channel keys for three seconds to enable pairing. Scan for and pair with "Orbit Reader 20 XXXX". Open Accessibility settings and turn on TalkBack braille (or Our Braille). TalkBack then detects the display automatically.

Over USB: activate the Braille-HID protocol on the USB channel and connect the cable. TalkBack detects the display automatically.

21.5.4 Chromebook (ChromeVox)

Over USB: activate the USB channel (Space + Right Arrow + Dot 6) and the Orbit-HID protocol (Select + Dots 1 3 5 7), then plug in the cable. After a few seconds the Chromebook detects the device and turns on ChromeVox.

Over Bluetooth with SRP: activate a Bluetooth channel and SRP, enable pairing, then pair with "Orbit Reader 20 XXXX" from the Chromebook Bluetooth settings. Turn ChromeVox on with Ctrl + Alt + Z.

21.5.5 Windows: NVDA

NVDA automatically recognizes Orbit Speak over USB and Bluetooth. For a USB connection, activate the Braille-HID protocol on the USB channel. If NVDA does not detect the display, open the NVDA menu > Preferences > Settings > Braille, choose the display, and click OK.

21.5.6 Windows: JAWS

JAWS 2026 and later support plug-and-play Braille-HID over USB: activate the USB channel and Braille-HID (Select + Dots 1 2 7), connect the cable, and start or restart JAWS. It detects the display automatically.

JAWS 2025 and earlier use Orbit-HID over USB (Select + Dots 1 3 5 7) and require adding the display manually: in JAWS, open Options > Braille, add a braille display, and select Orbit Reader 20. Bluetooth connections use this manual selection procedure on all JAWS versions.

22 Firmware Upgrade

22.1 Device Firmware Upgrade

New versions of the firmware for Orbit Speak are released from time to time, containing improvements, bug fixes, and new features. This section describes the procedure for updating the Orbit Speak firmware.

The firmware of Orbit Speak can be updated using a Windows PC and a USB cable. The USB upgrade method requires a Windows PC, but the upgrade process is simple and quicker.

There are two parts to the upgrade procedure:

1. Download the firmware package.
2. Upgrade the Orbit Speak

The process for downloading the firmware package is common for either upgrade method.

22.2 Download firmware package

1. Download the zip file "Orbit Speak - Firmware Upgrade Package vB0.00.00.XXrYY" to your PC from the link provided by Orbit Research.

When the download is complete, follow these steps:

2. Open the folder on your computer where the firmware zip file was downloaded. This is usually your Downloads folder.
3. Right-click on the file and choose "Extract all" OR select the file by arrowing it, pressing the application key and choosing "Extract All" from the Context menu.
4. Follow the dialog steps to extract the zip file to a folder of your choice.

When finished, your chosen folder should contain a folder named after the version of the release, for example, Orbit Speak - Firmware Upgrade Package vB0.00.00.XXrYY. Make a note of the location of this folder for use in the next section of this document.

For information about bugs, fixes, and additions to the software, see the latest version's Release Notes available in the folder.

 
22.3 Using the Windows PC Upgrade Utility

The following are required to perform the upgrade to the Orbit Speaker with a PC:


1. The Orbit Speak unit
2. Standard USB-A to Type-C USB cable
3. A PC running Windows XP or later.
4. The Orbit Writer - Firmware Upgrade Utility file found in the Orbit Speak folder (see Download firmware package). Although the utility used here is of orbit writer, there is no need to be confused. This utility is completely fine to use.
5. Orbit Speak Release Bin files found in the Orbit Speaker folder (see Download firmware package).

To upgrade the firmware, connect the Orbit Speaker to the PC using the USB cable.


In the Release folder on your PC, run the Orbit Writer - Firmware Upgrade Utility. If you receive an error message, see the Troubleshooting section. Assuming no errors, the program displays the message, "Note: Connect the device to the PC and put it into upgrade mode. To enter, Firmware Upgrade Mode, press and hold the 'Up' key + 'Dot 5' key. Then press and release the 'Dot 8' key. The other keys can be released after this" in the message field.

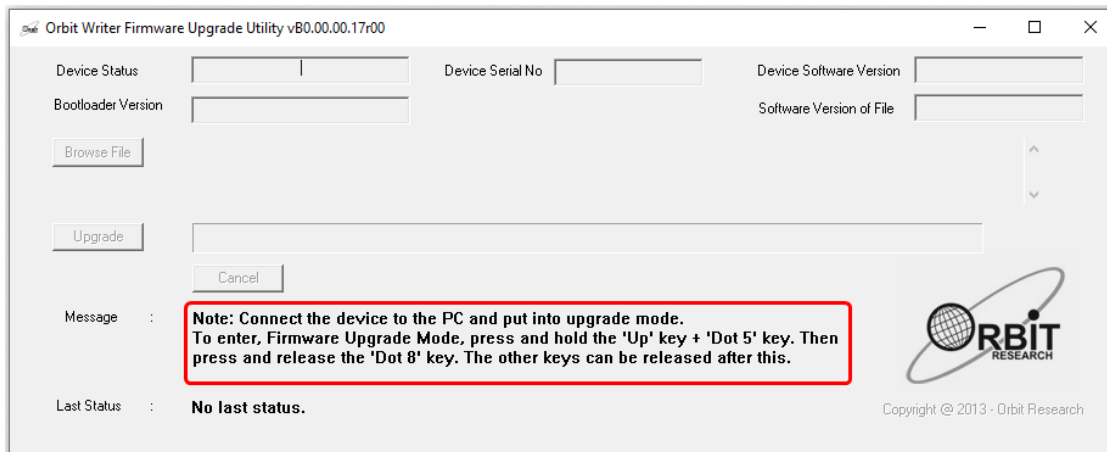

1. Press and hold down the Up-arrow key + Dot 5, then press and release Dot 8. The utility shows the message “Orbit Writer is connected” in the Device status field. It shows the message “Do you want to upgrade the device?” in the message field at the bottom of the dialog.
2. Release the Up-arrow key and Dot 5. This switches Orbit Speak to Upgrade mode. You should hear a tone on your PC.
3. The utility shows the device serial number and the software version of the device at the top right corner of the window. If the serial number is blank, repeat steps 4 and 5.
4. Activate the Browse button found in the dialog.
5. Browse and select the firmware bin file from your PC. The file is in the folder you unzipped previously.
6. Once the file is selected, the dialog shows the software version of the selected file. A dialog box will also display the information that the current file selected is firmware binary.

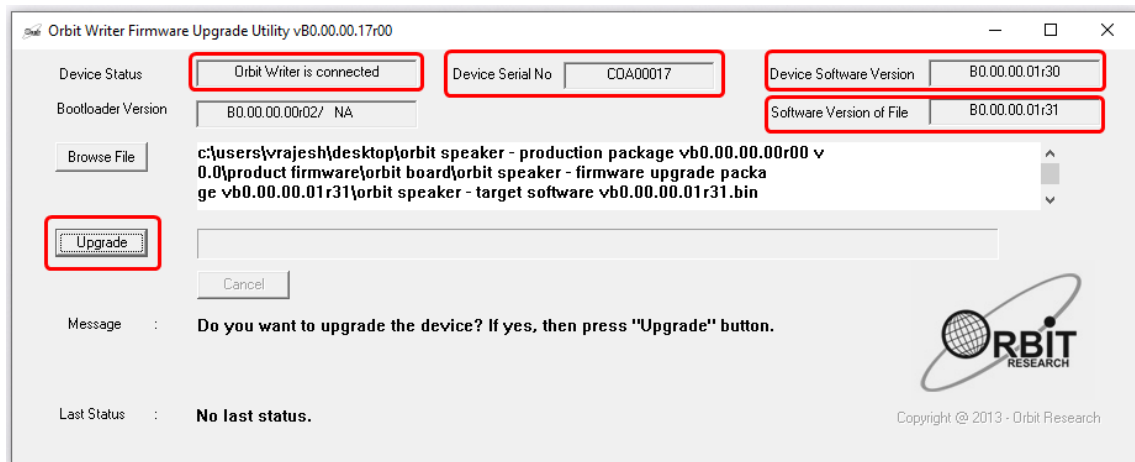 

 7. Activate the Upgrade button. The utility starts upgrading the device.

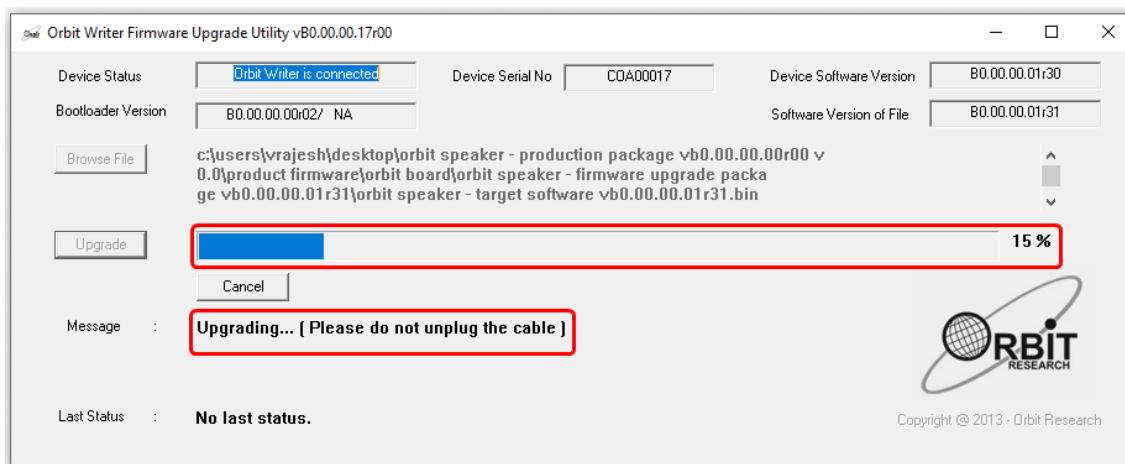

8. Do not unplug the cable. Wait for the message “Device upgrade has been completed” on the upgrade utility.
9. The Orbit Speak is upgraded. Turn on the Orbit Speak to start using the device.

To check for a successful upgrade of the Orbit Speak, open the Orbit Speak Menu to check the version. The version number of the firmware release should match the number shown in the upgrade utility.

23 [Troubleshooting](#)

Like all hardware devices, sometimes your Orbit Speak can exhibit strange or unexpected behavior. If it is the case, before calling our technical support, please perform the steps outlined in this section.

General suggestion: If your device has just finished booting, give it a few seconds to stabilize.

23.1 Orbit Speak Does Not Turn On

- Hard reset the Braille keyboard by pressing **Dot 8 + Up Arrow** and then trying to turn the device on again.
Note: This does not erase your settings nor any of your data, so this procedure is safe.
- Charge the device for at least 10 minutes, then try to turn it on.
- If the device does not speak, try raising the speech volume.

23.2 Orbit Speak Does Not Respond to Key Presses

- Make sure Orbit Speak is not in sleep mode. Press the Power button briefly to wake the device up. If it were in sleep mode, you would hear a usual raising tone and a speech message.
- Press the **Select** key. It might be that your device is stuck in some dialog, so thus you will make it leave this state.
- Try to go a step back or close the current application. In most cases **Space + Z (Space + Dots 1 3 5 6)** will do the job. If not, try returning straight to the home screen by pressing **Space + Dots 1 2 3 4 5 6**.

- Press **Dot 8 + Up Arrow** to hard reset the Braille keyboard, turn the device off if needed, then turn it on again.
Note: This does not erase your settings nor any of your data, so this procedure is safe.

23.3 Orbit Speak Is in an Unknown State and the Battery Is Charged

- Unplug the USB cable, if plugged in.
- Press **Dot 8 + Up Arrow** to hard reset the Braille keyboard.
Note: This does not erase your settings nor any of your data, so this procedure is safe.
- Press and hold the power button for two seconds. The device should start booting, and you should feel vibrations. Once the vibrations stop, try navigating by pressing the up and down arrow keys.
- When the vibrations finish, do not press any keys until you hear Orbit Speak announcing that you are on the home screen.

23.4 Orbit Speak is in an unknown state, the battery is charged, and the troubleshooting steps in 11.4 do not resolve the issue.

- Unplug the USB cable, if plugged in.
- Press **F4 + Up Arrow** and hold the keys for about 15 seconds to hard reset the Android system.
Note: This does not erase your settings nor any of your data, so this procedure is safe.
- Press and hold the Power button for two seconds. The device should start booting and you should feel vibrations.
- When the vibrations finish, do not press any keys until you hear Orbit Speak announcing that you are on the home screen.

23.5 Orbit Speak is Continuous Beeping

- Unplug the USB cable, if plugged in.
- Press **F4 + Up Arrow** and hold the keys for about 15 seconds to hard reset the Android system.
Note: This does not erase your settings nor any of your data, so this procedure is safe.
- Press **Dot 8 + Up Arrow** to hard reset the Braille keyboard.
Note: This does not erase your settings nor any of your data, so this procedure is safe.
- Do not press any keys until you hear Orbit Speak announcing that you are on the home screen.

24 Buzzer, Vibration and LED Indication

24.1 Buzzer and Vibration Indication

Sr. No	State	Indications
1	Power ON cycle start.	Two very short and then immediate single short vibrations.
2	Booting up.	First stage: one short pulse every 3 seconds. Second stage: one short pulse every 2 seconds. Third stage: one short pulse every 1 second. Final stage: one short pulse every 0.5 seconds.
3	Power OFF cycle start.	One short and then immediately two very short vibrations. This pattern loops for 7 seconds.
4	Booting down.	One short and then immediately two very short vibrations.
5	The charger plugs in during the OFF state of the unit.	One short vibration.
6	The charger plugs out during the OFF state of the unit.	One short vibration.
7	Mass storage mode enters.	Two short vibrations.
8	Mass storage mode exit.	Three short vibrations.
9	Sleep mode enters.	One short and then immediately single very short vibrations.
10	Sleep mode exit.	One very short and then immediately single short vibrations.
11	Error: Unit turns between 5-20 seconds after powering ON.	Single long buzzer indication.
12	Error: Unit turns OFF between 20-50 seconds after powering ON.	Two long buzzer indications.
13	Error: Unit turns OFF during the active/running condition.	Three short buzzer indications.
14	Error: Mass storage mode command applied while the wall charger is connected.	Two short buzzer indications.
15	Error: Mass storage mode command applied while the charger is not connected.	Single short buzzer indication.

24.2 LED Indication

The Orbit Speak has an LED light that provides visual feedback for different device states:

- When turning on the device from a powered-off state, the LED will briefly light up for one second before turning off. Shortly after, the device will vibrate, indicating the start of the boot process.
- When waking the device from sleep mode, the LED will turn on for one second before switching off, signaling that the device is now active.
- If the device is powered off and the charger is connected, the LED will turn on for one second and then turn off, indicating that charging has started.

25 Hardware Limited Warranty

Warranty obligations for Orbit Speak are limited to the terms set forth below:

Orbit Research warrants this hardware product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the purchase by the original purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received by Orbit Research LLC within the Warranty Period, at its option and to the extent permitted by law, Orbit Research will either:

Repair the product free of charge (or) replace it with a product that is manufactured from new or serviceable used parts and is at least functionally equivalent to the original product.

A replacement product or part assumes the remaining warranty of the original product or thirty (30) days from the date of replacement or repair, whichever provides longer coverage. Parts provided in fulfillment of its warranty obligation must be used in products for which the warranty service is claimed.

25.1 EXCLUSIONS AND LIMITATIONS

This Limited Warranty applies only to the hardware product manufactured by Orbit Research LLC that can be identified by the "Orbit Research" trademark, trade name, or logo affixed to it. Orbit Research is not responsible for damage arising from failure to follow instructions relating to the product's use.

This warranty does not apply in the following cases:

1. Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes.
2. Damage caused by operating the product outside the permitted or intended uses described by Orbit Research LLC
3. Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Orbit Research
4. A product or part that has been modified to alter functionality or capability without the written permission of Orbit Research

5. The serial number has been removed or defaced.

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, STATUTORY, EXPRESS, OR IMPLIED.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, ORBIT RESEARCH IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO, OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH THE ORBIT RESEARCH PRODUCT, AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS. ORBIT RESEARCH DISCLAIMS ANY REPRESENTATION THAT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS WARRANTY OR MAKE A PRODUCT EXCHANGE WITHOUT RISK TO OR LOSS OF PROGRAMS OR DATA.

26 CONSUMER PROTECTION LAWS

FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. Some countries, states, and provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty or condition may last, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by country, state, or province. This Limited Warranty is governed by and construed under the laws of the country in which the product purchase took place. ORBIT RESEARCH LLC., the warrantor under this Limited Warranty, is identified at the end of this document according to the country or region in which the product purchase took place.

27 OBTAINING WARRANTY SERVICE

Please access and review the online help resources referred to in the documentation accompanying this hardware product before seeking warranty service. If the product is still not functioning properly after making use of these resources, please send an e-mail to: techsupport@orbitresearch.com, for instructions on how to obtain warranty service. You must follow ORBIT RESEARCH warranty procedures.

ORBIT RESEARCH will maintain and use customer information in accordance with its Customer Privacy Policy.

If your product can store software programs, data, and other information, you should make periodic backup copies of the information contained on the product's hard drive or other storage media to protect the contents and as a precaution against possible operational failures. Before you deliver your product for warranty service, it is your responsibility to keep a separate backup copy of the contents and disable any security passwords. IT IS POSSIBLE THAT THE CONTENTS ON THE DEVICE BEING SERVICED WILL BE LOST OR REFORMATTED IN THE COURSE OF WARRANTY SERVICE, AND ORBIT RESEARCH IS NOT RESPONSIBLE FOR ANY DAMAGE TO OR LOSS OF PROGRAMS, DATA, OR OTHER INFORMATION CONTAINED ON THE MEDIA OR ANY PART OF THE PRODUCT SERVICED.

Your product will be returned to you configured as originally purchased, subject to applicable updates. You will be responsible for reinstalling all other software programs, data, and passwords. Recovery and reinstallation of software programs and user data are not covered under this Limited Warranty.

28 [FCC Information](#)

28.1 FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

28.2 FCC Caution

To ensure continued compliance follow the installation instructions and this device must be installed with a computer or peripheral device certified to comply with Part 15 of the FCC rules for Class B limits. Use shielded interface cables only. Use the power adapter that is supplied with the device to charge its internal battery pack.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

29 [Further Information](#)

For the latest information, specifications, troubleshooting tips, software upgrade instructions, care and use information, warranty information, and more detailed instructions, visit the Orbit Speak website at <https://www.orbitresearch.com/support/orbit-speak-support/>.

For further questions or concerns not covered in this User Guide, please contact the distributor from where you purchased your Orbit Speak.

30 [Appendix B: Keyboard Command Reference](#)

This appendix lists the Orbit Speak keyboard commands in one place. Some actions can be performed in more than one way; alternative commands are separated by a semicolon. A plus sign means the keys are pressed together.

30.1 Global and System Commands

Return to the Home Screen — **Space + Dots 1 2 3 4 5 6**

Open the context menu — **Space + M (Space + Dots 1 3 4)**

Close or exit the current application — **Space + Dots 1 3 5 6**

Go up one level or back, in menus — **Left Arrow (Space + Dot 3)**

Go up one level or back, in file and folder lists — **Dot 7**

Decrease speech rate — **Space + F1**

Increase speech rate — **Space + F4**

Decrease speech volume — **Dot 7 + F1**

Increase speech volume — **Dot 7 + F4**

Speak battery status — **Space + Dots 1 6**

Hard reset the Braille keyboard — **Dot 8 + Up Arrow**

Hard reset the Android system (hold about 15 seconds) — **F4 + Up Arrow**

30.2 Navigation

Up Arrow (previous item, move up) — **Space + Dot 1**

Down Arrow (next item, move down) — **Space + Dot 4**

Left Arrow (back, up one level) — **Space + Dot 3**

Right Arrow (forward) — **Space + Dot 6**

Select, activate, or confirm — **Select (or Dot 8)**

First-letter navigation — **Type the first letter of the item's name**

30.3 Book Reader (Reading) Commands

Start, pause, or resume reading — **Select (Dot 8)**

Choose the movement unit — **Up Arrow / Down Arrow**

Move by the selected movement unit — **Left Arrow / Right Arrow**

Decrease or increase Book Reader volume — **Dot 7 + F1 / Dot 7 + F4**

Decrease or increase reading speed — **Space + F1 / Space + F4**

Add a bookmark at the current position — **Dot 8 + B**

Find Next — **Dot 8 + F**

Find Previous — **Dot 7 + F**

Open the reading view context menu (Find, Go To, bookmarks) — **Space + M**

Close the book and return to the previous list — **Dot 7**

30.4 Editor Commands

Go to the next character — **Space + Dot 6; Right Arrow**

Go to the previous character — **Space + Dot 3; Left Arrow**

Go to the next word — **Space + Dot 5; Space + Right Arrow**

Go to the previous word — **Space + Dot 2; Space + Left Arrow**

Read the next line — **Space + Dot 4; Down Arrow**

Read the previous line — **Space + Dot 1; Up Arrow**

Move to the beginning of the line — **Space + Dots 1 3**

Move to the end of the line — **Space + Dots 4 6**

Move to the beginning of the document — **Space + Dots 1 2 3**

Move to the end of the document — **Space + Dots 4 5 6**

Insert a new line — **Select; Dot 8**

Delete the previous character (Backspace) — **Dot 7**

Delete the character under the cursor (Delete) — **Space + D (Space + Dots 1 4 5)**

Enable or disable selection mode — **Dots 1 2 8**

Copy selected text — **Dots 1 4 8**

Cut selected text — **Dots 1 3 4 6 8**

Paste text — **Dots 1 2 3 6 8**

Select all — **Dots 1 8**

Read the current line (press twice to spell) — **Space + Dots 1 4**

Read the current word (press twice to spell) — **Space + Dots 2 5**

Read the current character — **Space + Dots 3 6**

Read from the cursor to the end of the document — **Dots 1 2 4 5 8**

Read from the beginning of the document to the cursor — **Space + Dots 1 2 4 5 7**

Read the selected text — **Space + Dots 1 2 7**

Open the context menu — **Space + M (Space + Dots 1 3 4)**

Create a new document — **Dots 1 3 4 5 8**

Open a document — **Dots 1 3 5 8**

Save an existing document — **Dots 2 3 4 8**

Save a new or untitled document (Save As) — **Space + Dots 2 3 4**

Close the Editor application — **Space + Dots 1 3 5 6**

30.5 Remote Mode Commands

Activate remote channel 1, 2, or 3 (pairing mode) — **Space + Left Arrow + Dot 1 / Dot 2 / Dot 3**

Activate remote channel 4, 5, or 6 (pairing mode) — **Space + Right Arrow + Dot 4 / Dot 5 / Dot 6**

31 [Appendix A: Revision History](#)

Rev.	Date	Description of Changes	Author
0.1	26 th July 2024	Initial draft	Andre

0.2	6 th August 2024	- Added troubleshooting steps. - Updated the section on Settings to reflect the most recent software update, namely adding 24-hour format setting for time. - Reformulated some paragraphs for easier reading.	Andre
0.3	8 th August 2024	- spelling and grammar - removed extra spaces and font changes.	Andre
0.4	9 th August 2024	- Heading numbering - Formatting text - Alignment of bullet points - Accessibility checks - Refinements	Sandip & Harshil
0.5	24 th October 2024	Added Firmware upgrade steps	Vrajesh
0.6	4 th November 2024	- Update the Utilities menu contents. - Update the troubleshooting steps	Mohammad & Sandip
0.7	25 th November 2024	Added the Internet Radio contents	Mohammad & Sandip
0.8	29 th November 2024	- Formatting - Review	Adi & Sandip
0.9	24 th December 2024	- Added Voice recorder contents. - Review & Formatting	Mohammad & Sandip
0.10	30 th December 2024	- Voice Recorder Content Review - Formatting	Adi & Sandip
0.11	5 th February 2025	- Added Voice manager contents. - Added Reader Contents	Sandip & Mohammad
0.12	27 th February 2025	- Format the headings and Sub-headings. - Spell check and Grammar	Sandip
0.13	27 th February 2025	- Updated Media player and Internet Radio contents. - Added Podcasts contents. - Spell check and Grammar	Mohammad

0.14	27 th February 2025	• Updated Voice Recorder, Podcasts, Contacts and Firmware Upgrade sections. • Spell check and Grammar	Mohammad
0.15	6 th August 2025	• Updated Voice Recorder, Podcasts, Contacts and Firmware Upgrade sections. • Spell check and Grammar	Mohammad
0.16	17 th July 2026	• feature set into the Orbit Speak guide. Added General Navigation • Braille Reader, Newspapers, World Clock, Stopwatch, Countdown Timer, Weather, Contacts import/export, file protect and compress/extract, and Check for Updates. Expanded. • Media Player, Internet Radio, Podcasts, Book Reader, Voice, Recorder and Settings • All controls kept in Orbit Speak • Braille commands.	Adi